



data communications

Installation and Operation Manual

KVF.8

8-Channel Analog Voice Compression Module

KILOMUX-2100 MODULE

KVF.8

8-Channel Analog Voice Compression Module Installation and Operation Manual

Notice

This manual contains information that is proprietary to RAD Data Communications Ltd. ("RAD"). No part of this publication may be reproduced in any form whatsoever without prior written approval by RAD Data Communications.

Right, title and interest, all information, copyrights, patents, know-how, trade secrets and other intellectual property or other proprietary rights relating to this manual and to the KVF.8 and any software components contained therein are proprietary products of RAD protected under international copyright law and shall be and remain solely with RAD.

KVF.8 is a registered trademark of RAD. No right, license, or interest to such trademark is granted hereunder, and you agree that no such right, license, or interest shall be asserted by you with respect to such trademark.

You shall not copy, reverse compile or reverse assemble all or any portion of the Manual or the KVF.8. You are prohibited from, and shall not, directly or indirectly, develop, market, distribute, license, or sell any product that supports substantially similar functionality as the KVF.8, based on or derived in any way from the KVF.8. Your undertaking in this paragraph shall survive the termination of this Agreement.

This Agreement is effective upon your opening of the KVF.8 package and shall continue until terminated. RAD may terminate this Agreement upon the breach by you of any term hereof. Upon such termination by RAD, you agree to return to RAD the KVF.8 and all copies and portions thereof.

For further information contact RAD at the address below or contact your local distributor.

| | |
|---|---|
| International Headquarters RAD Data Communications Ltd. | U.S. Headquarters RAD Data Communications Inc. |
| 24 Raoul Wallenberg St. Tel Aviv 69719 Israel Tel: 972-3-6458181 Fax: 972-3-6498250 E-mail: rad@rad.co.il | 900 Corporate Drive Mahwah, NJ 07430 USA Tel: (201) 529-1100, Toll free: 1-800-444-7234 Fax: (201) 529-5777 E-mail: market@radusa.com |

Contents

Chapter 1. Introduction

| | |
|--|------|
| 1.1 OVERVIEW..... | 1-1 |
| Versions..... | 1-2 |
| System Compatibility Considerations..... | 1-2 |
| Applications..... | 1-3 |
| Features..... | 1-6 |
| Test and Diagnostic Capabilities..... | 1-7 |
| 1.2 PHYSICAL DESCRIPTION | 1-7 |
| Connectors | 1-7 |
| 1.3 FUNCTIONAL DESCRIPTION | 1-8 |
| Signal Processing Capabilities | 1-8 |
| Management | 1-9 |
| Configuration Parameters..... | 1-9 |
| 1.4 TECHNICAL SPECIFICATIONS | 1-10 |

Chapter 2. Module Installation and Operation

| | |
|------------------------|-----|
| 2.1 INSTALLATION | 2-1 |
|------------------------|-----|

Chapter 3. Configuring with an ASCII Terminal

| | |
|---------------------------------|-----|
| 3.1 INITIAL SETUP..... | 3-1 |
| Connecting to the Terminal..... | 3-2 |
| 3.2 CONFIGURATION..... | 3-2 |

Chapter 4. Tests & Diagnostics

| | |
|----------------------------|-----|
| 4.1 DIAGNOSTIC TESTS | 4-1 |
| Local Loopback | 4-2 |
| Remote Loopback..... | 4-2 |
| Tone Injection Test | 4-3 |
| 4.2 ALARM MESSAGES..... | 4-5 |

Appendix A. Interface Specifications

| | |
|---|-----|
| A.1 KVF.8/E&M | A-1 |
| A.2 KVF.8/FXS, AND KVF.8/FXO CONNECTORS | A-3 |
| A.3 DC PWR-IN CONNECTOR (FOR KVF.8/FXS AND KVF.8/E&M) | A-3 |
| A.4 DOWNLOAD CONNECTOR | A-4 |

Appendix B. Software Download

| | |
|---|-----|
| B.1 INSTALLATION PROCEDURE | B-1 |
| Warm Installation | B-1 |
| File Transfer via Kilomux Common Logic..... | B-3 |
| Cold Installation..... | B-3 |

List of Figures

| | |
|---|-----|
| 1-1. Typical KVF.8/E&M Application..... | 1-3 |
| 1-2. Typical Application for KVF.8/FXO, KVF.8/FXS Modules | 1-4 |
| 1-3. Typical Tandem Application for the KVF.8 Modules | 1-5 |
| 1-4. KVF.8 Working Opposite KVF.6 | 1-6 |
| 2-1. Rear Panels of Different Versions of KVF.8..... | 2-1 |
| 3-1. Rear panel of the KCL.2 module (three versions) | 3-1 |
| 4-1. Local Channel Loop, Signal Path..... | 4-2 |
| 4-2. KVF.8 Module, Remote Channel Loop Signal Path | 4-3 |
| 4-3. Test Tone Injection Path..... | 4-4 |

List of Tables

| | |
|---|------|
| 1-1. KVF.8 Module Versions | 1-2 |
| 1-2. Supported Fax Rates..... | 1-8 |
| 1-3. Power Consumption..... | 1-12 |
| 2-1. KVF.8/E&M Module Rear Panel Components | 2-2 |
| 2-2. KVF.8/FXO Module Rear Panel Components..... | 2-2 |
| 2-3. KVF.8/FXS Module Rear Panel Components | 2-2 |
| 3-1. Channel Configuration Parameters | 3-3 |
| 4-1. Diagnostic Commands..... | 4-1 |
| 4-2. KVF.8 Alarm Messages..... | 4-5 |
| A-1. SCSI Connector Wiring for KVF.8 Family Modules..... | A-1 |
| A-2. DB-25Connector Wiring for KVF.8 Family Modules | A-3 |
| A-3. DC PWR-IN Connector Wiring..... | A-3 |
| A-4. Download Connector Pinout..... | A-4 |

Chapter 1

Introduction

This chapter provides general information about the various KVF.8 modules. This chapter discusses:

- **Overview** – the versions, applications, features, and diagnostic capabilities of the various KVF.8 modules
- **Physical Description** – the jumpers and connectors of the different KVF.8 versions
- **Functional Description** – the signal processing capabilities, management, and configuration parameters of KVF.8
- **Technical Specifications** – provides the technical information for KVF.8 versions in table form.

1.1 Overview

KVF.8 is a family of analog low-bit rate voice/fax interface modules for Kilomux modular high-speed time division multiplexer systems. The KVF.8 modules are available in several versions. Each version has eight channels that support voice and fax transmission.

The KVF.8 modules use advanced Digital Signal Processing (DSP) techniques (MPMLQ – Multipulse Maximum Likelihood Quantization in accordance with ITU-T Rec. G.723) to allow the transmission of Group III facsimile and high-quality compressed voice signals, while requiring a main-link bandwidth of only 4.8, 6.4, 9.6, 11.2, 12.8 or 16 kbps.

When operating at rates of 6.4, 9.6, 11.2, 12.8 or 16 kbps, the voice quality provided by the KVF.8 module is equivalent to that achieved by 32 kbps ADPCM encoding; high-quality voice is maintained even at a transmission rate of 4.8 kbps.

Versions

Table 1-1 lists the main characteristics of the KVF.8 module versions. Each version is described in a separate section below.

Table 1-1. KVF.8 Module Versions

| Version | Interface | Connectors |
|-----------|---|---|
| KVF.8/E&M | Two-wire or four-wire analog interfaces and E&M signaling. Use external –12V to –60V as signaling battery source | SCSI 68-pin connector and one 3-pin connector for external feed and ring source |
| KVF.8/FXO | Two-wire analog interfaces and FXO loop start or wink start signaling. | DB-25 connector and one 3-pin connector |
| KVF.8/FXS | Two-wire analog interfaces and FXS loop start, ground start or wink start signaling. Requires external feed and ring voltage source | DB-25 connector and one 3-pin connector for external feed and ring source |

Note In this manual, the generic term KVF.8 is used when the information is applicable to all of the module versions. The complete designation is used only for information applicable to a specific version.

System Compatibility Considerations

The KVF.8 module is designed to work with systems that adhere to the following minimum requirements:

Common Logic:

- KCL.2
- Hardware version 0.2 or higher
- Software version 3.10 or higher

Main Link:

- KML.1-8 – with Configuration Status Letter=E
- KML.10 – for KML.10/S, with Configuration Status Letter=C
for KML.10/U, with Configuration Status Letter=B
- KML.F – with Configuration Status Letter=E
- KML.11 – all versions

Applications

This section describes typical KVF.8 applications.

KVF.8/E&M Application

Figure 1-1 shows a typical KVF.8/E&M voice/fax relay application in a corporate environment.

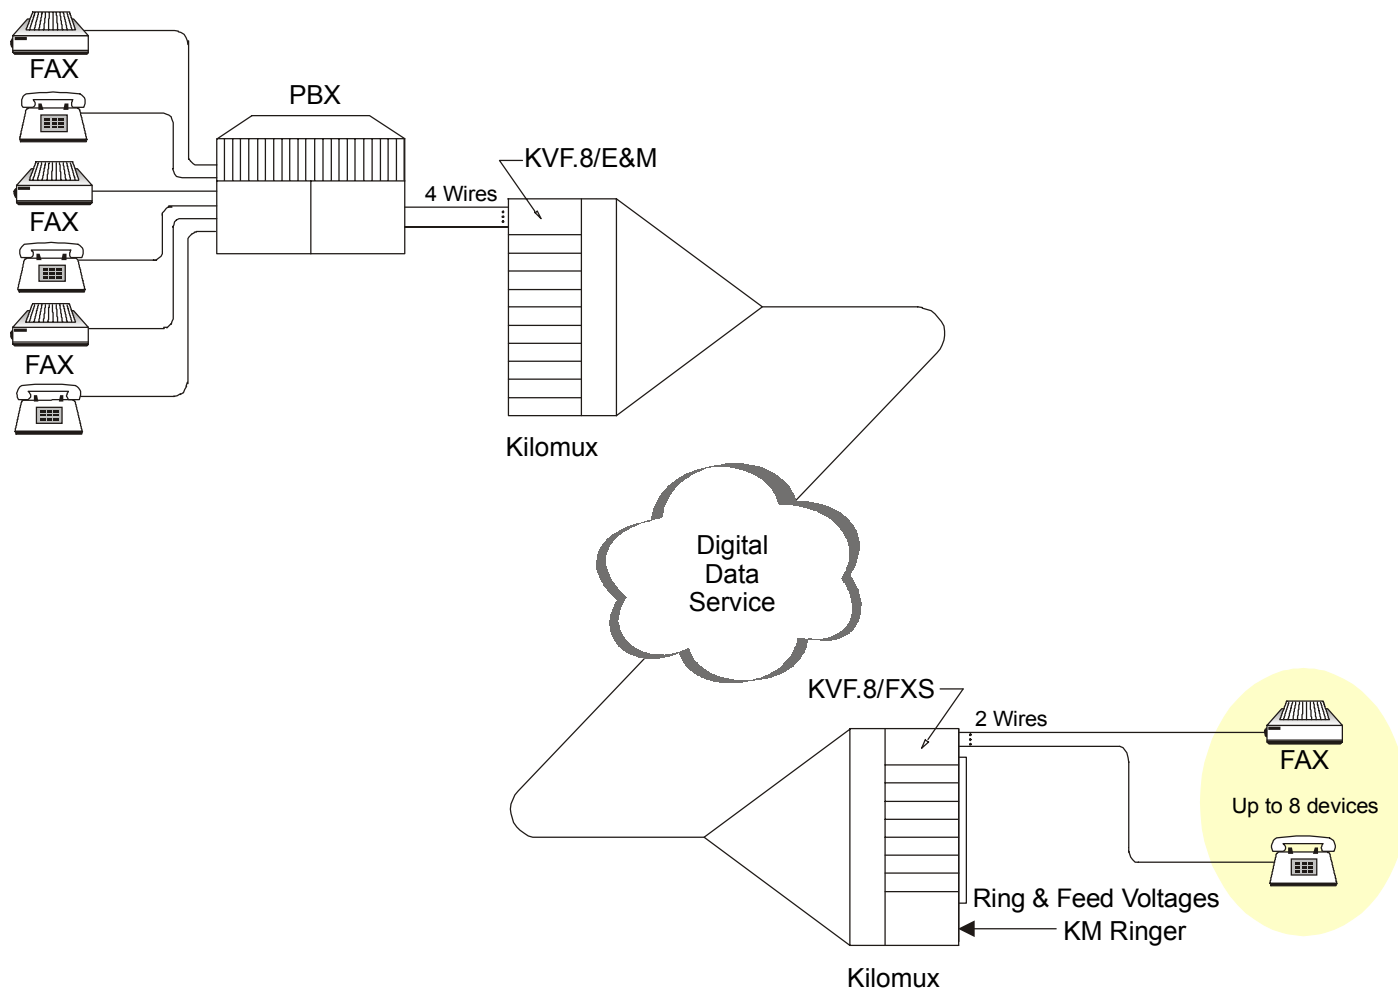


Figure 1-1. Typical KVF.8/E&M Application

In this application, a multiplexed digital link is used to connect subscribers at a remote location to the PBX in the main office. KVF.8/E&M modules can then be used to carry the fax traffic over a low-rate (such as 9.6 kbps) digital channel, avoiding the long-distance service costs associated with direct dialing.

This application also shows the KVF.8/E&M module connected to eight of the trunk lines of the main office PBX. PBX subscribers wishing to transmit fax messages dial the number of the fax machine at the remote location, and the PBX directs the call over the trunk line connected to the KVF.8 modules. The PBX subscriber can use standard fax operating procedures. This means that the subscriber can first use the line for voice conversation with the remote subscriber,

and then can start sending the fax message. The KVF.8/E&M is initially in the voice mode, and switches automatically to the fax mode when the fax transmission starts.

KVF.8/FXO, KVF.8/FXS Application

Using KVF.8/FXO and KVF.8/FXS modules allows remote users to access fax machines or telephones located at the main corporate offices via the Public Switched Telephone Network (PSTN), by making calls to the local offices, as shown in *Figure 1-2*.

For example, to place a call to the fax machine located at the main corporate offices, the fax users dial the number of the local office fax line, which is connected to a KVF.8/FXO module. The calls are transferred via the corporate digital network to the Kilomux located at the main offices. The KVF.8/FXS module installed in the Kilomux connects to the main office fax machine.

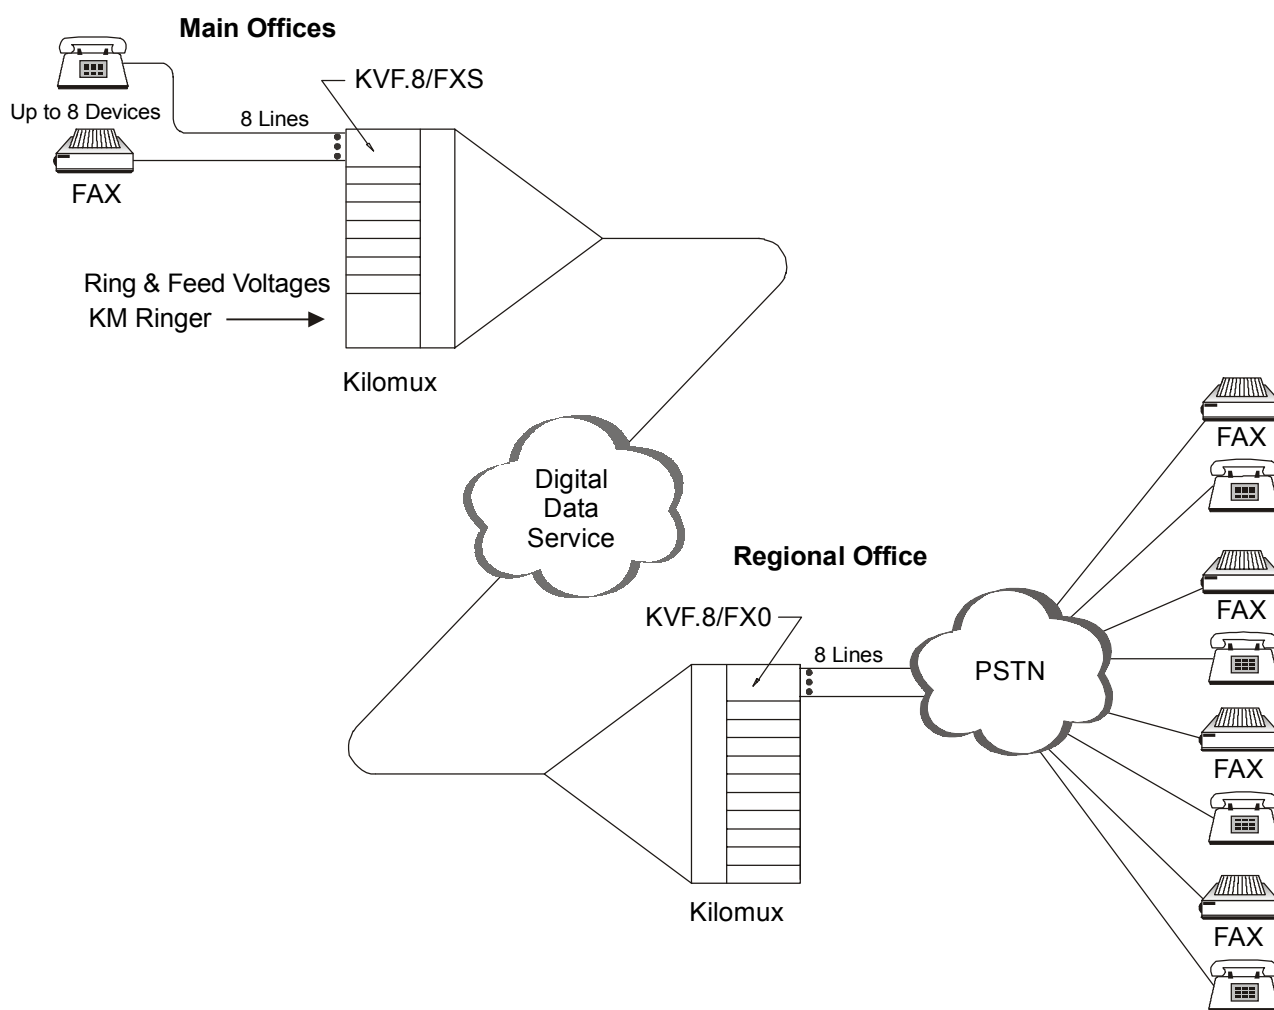


Figure 1-2. Typical Application for KVF.8/FXO, KVF.8/FXS Modules

Tandem KVF.8 Applications

Due to the use of ITU-T Rec. G.723.1 MPMLQ compression technique, the KVF.8 module provides high-quality voice transmission. This superior performance enables the use of tandem link segments, as shown in *Figure 1-3*.

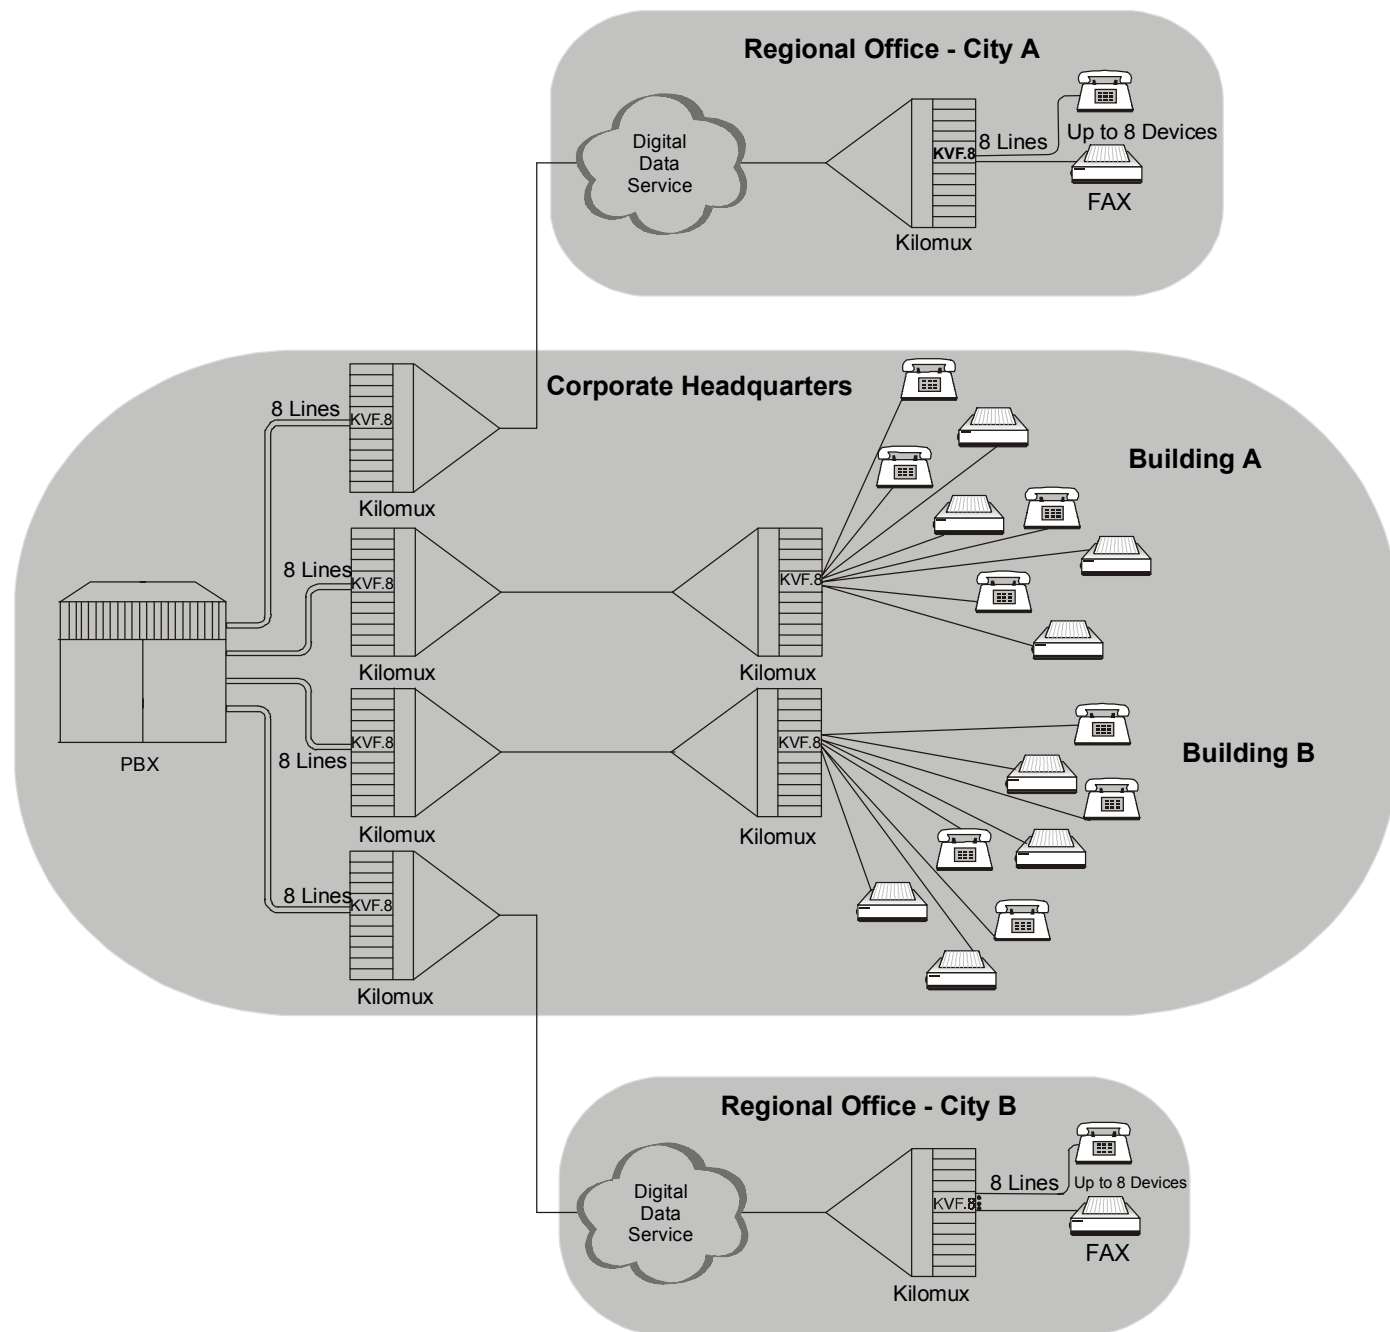


Figure 1-3. Typical Tandem Application for the KVF.8 Modules

Two KVF.8 link segments can be connected in tandem with little degradation in transmission quality, providing the flexibility often needed in corporate networks. This allows users at regional offices, who are linked through the corporate data network, to be connected through KVF.8 channels to the PBX in the main

corporate offices, without making any special arrangements to ensure that such links are not incidentally connected in tandem.

When using tandem segments, it is necessary to consider the end-to-end processing delay introduced by each pair of KVF.8 modules, which is less than 100 msec. This delay is inherent to the MPMLQ compression algorithm.

The end-to-end delay must be considered when using tandem connections over satellite hops. In cases where the end-to-end delay may build up to values that exceed the time-out intervals used during call set up by fax equipment (approximately 700 msec), it is not recommended to have more than one satellite hop.

KVF.8/KVF.6 Application

The KVF.8 module is compatible with the KVF.6 E1/T1 voice/ fax compression module. When operating opposite a KVF.6 module, the KVF.6 handles different groups of eight channels each, routed independently to different KVF.8 cards (see *Figure 1-4*).

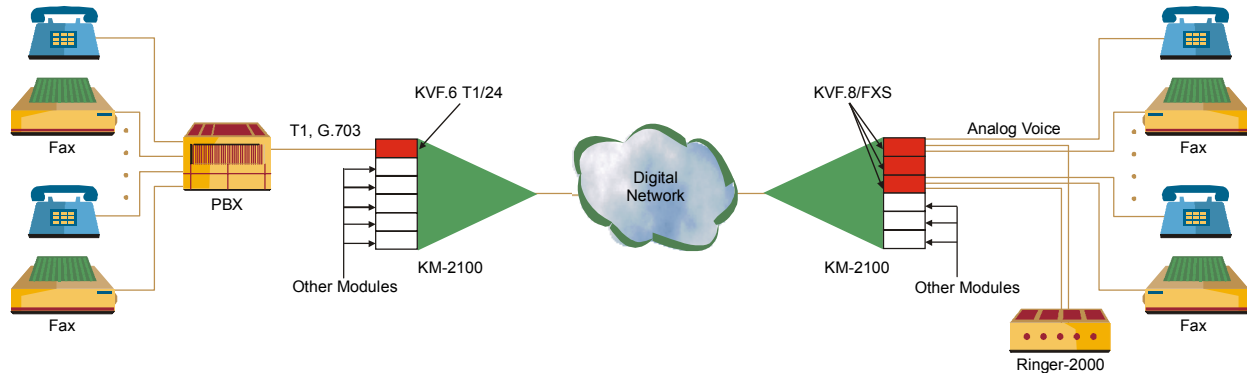


Figure 1-4. KVF.8 Working Opposite KVF.6

Features

The following is a list of features for each of the KVF.8 versions.

KVF.8/E&M

- Software-selectable two-wire and four-wire analog interfaces
- E&M signaling
- Supports four types of E&M signaling: RS-464 types I, II, III, and V (British Telecom SSSDC5)
- Voltages are appropriate for connection with PBX lines, as well as for many short-line length applications.

KVF.8/FXO

- Two-wire analog interfaces
- FXO software-selectable signaling for direct connection to PBX extension lines (loop start) and for billing applications or pay phones (wink start)
- Includes dedicated circuits for the detection of polarity and of 16 kHz or 12 kHz metering pulses

KVF.8/FXS

- Two-wire analog interfaces
- FXS loop start, wink start or ground start software-selectable signaling
- Direct connection to a subscriber telephone set or other equipment with similar interface such as answering machines, fax, etc (loop start) and billing application or payphones (wink start)
- Includes dedicated circuits for the generation of polarity reversal and 16 kHz or 12kHz, metering pulses
- Equipped with an additional three-pin connector to connect an external source for the feed voltages. The required voltages can be supplied by a KM-Ringer module, or by a Ringer-2000 or Ringer-2200 stand-alone units.

Test and Diagnostic Capabilities

The KVF.8 module automatically performs a self-test upon power-up and during normal operation. Comprehensive diagnostic capabilities reduce downtime to a minimum. Diagnostics include local and remote channel loops, and tone injection.

For more information, refer to *Chapter 4*.

1.2 Physical Description

KVF.8 cards are designed for installation in Kilomux 2100 or 2104 models. Rear Panel diagrams and installation procedures for KVF.8 are provided in *Chapter 2*.

Connectors

KVF.8 E&M has a SCSI 68-pin connector. Use cable CBL-KVF8/E&M for this module. KVF.8 FXS/FXO has a DB-25 connector. Use a cable CBL-KVF8-FXOS for these modules. KVF.8 has a 3-pin DC voltage connector and a software-download connector. For more information, refer to *Installation* in Chapter 2.

1.3 Functional Description

Signal Processing Capabilities

Each channel of the KVF.8 module can operate in two modes, voice and fax:

Voice mode: in this mode, the KVF.8 channel enables the transmission of a high-quality compressed voice channel, including the associated call set-up signaling information, either DTMF or pulse dialing, over the main link. Voice is digitized at the selected main link rate, i.e., 4.8, 6.4, 9.6, 12.8 or 16 kbps. Due to the use of the MPMLQ speech compression technique, the end-to-end voice performance is equivalent to the performance of 32 kbps ADPCM, as measured using the Mean Opinion Score (MOS). This holds true for all available rates, except for 4.8 kbps.

The end-to-end processing delay introduced by the KVF.8 module is less than 100 msec. To improve the perceived link quality, the KVF.8 module includes an adaptive echo canceler that handles near-end reflections (echo tail delay of less than 15 milliseconds), such as reflections being caused by a nearby hybrid used for 2W/4W conversion. The echo canceler convergence time exceeds ITU-T Rec. G.165 requirements. If the link is a pure 4W link with no hybrid along the path between the two subscribers, the user can turn off the adaptive echo canceler.

To maintain voice quality on bad communication links, when operating at rates of 9.6, 12.8 and 16 kbps, the KVF.8 module uses Hamming Forward Error Correction (FEC) coding to protect the critical information bits in the compressed voice data stream. The FEC code can maintain voice quality for main link error rates down to 1×10^{-3} .

Fax relay mode: in this mode, each KVF.8 channel permits any standard Group III facsimile machine to transmit over the data link, thus eliminating the need for expensive digital fax or store-and-forward systems. Facsimile transmission over the digital network improves transmission quality, while greatly reducing long distance telephone costs and the time needed for freeing the facsimile machine. The KVF.8 channel automatically recognizes and transmits fax transmissions at fax standard rates that do not exceed the selected digital link bandwidth. The supported fax rates are as follows:

Table 1-2. Supported Fax Rates

| Selected Channel Rate | Supported Fax Transmission Rates |
|-----------------------|--------------------------------------|
| 16 Kbps | 14.4, 12, 9.6, 7.2, 4.8 and 2.4 Kbps |
| 12.8 Kbps | 12, 9.6, 7.2, 4.8 and 2.4 Kbps |
| 11.2 Kbps | 9.6, 7.2, 4.8 and 2.4 Kbps |
| 9.6 Kbps | 7.2, 4.8 and 2.4 Kbps |
| 6.4 Kbps | 4.8 and 2.4 Kbps |
| 4.8 Kbps | 2.4 Kbps |

The supported data relay rates are as follows: 2.4, 4.8, 7.2, 9.6 and 14.4 kbps.

The KVF.8 channel assumes by default the voice mode; it automatically switches to the fax relay mode when a fax transmission is detected, and then returns to the voice mode when the transmission is over. Therefore, this highly flexible voice/fax relay module can be directly connected to a PBX tie line, as shown in *Figure 1-1*, or to a combined phone/fax machine.

These capabilities allow the user connected to a KVF.8 channel to place phone and fax calls over the PSTN, and to receive phone and fax calls from the PSTN via a private network; operator actions are identical to those using the fax over the PSTN.

Management

All the operating parameters of the KVF.8 module are via an ASCII terminal or via RADview Network Management System. For more information, refer to *Chapter 3*.

Configuration Parameters

KVF.8 has eight channels split on 2 DSPs (Quad Codec). Each DSP manages 4 channels. Speed, gain and echo parameters are set per batch of four channels. Signaling bits, OOS and physical interface type are configured for the whole card (8 channels). Speed is configured per batch of four channels. This means that if you configure the speed to X, the total used bandwidth will be 4X because it is assigned for the batch of four channels.

Bandwidth

The KVF.8 channel digitizing rates for link rates up to 1536 kbps are: 4.8, 6.4, 9.6, 11.2, 12.8, and 16 kbps.

The KVF.8 channels are configurable only in batches of four. When you select a data rate for a batch, every channel in the batch is assigned that particular data rate. For example: If you assign a data rate of 4.8 kbps to a batch, the batch uses up 19.2 kbps of bandwidth (4×4.8) on the main link.

Signaling

Each individual channel passes four bits: A, B, C, and D. They pass from the local to the remote Kilomux, and vice versa, in inband and do not necessitate extra bandwidth.

Each of the four bits (A, B, C, D) can be passed with on/off hook, metering pulse, and reversal polarity.

The signaling bits are permanently set to the following configuration for transmission over the main link:

A = On/off hook bit

B = Reverse polarity bit

C = Metering bit

You can configure the KVF.8 as to which bit to turn into an on/off hook, reversal polarity and metering signal on its way to the PSTN/PBX.

1.4 Technical Specifications

| | | |
|-------------------------------|---|--|
| Voice/Fax Interface | <i>Fax Compatibility</i> | Group III facsimile machines per ITU-T Rec. V.17, V.29, V.27, and V.27 ter |
| | <i>Fax Data Rates</i> | Fax Data Rates/Channel rate 2.4 kbps / 4.8 kbps 2.4, 4.8 kbps / 6.4 kbps 2.4, 4.8, 7.2 kbps / 9.6 kbps 2.4, 4.8, 7.2, 9.6 kbps / 11.2 kbps 2.4, 4.8, 7.2, 9.6, 12 kbps / 12.8 kbps 2.4, 4.8, 7.2, 9.6, 12, 14.4 kbps / 16 kbps (all with automatic rate fallback) |
| | <i>Voice Digitizing Technique</i> | ITU-T Rec. G.723.1 MPMLQ low bit rate digitizing at 6.4, 9.6, 11.2, 12.8 or 16 kbps. Proprietary voice digitizing technique provides a rate of 4.8 kbps |
| | <i>End-to-end Processing Delay</i> | Less than 100 msec |
| | <i>Acceptable Channel Bit Error Rate</i> | 1×10^{-3} or better |
| | <i>Modem Data Compatibility</i> | V.32 and V.32 bis (14.4 kbps) |
| | Analog Interfaces | <i>KVF.8/E&M</i> <i>KVF.8/FXS,</i> <i>KVF.8/FXO</i> |
| Analog Characteristics | <i>Nominal Level</i> | 0 dBm |
| | <i>Nominal Impedance</i> | 600Ω |
| | <i>Return Loss (300 to 3400 Hz)</i> | Better than 20 dB |
| | <i>Frequency Response (referred to 1020 Hz)</i> | 300 to 3000 Hz: 0 dB ±0.5 dB 250 to 3400 Hz: 0 dB ±1.1 dB |

| | | |
|-------------------------------|--|---|
| | <i>Range of Nominal Levels</i> | For KVF.8/E&M: Transmit: +5 to -10 dBm Receive: +3 to -17 dBm Steps: 1 dB \pm 0.5 dB For KVF.8/FXS: Transmit: +5 to -10 dBm Receive: +2 to -17 dBm Steps: 1 dB For KVF.8/FXO: Transmit: +5 to -10 dBm Receive: +2 to -17 dBm Steps: 1 dB |
| | <i>Signal-to-total-distortion at 6.4 kbps and higher</i> | 0 to -30 dBm0: better than 33 dB +3 to -45 dBm0: better than 22 dB |
| | <i>Idle channel noise</i> | Better than -70 dBm0 |
| | <i>Transformer Isolation</i> | 1500 VRMS |
| Adaptive Echo Canceled | <i>Echo Path Length</i> | 15 msec |
| | <i>Echo Return Loss Enhancement (ERLE)</i> | More than 30 dB |
| | <i>Convergence Speed</i> | Better than ITU-T Rec. G.165 requirements |
| Signaling | <i>KVF.8/E&M</i> | EIA RS-464 Types I, II, III or V (British Telecom SSDC5) software-selectable |

| | |
|--|--|
| <i>KVF.8/FXS</i> | <p>EIA RS-464 loop start or wink start (software-selectable)</p> <p>On-Hook/Off-Hook Threshold: –3 VDC to 80% VBATT between tip and ring in off-hook state 80% VBATT to VBATT between tip and ring in on-hook state</p> <p>Feed current: 22 mA \pm10%/per channel</p> <p>Ringer: 86 VRMS (when providing 4 REN or less) to 45 VRMS (when providing 12 REN max), 20 Hz (\pm10%); Overload protected, 1 second ON, 3 seconds OFF</p> <p>Metering pulse generation:</p> <p>Output frequency: 12 or 16 kHz (\pm2 Hz), software-selectable</p> <p>Output level: 1.7 VRMS</p> <p>Reversal polarity pulse distortion: 6 msec max</p> |
| <i>Power Consumption of the module</i> | <p>5V, 12V, –12V See table below.</p> |

Table 1-3. Power Consumption

| | KVF.8 FXS | KVF.8 FXO | KVF.8 E&M |
|------------|---------------|---------------|---------------|
| +5V | 1A (5W) | 1.2 A (6.72W) | 1.12 A (5.6W) |
| +12 | 144 mA (1.7W) | 4 mA (0.048W) | 4 mA (0.048W) |
| –12 | 37 mA (0.44W) | 37 mA (0.44W) | 37 mA (0.44W) |

Ringer Power Consumption (from battery feed, -48V) ~270mA maximum (~13.4W),
 [when all 8 channels are off-hook].

Note: One KM Ringer can support up to three KVF.8/FXS modules

| | | |
|--|----------------------------------|--|
| | <i>KVF.8/FXO</i> | <p>EIA RS-464 loop start</p> <p>DC Impedance: Off-hook: 100Ω at 100 mA feed 230Ω at 25 mA feed</p> <p>On-hook: Above 1 MΩ</p> <p>Ring detector: Impedance: 20 kΩ @ 20 Hz, 70 VRMS</p> <p>Detection: At least 20 VRMS, 17 to 25 Hz</p> <p>No Detection: Maximum 5 VRMS</p> <p>Dialing: DTMF or pulse</p> <p>Metering pulse detection frequency: 12 or 16 kHz (±2 Hz), software-selectable</p> <p>Reversal polarity pulse distortion: 6 msec max</p> <p>Selectable, according to programmed voice digitization rates</p> |
| Bandwidth Allocation on Main Link | | |
| Diagnostics | <i>Self-test</i> | Automatic self-test upon power-up and during normal operation |
| | <i>Software-controlled tests</i> | <ul style="list-style-type: none"> • Local digital loopback • Remote analog loopback • 1 kHz tone injection |
| Connectors | <i>KVF.8/E&M</i> | <ul style="list-style-type: none"> • 68-pin SCSI connector or 8-pin RJ-45 connector for each channel • 3-pin connector for external feed and ring voltages. Use cable CBL-KVF8/E&M • 3-pin connector for Software Download. Use cable CBL-KVF6/8-DL |

- | | |
|------------------|---|
| <i>KVF.8/FXO</i> | <ul style="list-style-type: none">• DB-25 or 6-pin RJ-11 connector for each channel. Use CBL-KVF8-FXOS• 3-pin connector for future expansion• 3-pin connector for Software Download. Use cable CBL-KVF6/8-DL |
| <i>KVF.8/FXS</i> | <ul style="list-style-type: none">• D-type 25-pin or 6-pin RJ-11 connector for each channel. Use cable CBL-KVF8-FXOS• 3-pin connector for external feed and ring voltages• 3-pin connector for Software Download. Use cable CBL-KVF6/8-DL |

Configuration

Programmable by the Kilomux System Management or RADview Network Management System

Chapter 2

Module Installation and Operation

This chapter provides installation and operation instructions for the various KVF.8 modules. It also provides information on the rear panel, internal settings, module installation, and normal operating indicators for the various versions of KVF.8.

Note *The KVF.8 modules contain components sensitive to electrostatic discharge (ESD). To prevent ESD damage, always hold the module by its sides, and do not touch the module components or connectors.*

2.1 Installation

The rear panels of the three versions of KVF.8 modules are shown in Figure 2-1.

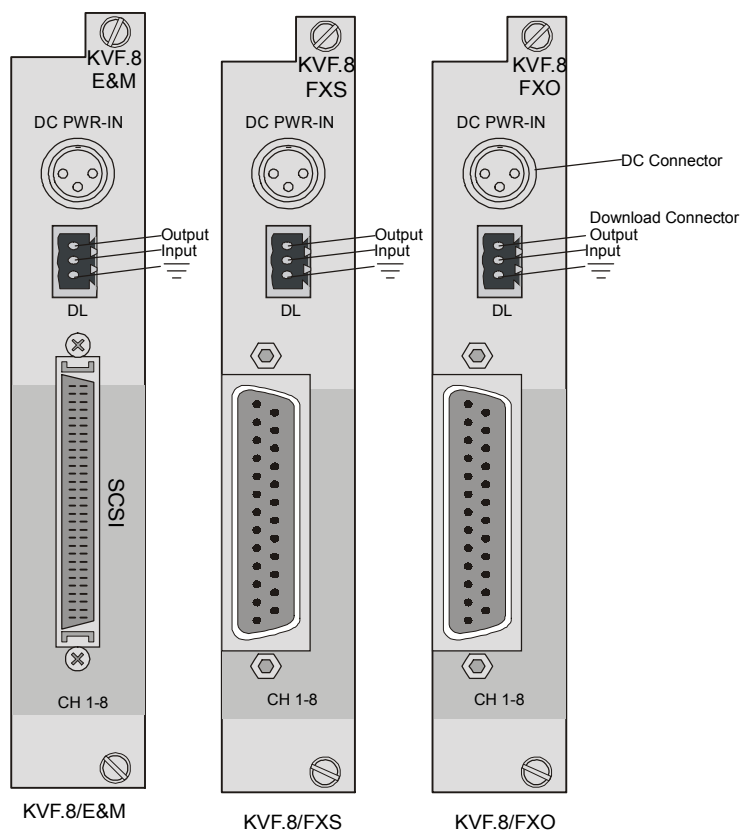


Figure 2-1. Rear Panels of Different Versions of KVF.8

The following tables explain the functions of the components located on the rear panels.

Table 2-1. KVF.8/E&M Module Rear Panel Components

| Identification | Description |
|-----------------------|--|
| DC PWR-IN connector | Connector for external signaling voltage. Connector pin assignment and functions are given in Appendix A. |
| Channel connector | SCSI 68-pin connector. Connector pin assignment and functions are given in Appendix A. |
| DL | Software Download connector. Connector pin assignment and functions are given in Appendix A. |

Table 2-2. KVF.8/FXO Module Rear Panel Components

| Identification | Description |
|-----------------------|--|
| DC PWR-IN Connector | For the KVF.8/FXO module, this connector is not currently in use. Connector pin assignment and functions are given in Appendix A. |
| Channel Connector | DB-25 connector. Connector pin assignment and functions are given in Appendix A. |
| DL | Software Download connector. Connector pin assignment and functions are given in Appendix A. |

Table 2-3. KVF.8/FXS Module Rear Panel Components

| Identification | Description |
|-----------------------|--|
| DC PWR-IN Connector | Connector for external signaling voltage. Connector pin assignment and functions are given in <i>Appendix A</i> . |
| Channel Connector | DB-25 connector. Connector pin assignment and functions are given in <i>Appendix A</i> . |
| DL | Software Download connector. Connector pin assignment and functions are given in <i>Appendix A</i> . |

Chapter 3

Configuring with an ASCII Terminal

This chapter provides specific instructions for the configuration of the KVF.8 module using a supervision terminal. This chapter discusses:

- **Initial Setup** – this section provides the procedure for connecting to an ASCII terminal
- **Configuration** – this section provides the configuration instructions for KVF.8.

Note

The KVF.8 cannot be configured from the Kilomux front panel controls

3.1 Initial Setup

KVF.8 features a setup program that is invoked and run from an ASCII terminal or a PC terminal emulator. The terminal/terminal-emulator is connected to the CONTROL port on the KCL.2 rear panel.

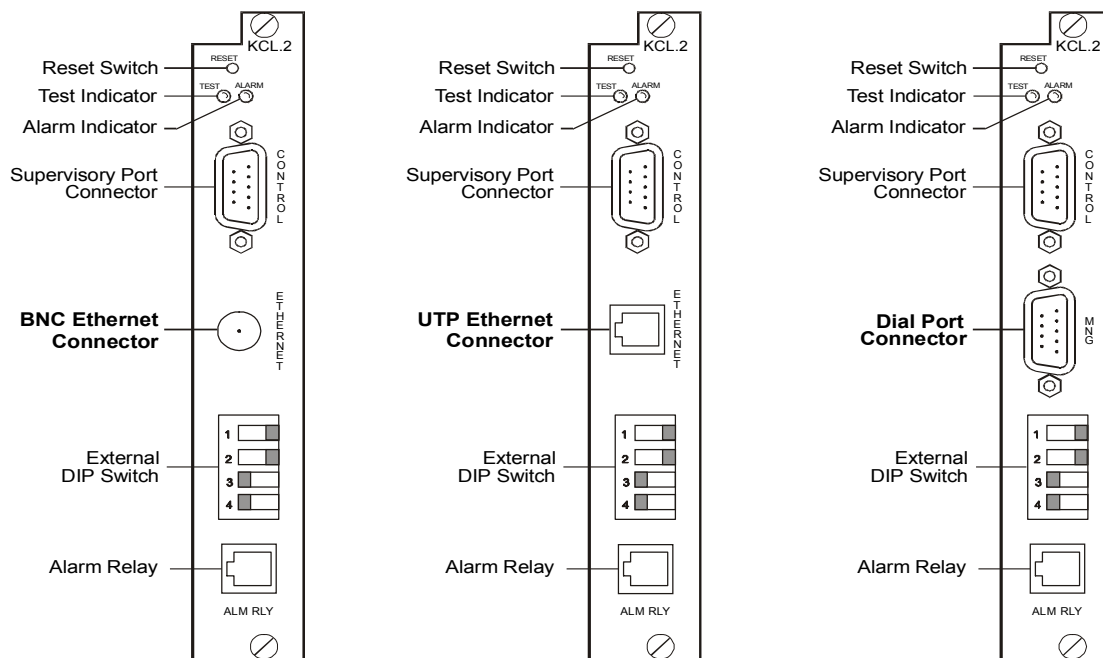


Figure 3-1. Rear panel of the KCL.2 module (three versions)

This section describes how to connect to the terminal and access the Main menu setup program.

Connecting to the Terminal

► **To connect the terminal:**

1. Connect a control cable between the KCL CONTROL port and the connector on the terminal; or between the KCL CONTROL port and the PC communication port (refer the Kilomux system manual for instructions and diagrams).
2. Set the terminal to work at any Baud rate from 9.6 kbps, No Parity, 8 Data Bits. The Baud rate is self-adaptable.

3.2 Configuration

The following instructions assume you are familiar with the operation and capabilities of the supervision terminal. For Kilomux operating instructions, refer to the Kilomux Operating manual.

The configuration functions applicable to the KVF.8 module are listed below:

- Inclusion of a KVF.8 module not yet installed in the Kilomux database. This allows the pre-programming of the module parameters, so when the module is installed in the enclosure, it will immediately start operating in the desired mode. This function is performed by means of the DEF SYS command.
- Selection of the main link to be used by the module, and when applicable, module priority. This function is performed using the DEF CON command. This command is available only on the Kilomux-2100, provided it is operated in the dual-link, priority bumping or switched-backup mode (but not in the single link or redundancy modes).
- Programming of the module channel parameters, using the DEF CH command.

To include the KVF.8 module in the database, use the DEF_SYS and DEF_CON commands. Refer to the Kilomux System Installation and Operation Manual.

Channel Configuration

The 8 channels of KVF.8 are divided into two batches: Channel 1 = channels 1-4; Channel 2 = channels 5-8. The channels are configurable per batch only.

► **To start the configuration of a specific channel of a KVF.8 module:**

1. Type **DEF CH i:j** and press ENTER.

Where "i" is the number of the module slot (1 through 12 for the Kilomux-2100, or 1 through 4 for the Kilomux-2104), and "j" is the desired module channel (batch number 1 or batch number 2). The supervision terminal displays the channel configuration data form.

2. Use the space bar to bring the cursor to the beginning of the first field to be changed.
3. Press F or B to scroll among the available selections.

4. When the desired selection is displayed, press the space bar to move to the next field.
5. After the desired parameter values are selected, press ENTER to end.

The supervision terminal will display the time and date fields, followed by the Kilomux prompt.

| | | | | | |
|-----------------------|--------------|-------------|-------------------|------------|-----------------|
| SPEED | CHANNEL_TYPE | TX_GAIN | RX_GAIN | RESET_DSP | |
| 4*NC | VOICE & FAX | 0dBm | 0dBm | DISABLE | |
| ECHO | OOS | INTERFACE | METERING | INVERT_SIG | ON_OFF_HOOK_BIT |
| OFF | F-I | LOOP | 12K | NORMAL | A |
| REVERSAL_POLARITY_BIT | METERING_BIT | GENERAL_BIT | RINGING_FREQUENCY | | |
| 1 | 0 | 1 | 16.7Hz | | |

Table 3-1. Channel Configuration Parameters

| Designation | Function | Values |
|--------------|--|---|
| SPEED | Determines the channel digitizing rate * | NC, 4.8, 6.4, 9.6, 11.2, 12.8, 16 kbps Default: NC |
| CHANNEL_TYPE | Determines the type of transmission to be passed ** | Voice Only, Voice & Fax, Voice & Fax & Data Default= Voice & Fax |
| TX_GAIN | Selects the nominal input level of the transmit path | +5 to -10 dBm Default= 0 |
| RX_GAIN | Selects the nominal output level of the receive path | FXS/FXO: +2 to -17 dBm E&M: +3 to -17 dBm Default= 0 |
| ECHO | Controls the use of the optional echo canceler | ON, OFF Default= ON |

Note

* When operating in Voice Only, Data Rate (Speed) options are limited to 4.8 and 6.4 kbps.

** Channel parameters can only be configured per batch of channels: 1 for channels 1-4, 2 for channels 5-8.

Table 3-1. Channel Configuration Parameters (Cont.)

| | | |
|-----------------------|--|--|
| OOS | Out-of-Service Specifies the state of the signaling of an out of service channel as it appears to the PBX | F-I (Forced Idle), F-B (Forced Busy) Default= F-I |
| INTERFACE | Type of analog interface for the card: loop start, ground start or wink start. <u>Note:</u> Ground start option is available only with the FXS version | (FXS/FXO only) Loop, Ground or Wink Default: Loop start |
| METERING | Frequency metering pulse (Hz) | (FXS/FXO only) 12k, 16k Default= 16k |
| ON_OFF_HOOK_BIT | Determines which bit, coming in from the main link (sent from the far end Kilomux), should be set to be sent from this KVF.8 as an on/off hook signal toward the PBX/PSTN.* | FXS/FXO: A, B, C, D, Not A, Not B, Not C, Not D, 0, 1 Default= A E&M: spare bit, not used |
| REVERSAL_POLARITY_BIT | Determines which bit, coming in from the main link (sent from the far end Kilomux), should be set to be sent from this KVF.8 as a reversal polarity signal toward the PBX/PSTN.* | FXS/FXO: A, B, C, D, Not A, Not B, Not C, Not D, 0, 1 Default= 1 E&M: spare bit, not used |
| METERING_BIT | Determines which bit, coming in from the main link (sent from the far end Kilomux), should be set to be sent from this KVF.8 as a metering pulse signal toward the PBX/PSTN.* | FXS/FXO: A, B, C, D, Not A, Not B, Not C, Not D, 0, 1 Default= 1 E&M: spare bit, not used |

Note * When KVF.8 is working opposite KVF.6, the KVF.6 passes along the bits received from the E1/T1 equipment to the KVF.8 without altering them. This means that the KVF.8 should be configured to transmit analog signals according to the bit configuration of the E1/T1 device.

The signaling bits are permanently set to the following configuration for transmission over the main link:

A = On/off hook bit

B = Reverse polarity bit

C = Metering bit

You can configure the KVF.8 as to which bit to turn into an on/off hook, reversal polarity and metering signal on its way to the PSTN.

Table 3-1. Channel Configuration Parameters (Cont.)

| | | |
|-------------------|--|---|
| INVERT_SIG | Determine the type of signal sent from the analog side toward the main link of the Kilomux. This function inverts either all of the signal bits, or none of them at all (not selectively). For example: signaling bits A, B, C and D are all inverted to Not A, Not B, Not C and Not D. | Normal (transparent) or Invert (inverted signaling) Default: Normal |
| GENERAL_BIT | For future versions | For future versions |
| RINGING_FREQUENCY | Selects the ringing frequency | (FXS/FXO only) 16.7, 20, 25, 50 Hz Default= 16.7 Hz |
| TYPE_OF_E&M | Selects the type of signaling method in E&M mode | (E&M only) SSDC5, 1, 2, 3 Default= SSDC5 |
| WIRES_NUM | Selects the number of wires for voice transmission in E&M mode | E&M only 2, 4 Default= 2 |
| RESET_DSP | Determines the time interval between DSP resets | DISABLE Every 30 min Every 1 hour Every 2 hours Every 4 hours Every 8 hours Every 16 hours Default: DISABLE |

Chapter 4

Tests & Diagnostics

This chapter describes the KVF.8 diagnostic and testing capabilities, consisting of:

- **Diagnostic Tests** – this section describes the diagnostic tests supported by KVF.8
- **Alarm Messages** – this section describes the alarm messages generated by KVF.8.

4.1 Diagnostic Tests

This section describes the diagnostic tests that are available for KVF.8, how to activate them, and when to use each one.

KVF.8 supports the following types of test:

- Local Loopback
- Remote Loopback
- Tone Injection.

Each test is described below. For front panel activation instructions, refer to the Kilomux-2100 System Installation and Operation Manual.

All diagnostic tests on KVF.8 are run per batch of channels. When a test is run for batch 1 (channels 1-4) or batch 2 (channels 5-8) all the channels in the batch undergo the test simultaneously.

Diagnostics for KVF.8 include local and remote loopbacks on the sub interface, and tone injection.

The KVF.8 module automatically performs self-test upon power-up and during normal operation.

Table 4-1. Diagnostic Commands

| Commands | Loop Type |
|--------------|------------------|
| Tone_inj i:j | Tone injection |
| Loop L i* | Line local loop |
| Loop R i* | Line remote loop |

i=IO number

j=Port number

Local Loopback

The local loopback is a digital loop performed at the TDM output for each batch of four channels, by returning the transmit signal of the channel to the input of its receive path. The transmit signal is also sent to the remote Kilomux. While the loop is connected, the local voice channel should receive its own signal.

Figure 4-1 shows the loop signal path for the local loopback test.

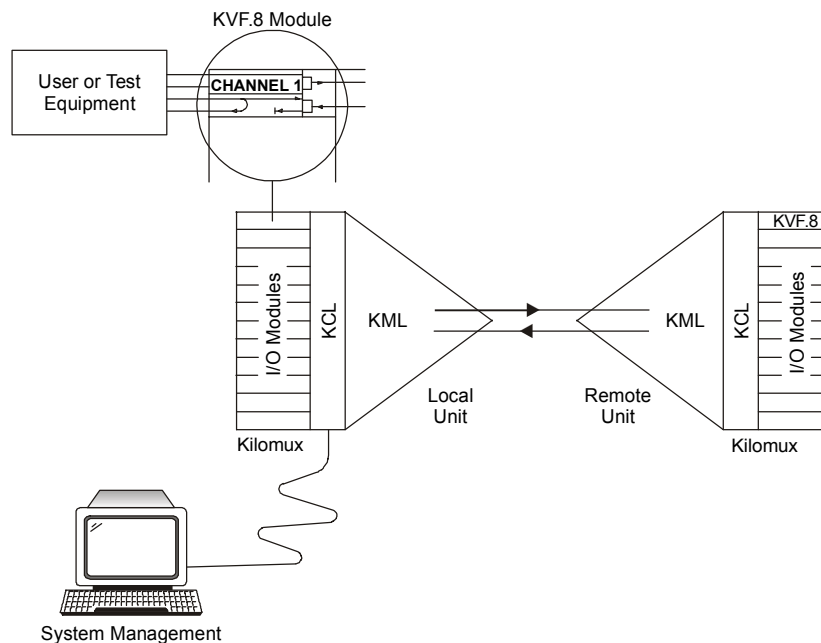


Figure 4-1. Local Channel Loop, Signal Path

Remote Loopback

The remote channel loopback is individually activated on each channel.

For KVF.8 modules with analog interfaces, the loop is performed at the analog device output of the remote channel, by returning the analog receive signal of the channel to the input of its transmit path. The receive signal remains connected to the local user, and can be received by the user. While the loop is connected, the local voice channel receives its own signal.

This loop allows the local user to perform a quick check of the end-to-end transmission on this channel.

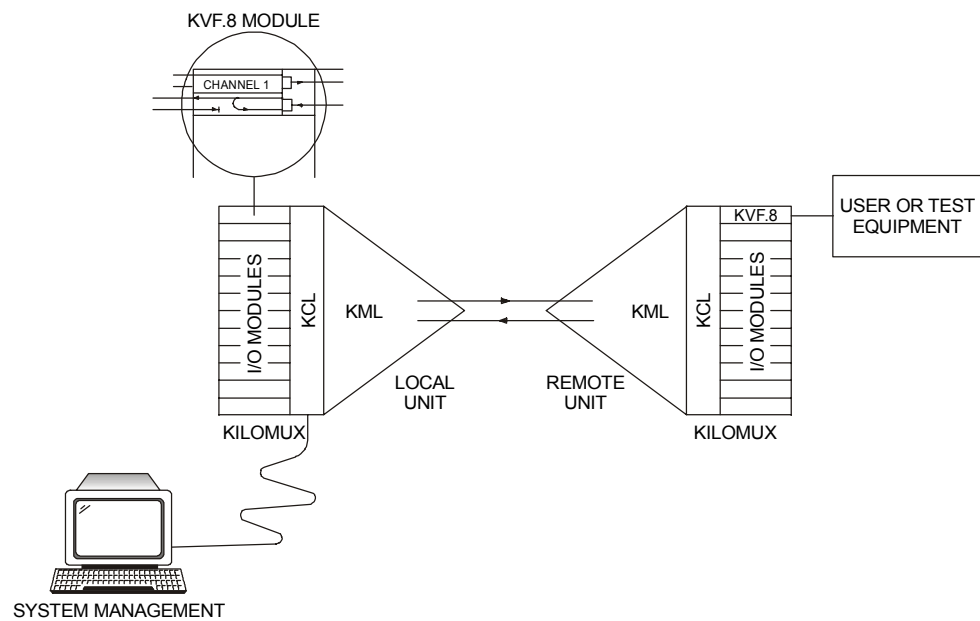


Figure 4-2. KVF.8 Module, Remote Channel Loop Signal Path

Tone Injection Test

In addition to the loopback tests, KVF.8 supports the digital injection of a test tone toward the remote subscriber. This tone is sent instead of the local transmit signal, and provides a controlled test signal that allows rapid testing. The tone should be received well by the remote subscriber at the nominal receive level.

The test tone is a data sequence repeating at a rate of 1 kHz. This data sequence is identical to the data sequence that would have been generated if a test signal having a nominal level of -2.5 dBm were applied to the input of the channel signal processing circuits.

The test tone is connected to the transmit path multiplexer, instead of the transmit signal of the channel. The tone is simultaneously connected to four channels. Tone injection automatically disconnects the local subscriber signal. *Figure 4-3* shows the signal path.

The tone injection test is performed at the compression device.

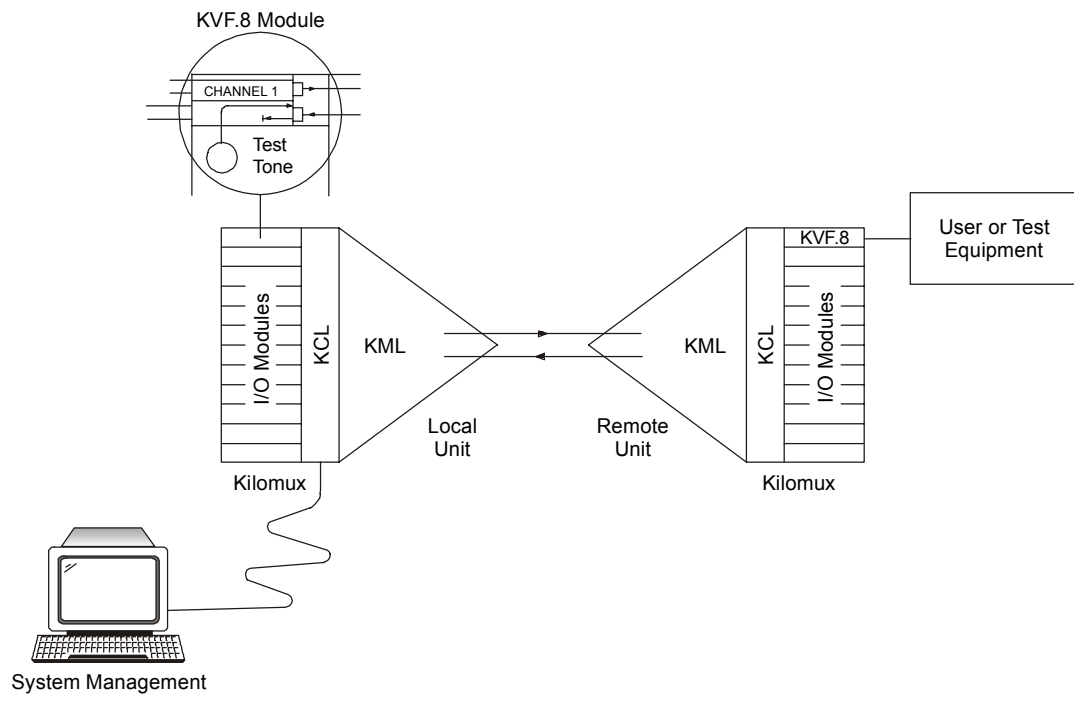


Figure 4-3. Test Tone Injection Path

4.2 Alarm Messages

Table 4-2 lists the alarm messages generated by KVF.8 and displayed on the Kilomux front panel LCD, specifies their type (event or state), and explains their interpretation.

Table 4-2. KVF.8 Alarm Messages

| Message | Type | Interpretation |
|----------------------------|-------|--|
| HARDWARE FAILURE SLOT i | State | A KVF.8 hardware error in the card detected during self test. |
| VOICE SYNC LOSS CH i:j | State | The local KVF.8 module installed in the specified slot i (1 through 12 for Kilomux-2100, or 1 through 4 for Kilomux-2104), and j specified channel number 1 or 2 has lost voice synchronization |
| REMOTE SYNC LOSS CH i:j | State | The remote KVF.8 module installed in the specified slot i (1 through 12 for Kilomux-2100, or 1 through 4 for Kilomux-2104), and j specified channel number 1 or 2 has lost voice synchronization |
| TDM DEVICE ERROR | State | Hardware error in card. Error writing to the NSFIFO device |
| TDM DEVICE SLIP | State | SLIP in internal port NSFIFO device (TDM device) |
| COMPRESSION ERROR | State | Error writing to compression device (DSP) |

Appendix A

Interface Specifications

A.1 KVF.8/E&M

This module has one SCSI connector, connected by cable CBL-KVF8/E&M, for each channel. The connector is wired as shown in *Table A-1*.

Table A-1. SCSI Connector Wiring for KVF.8 Family Modules

| Channel | RJ-45 | SCSI-68 | Function |
|---------|-------------|---------|------------------|
| 1 | 1 } Twisted | 37 | Signal Battery |
| | 2 } Twisted | 38 | Signaling M Lead |
| | 3 } Twisted | 1 | Voice RX Input |
| | 4 } Twisted | 2 | Voice RX Input |
| | 5 } Twisted | 3 | Voice TX Input |
| | 6 } Twisted | 4 | Voice TX Input |
| | 7 } Twisted | 35 | Signal GND |
| | 8 } Twisted | 36 | Signaling E Lead |
| 2 | 1 } Twisted | 43 | Signal Battery |
| | 2 } Twisted | 44 | Signaling M Lead |
| | 3 } Twisted | 7 | Voice RX Input |
| | 4 } Twisted | 8 | Voice RX Input |
| | 5 } Twisted | 9 | Voice TX Input |
| | 6 } Twisted | 10 | Voice TX Input |
| | 7 } Twisted | 41 | Signal GND |
| | 8 } Twisted | 42 | Signaling E Lead |
| 3 | 1 } Twisted | 49 | Signal Battery |
| | 2 } Twisted | 50 | Signaling M Lead |
| | 3 } Twisted | 13 | Voice RX Input |
| | 4 } Twisted | 14 | Voice RX Input |
| | 5 } Twisted | 15 | Voice TX Input |
| | 6 } Twisted | 16 | Voice TX Input |
| | 7 } Twisted | 47 | Signal GND |
| | 8 } Twisted | 48 | Signaling E Lead |
| 4 | 1 } Twisted | 55 | Signal Battery |
| | 2 } Twisted | 56 | Signaling M Lead |
| | 3 } Twisted | 19 | Voice RX Input |
| | 4 } Twisted | 20 | Voice RX Input |
| | 5 } Twisted | 21 | Voice TX Input |
| | 6 } Twisted | 22 | Voice TX Input |
| | 7 } Twisted | 53 | Signal GND |
| | 8 } Twisted | 54 | Signaling E Lead |

Table A-1. SCSI Connector Wiring for KVF.8 Family Modules (Cont.)

| Channel | RJ-45 | SCSI-68 | Function |
|---------|-------------|---------|------------------|
| 5 | 1 } Twisted | 61 | Signal Battery |
| | 2 } Twisted | 62 | Signaling M Lead |
| | 3 } Twisted | 25 | Voice RX Input |
| | 4 } Twisted | 26 | Voice RX Input |
| | 5 } Twisted | 27 | Voice TX Input |
| | 6 } Twisted | 28 | Voice TX Input |
| | 7 } Twisted | 59 | Signal GND |
| | 8 } Twisted | 60 | Signaling E Lead |
| 6 | 1 } Twisted | 67 | Signal Battery |
| | 2 } Twisted | 68 | Signaling M Lead |
| | 3 } Twisted | 31 | Voice RX Input |
| | 4 } Twisted | 32 | Voice RX Input |
| | 5 } Twisted | 33 | Voice TX Input |
| | 6 } Twisted | 34 | Voice TX Input |
| | 7 } Twisted | 65 | Signal GND |
| | 8 } Twisted | 66 | Signaling E Lead |
| 7 | 1 } Twisted | 45 | Signal Battery |
| | 2 } Twisted | 46 | Signaling M Lead |
| | 3 } Twisted | 5 | Voice RX Input |
| | 4 } Twisted | 6 | Voice RX Input |
| | 5 } Twisted | 11 | Voice TX Input |
| | 6 } Twisted | 12 | Voice TX Input |
| | 7 } Twisted | 39 | Signal GND |
| | 8 } Twisted | 40 | Signaling E Lead |
| 8 | 1 } Twisted | 57 | Signal Battery |
| | 2 } Twisted | 58 | Signaling M Lead |
| | 3 } Twisted | 17 | Voice RX Input |
| | 4 } Twisted | 18 | Voice RX Input |
| | 5 } Twisted | 23 | Voice TX Input |
| | 6 } Twisted | 24 | Voice TX Input |
| | 7 } Twisted | 51 | Signal GND |
| | 8 } Twisted | 52 | Signaling E Lead |

Note In the RJ-45 connectors the pins assignments are as followed:

- When using 2W mode – pin 3 and 6 are active (pin 3 as Voice RX Input and pin 6 as Voice TX Input)
- When using 4W mode – pins 3 through 6 are active (3, 4 as Voice RX Input and pins 5,6 as Voice TX Input)

A.2 KVF.8/FXS, and KVF.8/FXO Connectors

These modules have one DB-25 connector, connected by cable CBL-KVF8-FXOS, for each channel. The connector is wired as shown in *Table A-2*.

Table A-2. DB-25 Connector Wiring for KVF.8 Family Modules

| DB-25 | Channel | RJ-12 | Function |
|-------|---------|-------|----------|
| 15 | 1 | 4 | TIP |
| 3 | 1 | 3 | RING |
| 16 | 2 | 4 | TIP |
| 4 | 2 | 3 | RING |
| 17 | 3 | 4 | TIP |
| 5 | 3 | 3 | RING |
| 18 | 4 | 4 | TIP |
| 6 | 4 | 3 | RING |
| 11 | 5 | 4 | TIP |
| 24 | 5 | 3 | RING |
| 10 | 6 | 4 | TIP |
| 23 | 6 | 3 | RING |
| 9 | 7 | 4 | TIP |
| 22 | 7 | 3 | RING |
| 8 | 8 | 4 | TIP |
| 21 | 8 | 3 | RING |

A.3 DC PWR-IN Connector (For KVF.8/FXS and KVF.8/E&M)

The DC PWR-IN connector is a 3-pin circular connector, used to connect external ring and feed voltages to the KVF.8 channels via cable CBL-KVF6/8-DL. Connector wiring is given in *Table A-3*.

Table A-3. DC PWR-IN Connector Wiring

| Pin | Function |
|-----|-------------------------------|
| 1 | Ground |
| 2 | NC |
| 3 | Feed voltage (–12 to –48 VDC) |

A.4 Download Connector

These modules have one RS-232 compliant download connector for each module. The connector is wired as shown in *Table A-4*. For pin locations see *Figure 2-1*.

Table A-4. Download Connector Pinout

| Pin | Function |
|------------|-----------------|
| 1 | Tx |
| 2 | Rx |
| 3 | GND |

Appendix B

Software Download

This appendix presents the procedure for installing new software upgrade releases in the KVF.8 module. The KVF.8 module stores the software in FLASH memory. The software is stored in compressed format, and is decompressed and loaded into the module RAM upon power up. Since the FLASH memory is not used to run the software, new software can be loaded using any PC, which is directly connected to the download port of the KVF.8 module or through the Kilomux Common Logic (KCL.2). This operation can be done in any one of three ways:

1. Off line- In this case, the KVF.8 module cannot carry traffic while software is downloading. This procedure can be used to upgrade the module software version as well as to install software in a new/repaired KVF.8 module. This installation method is called **COLD** software installation. For this installation, the program **DL.exe** is required.
2. Online – This procedure can be used to upgrade the KVF.8 software while the module is operating; it is called **WARM** software installation. For software version 0.8 (or higher), the software upgrade will be downloaded using the Xmodem option in HyperTerminal. If the software version is lower than 0.8, the program **DL_IO.exe** is required.
3. File transfer via the Kilomux Common Logic – This procedure can be used to upgrade the KVF.8 software via the Kilomux Common Logic (KCL.2). This procedure is possible only if the hardware version is 0.3 (or higher), the software version is 0.8 (or higher) and the Kilomux Common Logic is KCL.2.

B.1 Installation Procedure

Software releases include the compressed software file **KVF8.arj**.

Warm Installation

Warm Installation for SW version Lower then version 0.8

While the Kilomux-2100 system is running and the KVF.8 module is installed in the system:

1. Copy the distribution file **KVF8.arj** and **DL_IO.exe** to the root directory of your PC.
2. Using the supervision port in the KCL.2 card, type the command 'LOAD IO j' (where j is the IO slot number in which the KVF.8 module is installed).

3. Wait 20 seconds while the flash memory is erased and prepares to download the new software.
4. Connect the serial port of your PC to the download port (DL) in the KVF.8 module using the download cable.
5. Run the **DL_IO.exe** program. After the program starts, select option 2, and configure the PC for downloading as follows:
 - Select option 1, and then select the PC serial port, com1 or com2, connected to the KVF.8 module.
 - Press ESC.
 - Select option 2 and type **kvf8.arj** as the file name.
 - Press ESC.
6. Begin transmitting the file by selecting option 1 from the main menu. The software file is transmitted to the KVF.8 module. You can monitor the progress of file transmission on the PC as the software is sent: The ALM indicator in the KVF.8 blinks and the LOC LED lights, as long as data transfer proceeds normally.
7. Wait until the transfer process has been successfully completed.
8. Select option 3 to exit the **DL_IO.exe** program.

Warm Installation for SW version 0.8 and Up

While the Kilomux-2100 system is running and the KVF.8 module is installed in the system:

1. Copy the distribution file **KVF8.arj** and **DL_IO.exe** to the root directory of your PC.
2. Using the supervision port in the KCL.2 card, type the command 'LOAD IO j' (where j is the IO slot number in which the KVF.8 module is installed).
3. Wait 20 seconds while the flash memory is erased and prepares to download the new software.
4. Connect the serial port of your PC to the download port (DL) in the KVF.8 module using the download cable.
5. Open HyperTerminal and configure it to operate at a rate of 57600 bps.
6. Transfer the file using the Xmodem protocol by selecting the **Send File** option as the transfer method in HyperTerminal.
7. Begin transmitting the file by selecting option 1 from the main menu. The software file is transmitted to the KVF.8 module. You can monitor the progress of file transmission on the PC as the software is sent: The ALM indicator in the KVF.8 blinks and the LOC LED lights, as long as data transfer proceeds normally.
8. Wait until the transfer process has been successfully completed.
9. Select option 3 to exit the **DL_IO.exe** program.

10. The LOC and TST LEDs light and the ALM LED blinks during decompression. After the decompression process is complete, the software runs.

Note *If a fault occurs during any state, pull the KVF.8 module out of the Kilomux-2100 system and start the procedure again – or try a cold installation.*

File Transfer via Kilomux Common Logic

This procedure can be used to upgrade the KVF.8 software via the Kilomux Common Logic (KCL.2). This procedure is possible only if the hardware version is 0.3 (or higher), the software version is 0.8 (or higher) and the Kilomux Common Logic is KCL.2 (the common logic module for Kilomux-2100/2104).

► **To upgrade software version using KCL.2, perform the following procedure:**

1. Load KCL.2 card with software that includes the new software version for KVF.8. **KM2100.arj** and **KVF8.arj** are both contained within (compressed and encapsulated within) the latest release of **KM2100.arj**.
2. Loading the KCL.2 module with **KM2100.arj** can be performed either by using TFTP or by using the **DL.exe** program.
3. Wait until KCL.2 finishes resetting and starts running the new software.
4. Load the KVF.8 module by using the **load io j kcl** command, where **j** is the Kilomux slot number in which the KVF.8 card is inserted into.
5. Wait until KCL.2 finishes transferring the new KVF.8 software to slot **j** (where the KVF.8 card is residing).

Cold Installation

To perform the cold installation procedure, please contact your local distributor.

