

RICi-4E1/T1, RICi- 8E1T1

Fast Ethernet over Four or Eight E1 or T1
NTUs

Version 2.00



RICi-4E1/T1, RICi-8E1T1

Fast Ethernet over Four or Eight E1 or T1 NTUs

Version 2.00

Installation and Operation Manual

Notice

This manual contains information that is proprietary to RAD Data Communications Ltd. ("RAD"). No part of this publication may be reproduced in any form whatsoever without prior written approval by RAD Data Communications.

Right, title and interest, all information, copyrights, patents, know-how, trade secrets and other intellectual property or other proprietary rights relating to this manual and to the RICi-4E1/T1, RICi-8E1T1 and any software components contained therein are proprietary products of RAD protected under international copyright law and shall be and remain solely with RAD.

The RICi-4E1/T1, RICi-8E1T1 product name is owned by RAD. No right, license, or interest to such trademark is granted hereunder, and you agree that no such right, license, or interest shall be asserted by you with respect to such trademark. The RAD name, logo, logotype, and the terms EtherAccess, TDMoIP and TDMoIP Driven, and the product names Optimux and IPmux, are registered trademarks of RAD Data Communications Ltd. All other trademarks are the property of their respective holders.

You shall not copy, reverse compile or reverse assemble all or any portion of the Manual or the RICi-4E1/T1, RICi-8E1T1. You are prohibited from, and shall not, directly or indirectly, develop, market, distribute, license, or sell any product that supports substantially similar functionality as the RICi-4E1/T1, RICi-8E1T1, based on or derived in any way from the RICi-4E1/T1, RICi-8E1T1. Your undertaking in this paragraph shall survive the termination of this Agreement.

This Agreement is effective upon your opening of the RICi-4E1/T1, RICi-8E1T1 package and shall continue until terminated. RAD may terminate this Agreement upon the breach by you of any term hereof. Upon such termination by RAD, you agree to return to RAD the RICi-4E1/T1, RICi-8E1T1 and all copies and portions thereof.

For further information contact RAD at the address below or contact your local distributor.

International Headquarters RAD Data Communications Ltd.	North America Headquarters RAD Data Communications Inc.
24 Raoul Wallenberg Street Tel Aviv 69719, Israel Tel: 972-3-6458181 Fax: 972-3-6498250, 6474436 E-mail: market@rad.com	900 Corporate Drive Mahwah, NJ 07430, USA Tel: (201) 5291100, Toll free: 1-800-4447234 Fax: (201) 5295777 E-mail: market@radusa.com

Limited Warranty

RAD warrants to DISTRIBUTOR that the hardware in the RICi-4E1/T1, RICi-8E1T1 to be delivered hereunder shall be free of defects in material and workmanship under normal use and service for a period of twelve (12) months following the date of shipment to DISTRIBUTOR.

If, during the warranty period, any component part of the equipment becomes defective by reason of material or workmanship, and DISTRIBUTOR immediately notifies RAD of such defect, RAD shall have the option to choose the appropriate corrective action: a) supply a replacement part, or b) request return of equipment to its plant for repair, or c) perform necessary repair at the equipment's location. In the event that RAD requests the return of equipment, each party shall pay one-way shipping costs.

RAD shall be released from all obligations under its warranty in the event that the equipment has been subjected to misuse, neglect, accident or improper installation, or if repairs or modifications were made by persons other than RAD's own authorized service personnel, unless such repairs by others were made with the written consent of RAD.

The above warranty is in lieu of all other warranties, expressed or implied. There are no warranties which extend beyond the face hereof, including, but not limited to, warranties of merchantability and fitness for a particular purpose, and in no event shall RAD be liable for consequential damages.

RAD shall not be liable to any person for any special or indirect damages, including, but not limited to, lost profits from any cause whatsoever arising from or in any way connected with the manufacture, sale, handling, repair, maintenance or use of the RICi-4E1/T1, RICi-8E1T1, and in no event shall RAD's liability exceed the purchase price of the RICi-4E1/T1, RICi-8E1T1.

DISTRIBUTOR shall be responsible to its customers for any and all warranties which it makes relating to RICi-4E1/T1, RICi-8E1T1 and for ensuring that replacements and other adjustments required in connection with the said warranties are satisfactory.

Software components in the RICi-4E1/T1, RICi-8E1T1 are provided "as is" and without warranty of any kind. RAD disclaims all warranties including the implied warranties of merchantability and fitness for a particular purpose. RAD shall not be liable for any loss of use, interruption of business or indirect, special, incidental or consequential damages of any kind. In spite of the above RAD shall do its best to provide error-free software products and shall offer free Software updates during the warranty period under this Agreement.

RAD's cumulative liability to you or any other party for any loss or damages resulting from any claims, demands, or actions arising out of or relating to this Agreement and the RICi-4E1/T1, RICi-8E1T1 shall not exceed the sum paid to RAD for the purchase of the RICi-4E1/T1, RICi-8E1T1. In no event shall RAD be liable for any indirect, incidental, consequential, special, or exemplary damages or lost profits, even if RAD has been advised of the possibility of such damages.

This Agreement shall be construed and governed in accordance with the laws of the State of Israel.

Product Disposal



To facilitate the reuse, recycling and other forms of recovery of waste equipment in protecting the environment, the owner of this RAD product is required to refrain from disposing of this product as unsorted municipal waste at the end of its life cycle. Upon termination of the unit's use, customers should provide for its collection for reuse, recycling or other form of environmentally conscientious disposal.

General Safety Instructions

The following instructions serve as a general guide for the safe installation and operation of telecommunications products. Additional instructions, if applicable, are included inside the manual.

Safety Symbols



This symbol may appear on the equipment or in the text. It indicates potential safety hazards regarding product operation or maintenance to operator or service personnel.



Danger of electric shock! Avoid any contact with the marked surface while the product is energized or connected to outdoor telecommunication lines.



Protective ground: the marked lug or terminal should be connected to the building protective ground bus.



Some products may be equipped with a laser diode. In such cases, a label with the laser class and other warnings as applicable will be attached near the optical transmitter. The laser warning symbol may be also attached.

Please observe the following precautions:

- Before turning on the equipment, make sure that the fiber optic cable is intact and is connected to the transmitter.
- Do not attempt to adjust the laser drive current.
- Do not use broken or unterminated fiber-optic cables/connectors or look straight at the laser beam.
- The use of optical devices with the equipment will increase eye hazard.
- Use of controls, adjustments or performing procedures other than those specified herein, may result in hazardous radiation exposure.

ATTENTION: The laser beam may be invisible!

In some cases, the users may insert their own SFP laser transceivers into the product. Users are alerted that RAD cannot be held responsible for any damage that may result if non-compliant transceivers are used. In particular, users are warned to use only agency approved products that comply with the local laser safety regulations for Class 1 laser products.

Always observe standard safety precautions during installation, operation and maintenance of this product. Only qualified and authorized service personnel should carry out adjustment, maintenance or repairs to this product. No installation, adjustment, maintenance or repairs should be performed by either the operator or the user.

Handling Energized Products

General Safety Practices

Do not touch or tamper with the power supply when the power cord is connected. Line voltages may be present inside certain products even when the power switch (if installed) is in the OFF position or a fuse is blown. For DC-powered products, although the voltages levels are usually not hazardous, energy hazards may still exist.

Before working on equipment connected to power lines or telecommunication lines, remove jewelry or any other metallic object that may come into contact with energized parts.

Unless otherwise specified, all products are intended to be grounded during normal use. Grounding is provided by connecting the mains plug to a wall socket with a protective ground terminal. If a ground lug is provided on the product, it should be connected to the protective ground at all times, by a wire with a diameter of 18 AWG or wider. Rack-mounted equipment should be mounted only in grounded racks and cabinets.

Always make the ground connection first and disconnect it last. Do not connect telecommunication cables to ungrounded equipment. Make sure that all other cables are disconnected before disconnecting the ground.

Some products may have panels secured by thumbscrews with a slotted head. These panels may cover hazardous circuits or parts, such as power supplies. These thumbscrews should therefore always be tightened securely with a screwdriver after both initial installation and subsequent access to the panels.

Connecting AC Mains

Make sure that the electrical installation complies with local codes.

Always connect the AC plug to a wall socket with a protective ground.

The maximum permissible current capability of the branch distribution circuit that supplies power to the product is 16A (20A for USA and Canada). The circuit breaker in the building installation should have high breaking capacity and must operate at short-circuit current exceeding 35A (40A for USA and Canada).

Always connect the power cord first to the equipment and then to the wall socket. If a power switch is provided in the equipment, set it to the OFF position. If the power cord cannot be readily disconnected in case of emergency, make sure that a readily accessible circuit breaker or emergency switch is installed in the building installation.

In cases when the power distribution system is IT type, the switch must disconnect both poles simultaneously.

Connecting DC Power

Unless otherwise specified in the manual, the DC input to the equipment is floating in reference to the ground. Any single pole can be externally grounded.

Due to the high current capability of DC power systems, care should be taken when connecting the DC supply to avoid short-circuits and fire hazards.

Make sure that the DC power supply is electrically isolated from any AC source and that the installation complies with the local codes.

The maximum permissible current capability of the branch distribution circuit that supplies power to the product is 16A (20A for USA and Canada). The circuit breaker in the building installation should have high breaking capacity and must operate at short-circuit current exceeding 35A (40A for USA and Canada).

Before connecting the DC supply wires, ensure that power is removed from the DC circuit. Locate the circuit breaker of the panel board that services the equipment and switch it to the OFF position. When connecting the DC supply wires, first connect the ground wire to the corresponding terminal, then the positive pole and last the negative pole. Switch the circuit breaker back to the ON position.

A readily accessible disconnect device that is suitably rated and approved should be incorporated in the building installation.

If the DC power supply is floating, the switch must disconnect both poles simultaneously.

Connecting Data and Telecommunications Cables

Data and telecommunication interfaces are classified according to their safety status.

The following table lists the status of several standard interfaces. If the status of a given port differs from the standard one, a notice will be given in the manual.

Ports	Safety Status
V.11, V.28, V.35, V.36, RS-530, X.21, 10 BaseT, 100 BaseT, Unbalanced E1, E2, E3, STM, DS-2, DS-3, S-Interface ISDN, Analog voice E&M	SELV Safety Extra Low Voltage: Ports which do not present a safety hazard. Usually up to 30 VAC or 60 VDC.
xDSL (without feeding voltage), Balanced E1, T1, Sub E1/T1	TNV-1 Telecommunication Network Voltage-1: Ports whose normal operating voltage is within the limits of SELV, on which overvoltages from telecommunications networks are possible.
FXS (Foreign Exchange Subscriber)	TNV-2 Telecommunication Network Voltage-2: Ports whose normal operating voltage exceeds the limits of SELV (usually up to 120 VDC or telephone ringing voltages), on which overvoltages from telecommunication networks are not possible. These ports are not permitted to be directly connected to external telephone and data lines.
FXO (Foreign Exchange Office), xDSL (with feeding voltage), U-Interface ISDN	TNV-3 Telecommunication Network Voltage-3: Ports whose normal operating voltage exceeds the limits of SELV (usually up to 120 VDC or telephone ringing voltages), on which overvoltages from telecommunication networks are possible.

Always connect a given port to a port of the same safety status. If in doubt, seek the assistance of a qualified safety engineer.

Always make sure that the equipment is grounded before connecting telecommunication cables. Do not disconnect the ground connection before disconnecting all telecommunications cables.

Some SELV and non-SELV circuits use the same connectors. Use caution when connecting cables. Extra caution should be exercised during thunderstorms.

When using shielded or coaxial cables, verify that there is a good ground connection at both ends. The grounding and bonding of the ground connections should comply with the local codes.

The telecommunication wiring in the building may be damaged or present a fire hazard in case of contact between exposed external wires and the AC power lines. In order to reduce the risk, there are restrictions on the diameter of wires in the telecom cables, between the equipment and the mating connectors.

Caution

To reduce the risk of fire, use only No. 26 AWG or larger telecommunication line cords.

Attention

Pour réduire les risques d'incendie, utiliser seulement des conducteurs de télécommunications 26 AWG ou de section supérieure.

Some ports are suitable for connection to intra-building or non-exposed wiring or cabling only. In such cases, a notice will be given in the installation instructions.

Do not attempt to tamper with any carrier-provided equipment or connection hardware.

Electromagnetic Compatibility (EMC)

The equipment is designed and approved to comply with the electromagnetic regulations of major regulatory bodies. The following instructions may enhance the performance of the equipment and will provide better protection against excessive emission and better immunity against disturbances.

A good ground connection is essential. When installing the equipment in a rack, make sure to remove all traces of paint from the mounting points. Use suitable lock-washers and torque. If an external grounding lug is provided, connect it to the ground bus using braided wire as short as possible.

The equipment is designed to comply with EMC requirements when connecting it with unshielded twisted pair (UTP) cables. However, the use of shielded wires is always recommended, especially for high-rate data. In some cases, when unshielded wires are used, ferrite cores should be installed on certain cables. In such cases, special instructions are provided in the manual.

Disconnect all wires which are not in permanent use, such as cables used for one-time configuration.

The compliance of the equipment with the regulations for conducted emission on the data lines is dependent on the cable quality. The emission is tested for UTP with 80 dB longitudinal conversion loss (LCL).

Unless otherwise specified or described in the manual, TNV-1 and TNV-3 ports provide secondary protection against surges on the data lines. Primary protectors should be provided in the building installation.

The equipment is designed to provide adequate protection against electro-static discharge (ESD). However, it is good working practice to use caution when connecting cables terminated with plastic connectors (without a grounded metal hood, such as flat cables) to sensitive data lines. Before connecting such cables, discharge yourself by touching ground or wear an ESD preventive wrist strap.

FCC-15 User Information

This equipment has been tested and found to comply with the limits of the Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the Installation and Operation manual, may cause harmful interference to the radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Canadian Emission Requirements

This Class A digital apparatus meets all the requirements of the Canadian Interference-Causing Equipment Regulation.

Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

Warning per EN 55022 (CISPR-22)

Warning

This is a class A product. In a domestic environment, this product may cause radio interference, in which case the user will be required to take adequate measures.


Avertissement

Cet appareil est un appareil de Classe A. Dans un environnement résidentiel, cet appareil peut provoquer des brouillages radioélectriques. Dans ces cas, il peut être demandé à l'utilisateur de prendre les mesures appropriées.

Achtung

Das vorliegende Gerät fällt unter die Funkstörgrenzwertklasse A. In Wohngebieten können beim Betrieb dieses Gerätes Rundfunkstörungen auftreten, für deren Behebung der Benutzer verantwortlich ist.

Mise au rebut du produit

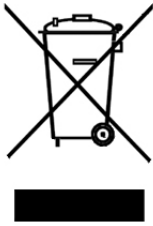

Afin de faciliter la réutilisation, le recyclage ainsi que d'autres formes de récupération d'équipement mis au rebut dans le cadre de la protection de l'environnement, il est demandé au propriétaire de ce produit RAD de ne pas mettre ce dernier au rebut en tant que déchet municipal non trié, une fois que le produit est arrivé en fin de cycle de vie. Le client devrait proposer des solutions de réutilisation, de recyclage ou toute autre forme de mise au rebut de cette unité dans un esprit de protection de l'environnement, lorsqu'il aura fini de l'utiliser.

Instructions générales de sécurité

Les instructions suivantes servent de guide général d'installation et d'opération sécurisées des produits de télécommunications. Des instructions supplémentaires sont éventuellement indiquées dans le manuel.

Symboles de sécurité



Avertissement

Ce symbole peut apparaître sur l'équipement ou dans le texte. Il indique des risques potentiels de sécurité pour l'opérateur ou le personnel de service, quant à l'opération du produit ou à sa maintenance.



Danger de choc électrique ! Evitez tout contact avec la surface marquée tant que le produit est sous tension ou connecté à des lignes externes de télécommunications.



Mise à la terre de protection : la cosse ou la borne marquée devrait être connectée à la prise de terre de protection du bâtiment.



Certains produits peuvent être équipés d'une diode laser. Dans de tels cas, une étiquette indiquant la classe laser ainsi que d'autres avertissements, le cas échéant, sera jointe près du transmetteur optique. Le symbole d'avertissement laser peut aussi être joint.

Veuillez observer les précautions suivantes :

- Avant la mise en marche de l'équipement, assurez-vous que le câble de fibre optique est intact et qu'il est connecté au transmetteur.
- Ne tentez pas d'ajuster le courant de la commande laser.
- N'utilisez pas des câbles ou connecteurs de fibre optique cassés ou sans terminaison et n'observez pas directement un rayon laser.
- L'usage de périphériques optiques avec l'équipement augmentera le risque pour les yeux.
- L'usage de contrôles, ajustages ou procédures autres que celles spécifiées ici pourrait résulter en une dangereuse exposition aux radiations.

ATTENTION : Le rayon laser peut être invisible !

Les utilisateurs pourront, dans certains cas, insérer leurs propres émetteurs-récepteurs Laser SFP dans le produit. Les utilisateurs sont avertis que RAD ne pourra pas être tenue responsable de tout dommage pouvant résulter de l'utilisation d'émetteurs-récepteurs non conformes. Plus particulièrement, les utilisateurs sont avertis de n'utiliser que des produits approuvés par l'agence et conformes à la réglementation locale de sécurité laser pour les produits laser de classe 1.

Respectez toujours les précautions standards de sécurité durant l'installation, l'opération et la maintenance de ce produit. Seul le personnel de service qualifié et autorisé devrait effectuer l'ajustage, la maintenance ou les réparations de ce produit. Aucune opération d'installation, d'ajustage, de maintenance ou de réparation ne devrait être effectuée par l'opérateur ou l'utilisateur.

Manipuler des produits sous tension

Règles générales de sécurité

Ne pas toucher ou altérer l'alimentation en courant lorsque le câble d'alimentation est branché. Des tensions de lignes peuvent être présentes dans certains produits, même lorsque le commutateur (s'il est installé) est en position OFF ou si le fusible est rompu. Pour les produits alimentés par CC, les niveaux de tension ne sont généralement pas dangereux mais des risques de courant peuvent toujours exister.

Avant de travailler sur un équipement connecté aux lignes de tension ou de télécommunications, retirez vos bijoux ou tout autre objet métallique pouvant venir en contact avec les pièces sous tension.

Sauf s'il en est autrement indiqué, tous les produits sont destinés à être mis à la terre durant l'usage normal. La mise à la terre est fournie par la connexion de la fiche principale à une prise murale équipée d'une borne protectrice de mise à la terre. Si une cosse de mise à la terre est fournie avec le produit, elle devrait être connectée à tout moment à une mise à la terre de protection par un conducteur de diamètre 18 AWG ou plus. L'équipement monté en châssis ne devrait être monté que sur des châssis et dans des armoires mises à la terre.

Branchez toujours la mise à la terre en premier et débranchez-la en dernier. Ne branchez pas des câbles de télécommunications à un équipement qui n'est pas mis à la terre. Assurez-vous que tous les autres câbles sont débranchés avant de déconnecter la mise à la terre.

Connexion au courant du secteur

Assurez-vous que l'installation électrique est conforme à la réglementation locale.

Branchez toujours la fiche de secteur à une prise murale équipée d'une borne protectrice de mise à la terre.

La capacité maximale permise en courant du circuit de distribution de la connexion alimentant le produit est de 16A (20A aux États-Unis et Canada). Le coupe-circuit dans l'installation du bâtiment devrait avoir une capacité élevée de rupture et devrait fonctionner sur courant de court-circuit dépassant 35A (40A aux États-Unis et Canada).

Branchez toujours le câble d'alimentation en premier à l'équipement puis à la prise murale. Si un commutateur est fourni avec l'équipement, fixez-le en position OFF. Si le câble d'alimentation ne peut pas être facilement débranché en cas d'urgence, assurez-vous qu'un coupe-circuit ou un disjoncteur d'urgence facilement accessible est installé dans l'installation du bâtiment.

Le disjoncteur devrait déconnecter simultanément les deux pôles si le système de distribution de courant est de type IT.

Connexion d'alimentation CC

Sauf s'il en est autrement spécifié dans le manuel, l'entrée CC de l'équipement est flottante par rapport à la mise à la terre. Tout pôle doit être mis à la terre en externe.

A cause de la capacité de courant des systèmes à alimentation CC, des précautions devraient être prises lors de la connexion de l'alimentation CC pour éviter des courts-circuits et des risques d'incendie.

Assurez-vous que l'alimentation CC est isolée de toute source de courant CA (secteur) et que l'installation est conforme à la réglementation locale.

La capacité maximale permise en courant du circuit de distribution de la connexion alimentant le produit est de 16A (20A aux États-Unis et Canada). Le coupe-circuit dans l'installation du bâtiment devrait avoir une capacité élevée de rupture et devrait fonctionner sur courant de court-circuit dépassant 35A (40A aux États-Unis et Canada).

Avant la connexion des câbles d'alimentation en courant CC, assurez-vous que le circuit CC n'est pas sous tension. Localisez le coupe-circuit dans le tableau desservant l'équipement et fixez-le en position OFF. Lors de la connexion de câbles d'alimentation CC, connectez d'abord le conducteur de mise à la terre à la borne correspondante, puis le pôle positif et en dernier, le pôle négatif. Remettez le coupe-circuit en position ON.

Un disjoncteur facilement accessible, adapté et approuvé devrait être intégré à l'installation du bâtiment.

Le disjoncteur devrait déconnecter simultanément les deux pôles si l'alimentation en courant CC est flottante.



Declaration of Conformity

Manufacturer's Name:		RAD Data Communications Ltd.
Manufacturer's Address:		24 Raoul Wallenberg St., Tel Aviv 6971920, Israel
		declares that the products:
Products Name:		RICi-8E1, RICi-8T1, RICi-4E1, RICi-4T1
Product Options:		All
		conform to the following standard(s) or other normative document(s):
EMC	EN 55022:2010	Information technology equipment; Radio disturbance characteristics; Limits and methods of measurement.
	EN 55024:2010 (in accordance with EN 61000-4- 2/3/4/5/6/11)	Information technology equipment; Immunity characteristics; Limits and methods of measurement.
	EN 61000-3-2:2006	Electromagnetic compatibility (EMC); Section 3-2: Limits for harmonic current emissions (equipment input current 16A per phase)
	EN 61000-3-3:2008	Electromagnetic compatibility (EMC); Section 3-3: Limits - Limitation of voltage changes, voltage fluctuations and flicker in public low-voltage supply systems, for equipment with rated current ≤ 16A per phase and not subject to conditional connection.
Safety	EN 60950-1:2006 + A11:2009, A1:2010 + A12:2011,A2:2012	Information technology equipment; Safety – Part 1: General requirements.
Supplementary Information:		The products herewith comply with the requirements of the EMC Directive 2004/108/EC, the Low Voltage Directive 2006/95/EC, the R&TTE Directive 99/5/EC for wired equipment and the ROHS Directive 2011/65/EU. The products were tested in a typical configuration.
Tel Aviv, 2 April 2014		
		
Nathaniel Shomroni Homologation Team Leader		
European Contact:		RAD Data Communications GmbH Otto-Hahn-Str. 28-30, D-85521 Ottobrunn-Riemerling, Germany

Glossary

Address	A coded representation of the origin or destination of data.
Agent	In SNMP, this refers to the managed system.
Analog	A continuous wave or signal (such as human voice).
ANSI	American National Standards Institute.
AWG	The American Wire Gauge System, which specifies wire width.
Backhaul	Transporting traffic between distributed sites (typically access points) and more centralized points of presence. See Cellular Backhaul .
Balanced	A transmission line in which voltages on the two conductors are equal in magnitude, but opposite in polarity, with respect to ground.
Bandwidth	The range of frequencies passing through a given circuit. The greater the bandwidth, the more information can be sent through the circuit in a given amount of time.
Baud	Unit of signaling speed equivalent to the number of discrete conditions or events per second. If each signal event represents only one bit condition, baud rate equals bps (bits per second).
Bit	The smallest unit of information in a binary system. Represents either a one or zero ("1" or "0").
bps (Bits Per Second)	A measure of data transmission rate in serial transmission.
Bridge	A device interconnecting local area networks at the OSI data link layer, filtering and forwarding frames according to media access control (MAC) addresses.
Buffer	A storage device. Commonly used to compensate for differences in data rates or event timing when transmitting from one device to another. Also used to remove jitter.
Bus	A transmission path or channel. A bus is typically an electrical connection with one or more conductors, where all attached devices receive all transmissions at the same time.
Byte	A group of bits (normally 8 bits in length).
Carrier	A continuous signal at a fixed frequency that is capable of being modulated with a second (information carrying) signal.
Cell	The 53-byte basic information unit within an ATM network. The user traffic is segmented into cells at the source and reassembled at the destination. An ATM cell consists of a 5-byte ATM header and a 48-byte ATM payload, which contains the user data.

Channel	A path for electrical transmission between two or more points. Also called a link, line, circuit or facility.
Clock	A term for the source(s) of timing signals used in synchronous transmission.
Compression	Any of several techniques that reduce the number of bits required to represent information in data transmission or storage, thereby conserving bandwidth and/or memory.
Congestion	A state in which the network is overloaded and starts to discard user data (frames, cells or packets).
Data	Information represented in digital form, including voice, text, facsimile and video.
Data Link Layer	Layer 2 of the OSI model. The entity, which establishes, maintains, and releases data-link connections between elements in a network. Layer 2 is concerned with the transmission of units of information, or frames, and associated error checking.
Diagnostics	The detection and isolation of a malfunction or mistake in a communications device, network or system.
Digital	The binary ("1" or "0") output of a computer or terminal. In data communications, an alternating, non-continuous (pulsating) signal.
E1 Line	A 2.048 Mbps line, common in Europe, that supports thirty-two 64 kbps channels, each of which can transmit and receive data or digitized voice. The line uses framing and signaling to achieve synchronous and reliable transmission. The most common configurations for E1 lines are E1 PRI, and unchannelized E1.
E3	The European standard for high speed digital transmission, operating at 34 Mbps.
Encapsulation	Encapsulating data is a technique used by layered protocols in which a low level protocol accepts a message from a higher level protocol, then places it in the data portion of the lower-level frame. The logistics of encapsulation require that packets traveling over a physical network contain a sequence of headers.
Equalizer	A device that compensates for distortion due to signal attenuation and propagation time with respect to frequency. It reduces the effects of amplitude, frequency and/or phase distortion.
Ethernet	A local area network (LAN) technology which has extended into the wide area networks. Ethernet operates at many speeds, including data rates of 10 Mbps (Ethernet), 100 Mbps (Fast Ethernet), 1,000 Mbps (Gigabit Ethernet), 10 Gbps, 40 Gbps, and 100 Gbps.
Ethernet OAM	Ethernet operation, administration and maintenance (OAM) are a set of standardized protocols for measuring and controlling network performance. There are two layers of Ethernet OAM: Service OAM (provides end-to-end connectivity fault management per customer service instance, even in multi-operator networks) and Link or Segment OAM (detailed monitoring and troubleshooting of an individual physical or emulated link).
Flow Control	A congestion control mechanism that results in an ATM system

	implementing flow control.
Frame	A logical grouping of information sent as a link-layer unit over a transmission medium. The terms packet, datagram, segment, and message are also used to describe logical information groupings.
Framing	At the physical and data link layers of the OSI model, bits are fit into units called frames. Frames contain source and destination information, flags to designate the start and end of the frame, plus information about the integrity of the frame. All other information, such as network protocols and the actual payload of data, is encapsulated in a packet, which is encapsulated in the frame.
Full Duplex	A circuit or device permitting transmission in two directions (sending and receiving) at the same time.
FXO (Foreign Exchange Office)	A voice interface, emulating a PBX extension, as it appears to the CO (Central Office) for connecting a PBX extension to a multiplexer.
FXS (Foreign Exchange Subscriber)	A voice interface, emulating the extension interface of a PBX (or subscriber interface of a CO) for connecting a regular telephone set to a multiplexer.
G.703	An ITU standard for the physical and electrical characteristics of various digital interfaces, including those at 64 kbps and 2.048 Mbps.
Gateway	Gateways are points of entrance and exit from a communications network. Viewed as a physical entity, a gateway is that node that translates between two otherwise incompatible networks or network segments. Gateways perform code and protocol conversion to facilitate traffic between data highways of differing architecture.
Half Duplex	A circuit or device capable of transmitting in two directions, but not at the same time.
Interface	A shared boundary, defined by common physical interconnection characteristics, signal characteristics, and meanings of exchanged signals.
IP Address	Also known as an Internet address. A unique string of numbers that identifies a computer or device on a TCP/IP network. The format of an IP address is a 32-bit numeric address written as four numbers from 0 to 255, separated by periods (for example, 1.0.255.123).
Jitter	The deviation of a transmission signal in time or phase. It can introduce errors and loss of synchronization in high speed synchronous communications.
Laser	A device that transmits an extremely narrow and coherent beam of electromagnetic energy in the visible light spectrum. Used as a light source for fiber optic transmission (generally more expensive, shorter lived, single mode only, for greater distances than LED).
Loop Start	The most commonly used method of signaling an off-hook condition between an analog phone set and a switch, where picking up the receiver closes a wire loop, allowing DC current to flow, which is detected by a PBX or local exchange and interpreted as a request for service.

Loopback	A type of diagnostic test in which the transmitted signal is returned to the sending device after passing through all or part of a communications link or network.
Manager	An application that receives Simple Network Management Protocol (SNMP) information from an agent. An agent and manager share a database of information, called the Management Information Base (MIB). An agent can use a message called a traps-PDU to send unsolicited information to the manager. A manager that uses the RADview MIB can query the RAD device, set parameters, sound alarms when certain conditions appear, and perform other administrative tasks.
Master Clock	The source of timing signals (or the signals themselves) that all network stations use for synchronization.
Multiplexer	At one end of a communications link, a device that combines several lower speed transmission channels into a single high speed channel. A multiplexer at the other end reverses the process. Sometimes called a mux. See Bit Interleaving/Multiplexing .
Network	(1) An interconnected group of nodes. (2) A series of points, nodes, or stations connected by communications channels; the collection of equipment through which connections are made between data stations.
Node	A point of interconnection to a network.
Off-Hook	A state that results when you lift a telephone receiver, producing a busy signal.
Packet	An ordered group of data and control signals transmitted through a network, as a subset of a larger message.
Payload	The 48-byte segment of the ATM cell containing user data. Any adaptation of user data via the AAL will take place within the payload.
Physical Layer	Layer 1 of the OSI model. The layer concerned with electrical, mechanical, and handshaking procedures over the interface connecting a device to the transmission medium.
Polling	See Multidrop .
Port	The physical interface to a computer or multiplexer, for connection of terminals and modems.
Protocol	A formal set of conventions governing the formatting and relative timing of message exchange between two communicating systems.
Serial Transmission	A common mode of transmission, where the character bits are sent sequentially one at a time instead of in parallel.
Single Mode	Describing an optical wave-guide or fiber that is designed to propagate light of only a single wavelength (typically 5-10 microns in diameter).
Space	In telecommunications, the absence of a signal. Equivalent to a binary 0.

Quick Start Guide

Your unit should only be installed by an experienced technician. If you are familiar with RICI-4E1/T1, RICI-8E1/T1, use this guide to prepare the units for operation.

1. Installing RICI-4E1/T1, RICI-8E1/T1

Connecting the Interfaces

1. Connect the network to the RJ-45 connector designated **E1** or **T1**.
 - In case of fiber optical interfaces, first insert the SFP and then connect the Ethernet equipment using a standard fiber optic cable terminated with an LC connector.
2. Connect the user LAN to the RJ-45 connector designated **10/100 BaseT**.
3. Connect a terminal to the front panel CONTROL connector

OR

Connect a Telnet host, a PC running a Web browsing application, or an SNMP management station to the Ethernet port assigned to management.

Connecting the Power

- Connect the power cable to the power connector on the rear panel.

The unit has no power switch. It starts operating when the power connector at the rear is connected to the mains.

2. Configuring RICi-4E1/T1, RICi-8E1/T1

Configure RICi-4E1/T1, RICi-8E1/T1 to the desired operation mode via an ASCII terminal connected to the front panel CONTROL port. After configuring, you can manage the unit over Telnet, a PC running a Web browsing application, or SNMP via either the Ethernet or E1 port.

Note

Remote management requires assigning an IP address.

Starting a Terminal Session for the First Time

For first use, you have to use an ASCII terminal to configure RICi-4E1/T1, RICi-8E1/T1.

➤ **To start a terminal session:**

1. If not already done, connect a terminal to the CONTROL connector.
2. Turn on the control terminal PC and set its default port parameters to a baud rate of 115,200 bps, 8 data, 1 stop bit and no parity.
3. Set the terminal emulator to ANSI VT100 emulation (to ensure an optimal view of system menus).
4. Set the terminal screen width to 132 characters.
5. Enter your user name and password and proceed with the management session.

Note

*The default user name is **su**, and the default password is **1234**.*

Configuring the IP Management Parameters

You have to configure the IP address, the subnet mask, and the default gateway.

➤ **To configure IP management parameters:**

- Navigate to the Host IP menu (Main > Configuration > System > Management > **Host IP**) and configure the required IP host parameters.

Configuring Ports at the Physical Level

You have to first configure the ports at the physical level.

- **To configure the Fast Ethernet ports:**
 1. From the Physical Ports menu (Main > Configuration > **Physical Ports**), go to **Activation** and activate or deactivate the ports as needed.
 2. Disable or enable Auto Negotiation, Flow Control and MDIX Auto Cross Over as needed.
- **To configure E1/T1 ports:**
 1. From the Physical Port menu (Main > Configuration > **Physical Port**), choose the port type.
 2. Under **Activation**, activate or deactivate the port as needed.
 3. Configure the required parameters associated with the relevant port.

Configuring the Bridge

The bridge parameters, as well as the bridge ports and the VLAN memberships, must be configured according to your application requirements.

- **To configure the bridge:**
 - From the Bridge menu (Main > Configuration > Applications > Bridge), configure the VLAN and filtering modes of the RICi-4E1/T1, RICi-8E1/T1 bridges.
- **To configure the bridge ports:**
 - From the Bridge Port menu (Configuration > Applications > Bridge > Bridge Port), select a bridge port and configure the necessary parameters.
- **To configure the VLAN memberships:**
 - From the VLAN Membership menu (Configuration > Applications > Bridge > VLAN Membership), create a new VLAN and define the egress tagged and untagged ports which are the VLAN members.

Configuring the QoS

In order to prioritize the traffic, you have to choose a priority classification method and assign priorities to the traffic queues according to the selected method.

- **To select a priority classification method:**
 - From the QoS menu (Main > Configuration > Applications > **QoS**), select **Priority Classification** and choose the desired traffic classification method: 802.1p, DSCP or Per Port.
- **To assign priorities to the traffic queues:**
 - From the Priority Mapping menu (Main > Configuration > Applications > **QoS**), select **Priority Mapping** and assign priorities to the traffic queues according to the selected method.

Contents

Chapter 1. Introduction

1.1 Overview.....	1-1
Product Options.....	1-1
Applications.....	1-2
Features	1-2
1.2 Physical Description	1-6
1.3 Functional Description.....	1-7
Bridge.....	1-7
Quality of Service.....	1-14
Management	1-15
1.4 Technical Specifications.....	1-16
General.....	1-16
Interfaces	1-17

Chapter 2. Installation and Setup

2.1 Introduction.....	2-1
2.2 Site Requirements and Prerequisites	2-1
2.3 Package Contents	2-2
2.4 Required Equipment.....	2-2
2.5 Mounting the Unit.....	2-3
2.6 Installing Fiber Optic SFP Modules	2-3
2.7 Connecting to Ethernet Equipment.....	2-4
2.8 Connecting to E1/T1 Equipment	2-5
2.9 Connecting to Management Stations.....	2-6
Connecting to an ASCII Terminal.....	2-6
2.10 Connecting to Power.....	2-7
Connecting AC Power.....	2-7
Connecting DC Power.....	2-7

Chapter 3. Operation

3.1 Turning On the Unit	3-1
3.2 Indicators	3-2
3.3 Default Settings.....	3-4
3.4 Configuration and Management Alternatives	3-8
Working with an ASCII Terminal	3-8
Working with Web Terminal.....	3-10
Working with RADview-Lite	3-12
Menu Map	3-13
3.5 Turning Off the Unit.....	3-14

Chapter 4. Configuration

4.1 Configuring for Management.....	4-1
Defining Host IP Parameters	4-2
Entering Device Information.....	4-4
Controlling Management Access.....	4-4
Configuring User Access.....	4-5
Configuring Network Managers	4-6

Configuring Radius Client	4-7
Defining the Access Policy.....	4-9
Configuring Control Port Parameters	4-10
4.2 Configuring for Operation	4-10
Setting Device-Level Parameters	4-10
Setting Physical Layer Parameters	4-12
Setting Logical Layer Parameters.....	4-17
Setting Application-Level Parameters	4-18
4.3 Additional Tasks.....	4-34
Configuring Date and Time.....	4-34
Configuring the Syslog Parameters.....	4-35
Viewing Inventory	4-37
Transferring Software and Configuration Files	4-38
Resetting RICI-4E1/T1, RICI-8E1/T1.....	4-39

Chapter 5. Configuring a Typical Application

5.1 Application Requirements.....	5-1
5.2 Configuring the Management Parameters	5-2
Defining the Host	5-2
Defining the Default Gateway	5-2
Defining Managers.....	5-3
5.3 Configuring E1/T1 Physical Layer	5-4
5.4 Configuring the Bridge	5-4
Defining the Bridge.....	5-4
Defining Bridge Ports	5-5
Defining VLAN Memberships	5-5

Chapter 6. Troubleshooting and Diagnostics

6.1 Monitoring Performance.....	6-1
Viewing System Status Information	6-1
Viewing Physical Layer Status.....	6-2
Viewing Application-Level Status	6-3
Viewing Interface Statistics	6-4
6.2 Handling Alarms and Traps	6-6
Displaying Events.....	6-6
Clearing Events	6-7
Traps Generated by RICI-4E1/T1, RICI-8E1/T1	6-8
6.3 Troubleshooting.....	6-9
6.4 Testing the Unit	6-10
Running a Ping Test	6-10
Tracing the Route	6-10
Performing a Loopback Test on E1/T1 Links	6-11
Performing Bit Error Rate Test (BERT).....	6-12
Running OAM Tests.....	6-13
6.5 Technical Support	6-20

Appendix A. Connector Wiring

Appendix B. Boot Sequence and Downloading Software

Chapter 1

Introduction

1.1 Overview

RICi-4E1/T1, RICi-8E1/T1 is a Network Termination Unit (NTU) connecting Fast Ethernet LANs over four or eight E1 or T1 circuits. RICi-4E1/T1, RICi-8E1/T1 is part of RAD's RICi product family. It enables service provisioning and backhaul applications over low- and high-speed SDH/SONET and PDH circuits, from fractional and full E1/T1 and E3/T3 over STM-1/OC-3 and STM-4/OC-12 to Ethernet networks.

RICi-4E1/T1, RICi-8E1/T1 can bond four or eight E1 or T1 ports together using Multilink PPP (MLPPP), creating a large virtual pipe.

RICi-4E1/T1, RICi-8E1/T1 provides Layer-2 switching (bridge) between the Ethernet ports and the E1/T1 port, including VLAN-unaware and VLAN-aware bridging modes supporting VLAN based Layer-2 VPNs.

Depending on the hardware configuration, RICi-4E1/T1, RICi-8E1/T1 provides 4 x 10/100BaseT or 2 x 10/100BaseT and 2 x SFP-based 100BaseFx Fast Ethernet ports. In the 4 x 10/100BaseT configuration, you may use one Ethernet port for out-of-band management. In addition, RICi-4E1/T1, RICi-8E1/T1 collects data that allows monitoring the performance and troubleshooting.

Serial data in RICi-4E1/T1 passes via the E1/T1 port and has priority over the LAN traffic.

RICi-4E1/T1, RICi-8E1/T1 supports Telnet, Web terminal, and SNMP for inband configuration and management, as well as an ASCII terminal for out-of-band management.

RICi-4E1/T1, RICi-8E1/T1 ships as a compact standalone enclosure (1U, 8.5" wide), with an optional 19" rack mounting kit.

Product Options

Uplink Options

The following uplink options are available:

- **RICi-4E1 and RICi-4T1:** Four E1/T1 ports
- **RICi-8E1 and RICi-8T1:** Eight E1/T1 ports.

The E1 ports can be balanced or unbalanced.

Ethernet Port Options

RICi-4E1/T1, RICi-8E1/T1 has four Fast Ethernet interfaces, available in one of the following configurations:

- 4 x 10/100BaseT copper ports. The fourth port can be dedicated for out-of-band management.
- 2 x 10/100BaseT copper ports plus 2 x SFP-based 100BaseFx optical ports.

Applications

Typical applications include Ethernet VPN services over E1/T1 links, and aggregation of enterprise LANs over E1/T1.

Figure 1-1 illustrates a typical application, where a unit connects users in remote LANs to the packet network over E1/T1 with an SDH/SONET connection.

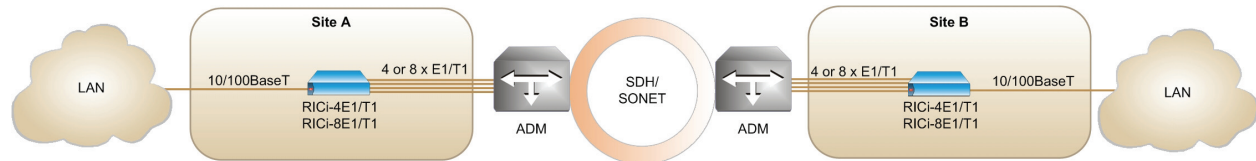


Figure 1-1. Typical Application

Features

Ethernet Interfaces

The Fast Ethernet interfaces operate in full or half (10/100BaseT only) duplex, with flow control (pause frames). Ethernet and 802.3 standards are supported.

Copper Ethernet physical interfaces are electrical 10/100BaseT and support autonegotiation.

Optical Ethernet physical interfaces are SFP-based 100BaseFx.

In 4 x 10/100BaseT configurations, you can dedicate the fourth port to out-of-band local management.

The Ethernet ports can be configured to accept traffic only from the first MAC address(es) from which they receive traffic. You can configure how many MAC addresses should be protected in this way, for each Ethernet port.

WAN Interfaces

RICi-4E1/T1, RICi-8E1/T1 supports four or eight unframed E1 or eight framed T1 interfaces.

The E1 ports support a data rate of 2.048 Mbps, unframed, and are G.703 compliant.

The T1 ports support a data rate of 1.544 Mbps, with D4 or ESF framing. The ports are compliant with AT&T TR62411 and ANSI T1.403 standards.

MLPPP

The unit bonds four or eight E1/T1 ports utilizing the Multilink Point-to-Point Protocol (MLPPP), bridging the bandwidth gap between E1/T1 and E3/T3, and creating a large virtual pipe.

Bridge

RICi-4E1/T1, RICi-8E1/T1 provides a bridging mechanism between the following bridge ports:

- Fast Ethernet ports
- MLPPP bundle over E1/T1 ports (Ethernet over E1/T1)
- Internal host.

The internal bridge operates in VLAN-unaware or VLAN-aware modes.

The VLAN-aware bridge mode allows the user to create a subgroup of bridge ports within the bridge. Each such subgroup is associated with a unique VID. Frames can be forwarded only between bridge ports that are members of the same VLAN, thus enabling a total separation between different VLAN users within the same bridge.

In the VLAN-unaware Bridge mode the bridge ignores VLAN tags and forwards frames only according to the MAC addresses of their sources and destinations.

Ethernet Type (TPID) is configurable per bridge port, therefore the RICi-4E1/T1, RICi-8E1/T1 unit can be used in networks utilizing Ethertypes other than the 802.1q Ethertype 0x8100.

RICi-4E1/T1, RICi-8E1/T1 supports QoS mapping from Ethernet ports, Ethernet VLAN priority (802.1p), or DSCP to egress queue priority at E1/T1 level.

Ethernet OAM

RICi-4E1/T1, RICi-8E1/T1 provides Ethernet end-to-end OAM based on 802.1ag and Y.1731 to enable Ethernet service providers to monitor their services proactively, measure end-to-end performance, and guarantee that the customers receive the contracted SLA. Fault monitoring and performance measurement include Frame Delay, Frame Delay Variation, Frame Loss, and Frame Availability.

Management

Setup, control, and monitoring of status and diagnostics can be performed using the following methods:

- Inband or out-of-band management:
 - **Inband.** Local and remote management via an Ethernet or E1/T1 port.
 - **Out-of-band.** Management via a local ASCII terminal connected to the V.24 (RS-232) DCE control port. In devices with four electrical 10/100BaseT ports, the fourth Ethernet port can be configured as an out-of-band management port.
 - The device can be managed via Telnet, Web browser, or SNMP (RADview-Lite).
- **Web terminal.** This tool is a user-friendly Web-based element management system for remote device configuration and maintenance. It is embedded in the units and is provided at no extra cost. The Web terminal application can be run from any standard Web browser.

- **RADview-Lite.** RAD's SNMP-based element management software, providing SNMP traps, status polling, and configuration download. Remote element management is available in RADview-Lite via Web-based application.

The following functionalities are available with the internal management software:

- Viewing system information
- Modifying configuration and mode of operation, including setting system default values and resetting the unit
- Monitoring performance
- Initiating connectivity tests
- Ping and Trace Route
- Remote software and configuration download/upload (TFTP)
- Upgrading software.

Security

The management applications are password protected.

RICi-4E1/T1, RICi-8E1/T1 supports the following access authorization levels:

- Super-user mode for configuration and monitoring
- User mode for monitoring and configuration view only.

Note *You must re-enter the user name and the password if five minutes have elapsed without entering at least one character.*

The units support the following security protocols, providing a high level of client server communication security.

- RADIUS authentication
- SSL for Web based management application
- SSH for Secure Shell communication session

Remote Monitoring with Syslog

RICi-4E1/T1, RICi-8E1/T1 uses the Syslog protocol to generate and transport event notification messages over IP networks to up to five central Syslog servers. The Syslog operation is compliant with RFC 3164.

Timing

RICi-4E1/T1, RICi-8E1/T1 has a single clock domain with master and fallback sources for timing. The clock source can be the internal oscillator or loopback timing (LBT) from an E1/T1 link.

Diagnostics

RICi-4E1/T1, RICi-8E1/T1 offers several types of diagnostic and troubleshooting procedures:

- Remote loopbacks on the E1/T1 ports, towards line
- Ping tests
- Trace Route
- Bit Error Rate Test (BERT) on the E1/T1 ports
- Events/Traps – Traps can be masked, per manager IP address, upon user configuration.

Statistics

RICi-4E1/T1, RICi-8E1/T1 provides statistics and counter capabilities at the physical Ethernet and MLPPP level (logical layer), and frame statistics at the E1/T1 level.

Event Log File

The event log file includes entries at the system, Ethernet, and E1/T1 levels. The events are stored and time-stamped in an event log file. Up to 1000 cyclic entries are maintained.

The NTP client is integrated in RICi-4E1/T1, RICi-8E1/T1. If an NTP server is available, log file events are marked with the time and the date received from it. If no NTP server is available, log files are marked with the elapsed time since the system was started.

Temperature-Hardened Version

A temperature-hardened version is available, significantly extending the permitted operating temperature range.

Compact Size

RICi-4E1/T1, RICi-8E1/T1 is compact, 1U high and half the width of a standard 19" rack. It can be mounted in a rack or used as a standalone unit.

1.2 Physical Description

RICi-4E1/T1, RICi-8E1/T1 is a 1U standalone or rack mountable unit.

[Figure 1-2](#) illustrates a three-dimensional view of RICi-4E1 and RICi-8E1 with Ethernet and E1 interfaces. The remaining versions within this range are similar with respect to corresponding numbers of E1 or T1 interfaces. Front panels are illustrated in [Chapter 3](#).

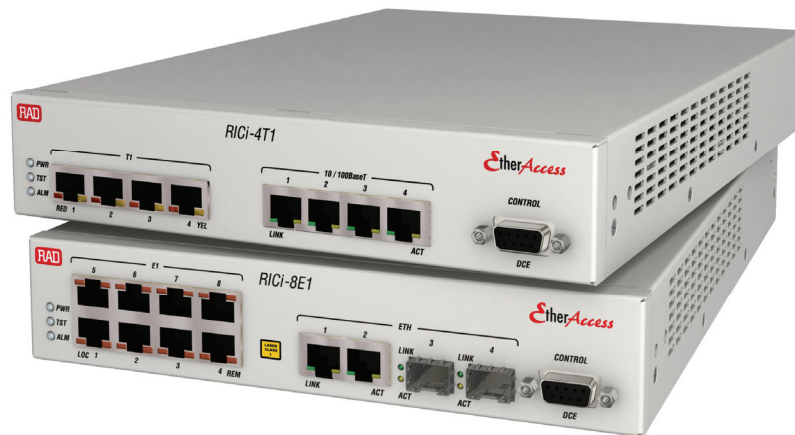


Figure 1-2. 3-D View

LEDs, interface, and control connectors are located on the front panel. For additional information, refer to [Chapter 2](#). The power connector is located on the rear panel.

1.3 Functional Description

This section lists and explains the key features of RICi-4E1/T1, RICi-8E1/T1.

Bridge

RICi-4E1/T1, RICi-8E1/T1 has multi-port bridging capability with up to six bridge ports. The bridge supports two modes of operation, VLAN-aware and VLAN-unaware.

The mechanism of each mode can be described as five different processes:

- **Ingress.** Checks each frame entering the bridge to decide if and how this frame should be passed on to the forwarding process.
- **Learning.** Applies to MAC only or MAC VID pairs and learns new MAC table entries.
- **Aging.** Checks the forwarding MAC table periodically.
- **Forwarding.** Decides to which bridge port/ports to forward the frame.
- **Transmission.** Applies to the VLAN-aware mode only and selects the format of the transmitted frame at the output port: with VLAN ID (tagged) or without VLAN ID (untagged).

Bridge features and these five processes are described below for each mode.

VLAN-Aware Mode

This mode enables creation of sub-groups of bridge ports within the bridge. Each sub-group is defined per VLAN and is associated with a unique VLAN ID (VID). Frames containing a VID can be forwarded only between bridge ports that are members of this specific VLAN, thus enabling a total separation between different VLAN users within the same bridge.

In addition, each bridge port is associated with Ethernet Type (TPID). The default is 0x8100 (801.1Q Ether Type), but any number may be configured, thus enhancing the bridge capability to cope with provider networks that utilize other Ether Types (e.g. 0x9100).

Bridge Features

- Full VLAN-aware bridge, complying with 802.1Q
- Learning and forwarding according to MAC address and VID
- Learning of up to 2,048 MAC table entries (MAC + VID pairs)
- Configuration of the aging time
- MAC table viewing (learned MACs).

Ingress Process

The ingress process is composed of three steps: frame admission, ingress filtering and PVID assignment to untagged/priority-only tagged frames.

- **Frame admission.** Two modes of operation, configured per bridge:
 - **Admit all frames.** All frames arriving from the port are admitted and proceed to the ingress filtering process. PVID is assigned to untagged or priority only tagged frames.
 - **Admit only VLAN tagged frames.** Only VLAN tagged frames are admitted and allowed to proceed to the ingress filtering process. Untagged or priority-only tagged frames are discarded.
- **Ingress filtering.** One of the following modes, configured per bridge port:
 - **Enable.** Perform ingress filtering according to VID. This means that only frames that share a VID assigned to this bridge port are admitted.
 - **Disable.** All frames are forwarded.
- **PVID assignment.** Per bridge port configuration.

In VLAN-aware mode, each received frame entering the bridge is associated with a single VID. If the received frame does not contain a VLAN ID (untagged or priority only tagged frames), a specific PVID is assigned to these frames before they pass to the forwarding process.

This means that the untagged/priority tagged frames that have passed the admission/ingress filtering are tagged with PVID and proceed to the forwarding process. Tagged frames will be double-tagged with the PVID only if Tag Stacking is enabled.

For untagged frames that were tagged during this process to VID=PVID, the priority tag is assigned at the VLAN priority field, according to the default priority configuration.

Table 1-1 summarizes the behavior of the ingress process.

Table 1-1. Ingress process

Frame Admission Mode	Ingress Filtering Mode	Bridge Behavior
Admit all frames	Enable	VLAN tagged frames with a VID (or PVID for untagged/priority tagged frames) that do not include the bridge port in their VLAN member set – are dropped.
	Disable	All frames pass.
Admit VLAN tagged frames	Enable	VLAN tagged frames with a VID that do not include the bridge port in their member set – are dropped. Untagged/priority-only tagged frames are dropped.
	Disable	All VLAN tagged frames pass. Untagged/priority-only tagged frames are dropped.

Frames that pass this stage are submitted to the forwarding process and to the learning process.

Learning Process

The learning process observes the source MAC address (SA) and the VID of the received frame, and updates the forwarding database with the MAC VID pair and with the bridge port that the frame was received from. The Forwarding Data Base (FDB) is also referred to as a MAC table.

Entries in the MAC table can be dynamic (inserted by the learning process) or static (inserted by configuration). A dynamic entry has an aging time associated with it.

The VLAN-aware bridge is an Independent VLAN Learning (IVL) bridge.

The learning process inserts a new dynamic entry to the MAC table. This entry consists of a MAC-VID pair and bridge port.

- If the MAC-VID pair already exists for the same port, the aging time is updated.
- If the MAC-VID pair already exists but for a different bridge port (dynamic entry) the new entry overrides the existing one.
- If the MAC-VID pair already exists for a different bridge port (static entry) the static entry prevails.

Aging Process

The aging process checks the forwarding MAC table periodically. Each dynamic entry-aging period that has exceeded the configured aging time limit is deleted. The aging period is the time since the last frame for this entry has entered the bridge. The periodic check of the MAC table (aging time intervals) results in actual aging time that can reach up to twice the value that was configured by the user.

Forwarding Process

The forwarding process is performed based on the frame destination MAC VID pair. The frame is forwarded to the bridge port specified in the MAC table for this MAC VID pair entry.

Untagged frames are forwarded according to the PVID attached to that frame during the ingress process.

Frames are forwarded, dropped or flooded as follows:

- **Forwarded:**
 - If the bridge port of the pair entry (DA, VID) in the MAC table is both an active bridge port and a member of the VLAN – the frame is forwarded to that bridge port only.
- **Dropped:**
 - If the bridge port for the pair entry (DA, VID) in the MAC table is the port on which the frame was received, the frame is dropped.
 - If there are no active ports associated with the frame's VID, or if the VID is not defined at all, the frame is dropped.
- **Flooded:**
 - If the pair (DA, VID) has not been learnt and does not exist in the MAC table, the frame is transmitted to all bridge ports associated with the frame's VLAN ID.
 - Multicasts and broadcasts are flooded only via the bridge ports whose VLAN IDs are identical to the frame's VLAN ID.

Transmission Process

After the forwarding process identifies the destination bridge port/ports to which the frame should be transmitted, the transmission process transmits it with the appropriate format. For each VLAN and each port, the user can configure the frame format to be used:

- **VLAN-tagged.** Frames are transmitted as follows:
 - VLAN-tagged frames are transmitted unchanged.
 - Untagged frames are transmitted tagged with priority according to the default priority of the ingress bridge port, and VID=PVID of the port from which they have entered.
 - Priority-tagged frames are transmitted tagged with original priority and VID = PVID.
- **Untagged.** All frames are transmitted untagged.

VLAN-Unaware Mode

In this mode the bridge forwarding ignores the VLAN ID of VLAN tagged frames.

Each Ethernet packet received from each bridge port (Ethernet or E1s) is forwarded according to its destination MAC address.

Bridge Features

- Learning and forwarding according to MAC address only
- Learning of up to 2048 MAC addresses
- Configuration of the aging time
- VLAN tagged frames transparency (forwarding according to MAC only)
- MAC table viewing (learned MACs).

Ingress Process

All frames are accepted in this mode: untagged, priority-tagged or VLAN-tagged.

Learning and forwarding is based on the MAC addresses, with no regard to the VLAN. This mode is sometimes regarded to as transparent mode, due to "tag transparency".

Learning Process

The learning process observes the source MAC address (SA) of the received frame and updates the forwarding database (FDB) with the MAC and the bridge port that the frame was received from. FDB is also referred to as MAC table.

The learning process inserts a new entry into the MAC table. This entry consists of the MAC and the bridge port.

- If the MAC already exists for the same bridge port, the aging time will be updated.
- If the MAC already exists, but for a different bridge port, (dynamic entry) the new entry will override the existing one.

Aging Process

The aging process checks the forwarding MAC table periodically. Each dynamic entry aging time period that has exceeded the configured Aging Time Limit is deleted. The aging time period is the period of time since the last frame for this entry has entered the bridge. The periodic check of the MAC table (aging time intervals), results in an actual aging time that can reach up to twice the value that was configured by the user.

Forwarding Process

The forwarding process is performed based on the frame MAC Destination Address (MDA). The frame is forwarded to the Bridge/port specified in the MAC table for this MAC.

Frames are forwarded, dropped or flooded at this stage for the following reason:

- **Forwarded:** A frame will be forwarded according to its DA, to the bridge port where its DA was learned.
- **Dropped:** If the port for that DA entry in the MAC table is the port on which the frame was received, the frame will be dropped.
- **Flooded:**
 - If there is no information regarding the DA in the MAC table, the frame is flooded to all ports.
 - Frames with multicast or broadcast address are flooded to all ports.

Transmission Process

In this bridge mode (VLAN-unaware), the frames are transmitted unchanged: No tags are added or removed.

VLAN Stacking

VLAN stacking mode for a bridge port refers to the addition of a tag to an incoming frame either at ingress or egress (regardless of whether it already has an existing VLAN tag), and removal of a tag at ingress or egress when the frame leaves from this port.

This setting is independent of the bridge activity.

Quality of Service

RICi-4E1/T1, RICi-8E1/T1 support QoS mapping to priority queues (3 PQ, strict priority, per bridge port) at the E1/T1 egress according to one of the following:

- VLAN priority (802.1p)
- DSCP (ToS byte)
- Port-based


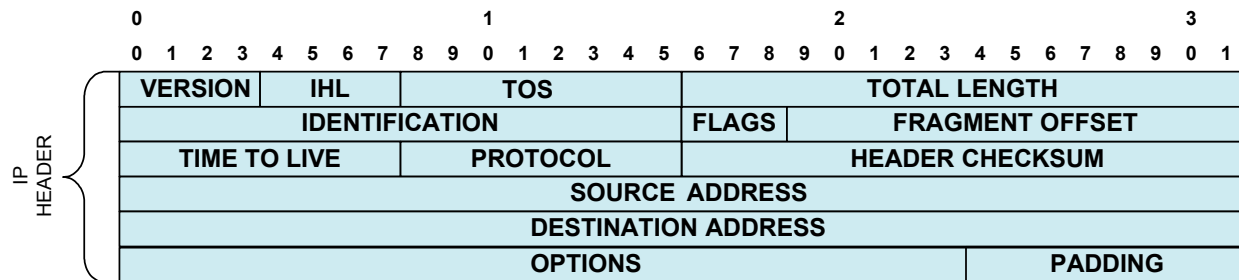


Figure 1-3. IP Header



DSCP: six bits (DS5–DS0)

Figure 1-4. ToS Byte DSCP Field

Management

The performance of RICi-4E1/T1, RICi-8E1/T1 can be locally monitored from an ASCII terminal, or from a remote site using Telnet, SNMP, Web terminal or RADview-Lite.

Inband Management

RICi-4E1/T1, RICi-8E1/T1 enable configuring, monitoring and following up on statistics via Telnet, SNMP and the Web.

Out-of-Band Management

RICi-4E1/T1, RICi-8E1/T1 allows full configuration and diagnostics via an ASCII terminal. The ASCII terminal is connected to the control port on the front panel.

Chapter 3 explains how to activate the ASCII terminal and provides general instructions on navigating to various system menus and windows and modifying data.

Units with 4 x 10/100BaseT configurations enable managing the respective unit via a dedicated Fast Ethernet port using a Telnet server, SNMP V1, or Web based tools such as Web terminal and RADview-Lite. Refer to *Chapter 3* for additional information.

Management Access

The architecture allows access from every bridge port to both the host and the remote site devices. Depending on the configuration mode, you may dedicate a port to management traffic, thus separating management and user traffic.

In this scenario, traffic coming from the remote CPE uses two VLANs, one for user traffic, for which the CPE may use tag stacking, and the other one for management traffic. All CPEs connected to RICi-4E1/T1, RICi-8E1/T1 share the same management VLAN.

In VLAN-aware mode, RICi-4E1/T1, RICi-8E1/T1 forwards the management traffic to the Ethernet cloud network management station. Using a different VLAN maintains strict separation of user and management traffic.

1.4 Technical Specifications

This section lists the technical specifications of RICi-4E1/T1, RICi-8E1/T1.

General

Internal Bridge	<i>Ports</i>	<ul style="list-style-type: none"> • Fast Ethernet (up to four) • Local host (one) • MLPPP (one port combining up to eight E1/T1 lines)
	<i>LAN Table</i>	Up to 2,048 MAC addresses of which 30 are static
	<i>Operation Mode</i>	VLAN-aware, VLAN-unaware
	<i>Filtering and forwarding</i>	Transparent or Filter
Control Port	<i>Interface</i>	RS-232/V.24 (DTE asynchronous)
	<i>Data Rate</i>	9.6, 19.2, 115.2 kbps
	<i>Connector</i>	DB-9, female
Monitoring	<i>Statistics</i>	System and physical layer Alarms
		ETH or E1 frame counters
		Ethernet physical layer statistics and frame counters
Indicators	<i>PWR (green)</i>	On: The unit is running Off: The unit is off
	<i>TST (green)</i>	On: Self test succeeded Off: Self test or diagnostics underway
	<i>ALM (red)</i>	On: Interface alarm Off: No alarm
	<i>LINK (green) for each Ethernet port</i>	On: Ethernet link is active Off: Ethernet link is inactive
	<i>ACT (yellow) for each Ethernet port</i>	Blinking: Ethernet frame received or sent within the last second Off: No frame received or sent within the last second

	<i>LOC (red) for each port (E1 only)</i>	On: Local sync loss Off: No loss
	<i>REM (red) for each port (E1 only)</i>	On: Remote sync loss Off: No loss
	<i>RED (red) for each port (T1 only)</i>	On: Local sync loss Off: No loss
	<i>YEL (yellow) for each port (T1 only)</i>	On: Remote sync loss Off: No loss
Power	<i>AC Source</i>	100–240 VAC, 50/60 Hz
	<i>DC Source</i>	48/60 VDC nominal (40–72 VDC)
	<i>Power Consumption</i>	9W
Physical	<i>Height</i>	43.7 mm (1.7 in) (1U)
	<i>Width</i>	215.0 mm (8.5 in)
	<i>Depth</i>	300.0 mm (11.8 in)
	<i>Weight</i>	2.2 kg (4.7 lb)
Environment	<i>Temperature</i>	Regular option: 0 to 50°C (32 to 122°F) Temperature-hardened option: -22 to 70°C (7.6 to 158°F)
	<i>Humidity</i>	Up to 90%, non-condensing

Interfaces

This section provides the technical specifications of the RICi-4E1/T1, RICi-8E1/T1 interfaces.

E1/T1 Interfaces

The user-traffic interfaces of RICi-4E1/T1, RICi-8E1/T1 are four or eight E1, or four or eight T1 connections.

Table 1-2. E1 Interface Specification

Specifications	E1 Ports
Interface	E1 Balanced or unbalanced 75Ω (with adapter cable)
Standards	G.703
Framing	Unframed
Data Rate	2.048 Mbps
Line Coding	HDB3
Interface type, connector	Electrical, RJ-45

Table 1-3. T1 Interface Specification

Specifications	T1 Ports
Interface	T1 Balanced 100Ω Ω
Standards	AT&T TR62411, ANSI T1.403
Framing	D4, ESF
Data Rate	1.544 Mbps
Line Coding	B8Zs
Interface type, connector	Electrical, RJ-45

Fast Ethernet Interfaces

The network communication in RICi-4E1/T1, RICi-8E1/T1 is channeled through up to four 10/100BaseT Ethernet ports. There is also an option to have two 10/100Base T ports and two fiber optic SFP ports. The interface specifications are listed in [Table 1-4](#) and [Table 1-5](#).

Table 1-4. Fast Ethernet (10/100BaseT) Interface Specification

Specifications	Ethernet Ports
Interface	10/100BaseT Fast Ethernet Interface
Standards	Ethernet, Relevant sections of IEEE 802.3, 802.3u, 802.1p and 802.1Q
Maximum Frame Size	1,532 Bytes
Data Rate	100 Mbps
Interface type, connector	Electrical, RJ-45
Range	100 meters/328 feet on UTP category 5 cables
Autonegotiation	Supported
Flow control	Pause frames
Duplex modes	Full/half duplex

Table 1-5. Fast Ethernet (100BaseFx) Interface Specification

Specifications	Ethernet Ports
Interface	100BaseFx Fast Ethernet Interface
Standards	Ethernet, Relevant sections of IEEE 802.3, 802.3u, 802.1p and 802.1Q
Maximum Frame Size	1,900 Bytes
Data Rate	100 Mbps
Interface type, connector	Optical, LC
Flow control	Pause frames
SFP Supported Types	SFP-1: 1310 nm, 2 km (1.2 miles) SFP-2: 1310 nm, 15 km (9.3 miles) SFP-3: 1310 nm, 40 km (24.8 miles) SFP-4: 1550 nm, 80 km (49.7 miles) SFP-10a: Tx – 1310 nm, Rx – 1550 nm, single fiber, 20 km (12.4 miles)

Chapter 2

Installation and Setup

This chapter includes the following topics:

- Site requirements and specifications
- Package contents
- Required equipment
- Installation and setup.

2.1 Introduction

RICi-4E1/T1, RICi-8E1/T1 is shipped ready to use, with factory defaults set. The device is designed as a desktop unit or for mounting in a 19-inch rack. For rack installation instructions, refer to the *Rack Mounting Kit for 19-inch Racks* guide that comes with the RM kit.

After installing the unit, use an ASCII terminal connected to the CONTROL port to perform any configuration necessary. The configuration procedures are described in [Chapter 3](#) and [Chapter 4](#).

In case of problems, refer to [Chapter 6](#).



No internal settings, adjustment, maintenance and repairs should be performed by either the operator or the user. Such activities must be performed only by skilled personnel who are aware of the hazards involved.

Always observe standard safety precautions during installation, operation and maintenance of this product.

2.2 Site Requirements and Prerequisites

AC-powered units should be installed within 1.5 meters (5 feet) of an easily accessible grounded AC outlet, capable of supplying the required voltage in the range of 100 to 240 VAC at 50/60 Hz. DC-powered units require 48/60 VDC (40–72 VDC)

Allow at least 90 cm (36 in) of free space in front of the unit to ensure easy operator access. For continuous product operation, allow at least 10 cm of free space at the front and at least 15 cm at the rear of the unit for cable connections and ventilation. For proper ventilation, keep at least 2.5 cm free space from the sides and the top of the unit.

The ambient operating temperature is 0 to 50°C (32 to 122°F), at a relative humidity of up to 90%, non-condensing.

2.3 Package Contents

The package contains the following items:

- One RICI-4E1, RICI-4T1, RICI-8E1, or RICI-8T1 unit
 - AC power cord or DC adaptor connector
 - RM-35 kit for mounting in a 19" rack (if ordered)
 - WM-35 kit for mounting a unit on a wall (if ordered).
-

2.4 Required Equipment

RICI-4E1/T1, RICI-8E1/T1 does not require special tools for installation. You only need a screwdriver for mounting the unit in a 19-inch rack.

RICI-4E1/T1, RICI-8E1/T1 is equipped with the appropriate power cable for the respective country or region. You connect the power socket on the rear panel to the mains.

Refer to the following table to determine which cables and connectors are required for installation. [Appendix A](#) specifies all connector pinouts.

Table 2-1. Required Connection Media

Interface	Cable/Connector
Control port	Straight RS-232/V.24 cable with DB-9 female connector for ASCII terminal
Fast Ethernet interface	RJ-45, 8-pin connection media
E1/T1 interface	RJ-45, 8-pin connection media For an unbalanced E1 interface, use the adapter cable provided

2.5 Mounting the Unit

RICi-4E1/T1, RICi-8E1/T1 is designed for installation as a desktop unit. It can also be mounted in a 19" rack.

- For rack mounting instructions, refer to the RM-34 installation kit manual.
- If RICi-4E1/T1, RICi-8E1/T1 is to be used as a desktop unit, place and secure the unit on a stable, non-movable surface.

Refer to *Handling Energized Products* for safety instructions.

2.6 Installing Fiber Optic SFP Modules

Depending on the hardware configuration you purchased, RICi-4E1/T1, RICi-8E1/T1 may use SFP modules with LC fiber optic connectors.



Third-party SFP optical transceivers must be agency-approved, complying with the local laser safety regulations for Class 1 laser equipment.

Caution

When calculating optical link budget, always take into account adverse effects of temperature changes, optical power degradation, and so on. To compensate for signal loss, leave a 3 dB margin. For example, instead of maximum receiver sensitivity of -28 dBm, consider the sensitivity measured at the Rx side to be -25 dBm. Information about Rx sensitivity of fiber optic interfaces is available in:

- [SFP/XFP Transceivers data sheet](#) for devices using SFPs or XFPs
-

► To install SFP modules:

1. Lock the wire latch of each SFP module by lifting it up until it clicks into place, as illustrated below.

Note

Some SFP models have a plastic door instead of a wire latch.

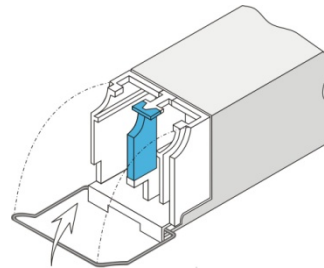


Figure 2-1. Locking the SFP Wire Latch

2. Carefully remove the dust covers from the SFP slot.

3. Insert the rear end of SFP into the socket, and push slowly backwards to mate the connectors until the SFP clicks into place. If you feel resistance before the connectors are fully mated, retract the SFP using the wire latch as a pulling handle, and then repeat the procedure.
4. Remove the protective rubber caps from the SFP modules.

- **To remove the SFP module:**
 1. Disconnect the fiber optic cables from the SFP module.
 2. Unlock the wire latch by lowering it downwards (as opposed to locking).
 3. Hold the wire latch and pull the SFP module out of the Ethernet port.

2.7 Connecting to Ethernet Equipment

RICi-4E1/T1, RICi-8E1/T1 is connected to the Fast Ethernet equipment via the fiber optic LC or 8-pin RJ-45 ports. Refer to [Appendix A](#) for the RJ-45 connector pinout..

- **To connect to Fast Ethernet equipment with fiber optic interface:**
 - Connect RICi-4E1/T1, RICi-8E1/T1 to the Ethernet equipment using a standard fiber optic cable terminated with an LC connector.

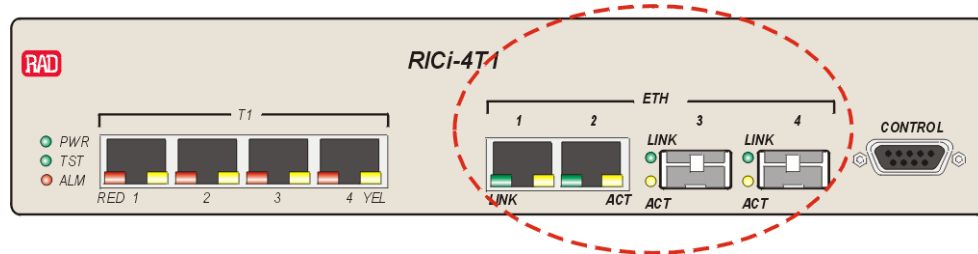


Figure 2-2. Front Panel - Two 10/100BaseT and two SFP-Based Optical Links

- **To connect to Fast Ethernet equipment with 10/100BaseT interface:**
 - Connect the LAN to an RJ-45 connector designated 10/100BaseT.

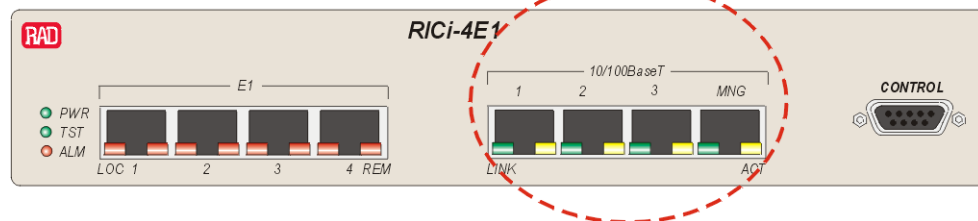


Figure 2-3. Front Panel – Four 10/100BaseT Links

2.8 Connecting to E1/T1 Equipment

E1/T1 devices are connected to RICi-4E1/T1, RICi-8E1/T1 via 4 or eight balanced RJ-45 ports. An unbalanced E1 interface is provided via the CBL-RJ45/2BNC/E1/X RJ-45 to BNC adapter cable. Refer to [Appendix A](#) for the connector pinouts.

► To connect to E1 or T1:

- Connect an E1 or T1 line to an RJ-45 connector labeled E1 or T1 (1–4 or 8).
- For unbalanced E1 connections, use the RAD-supplied adaptor.

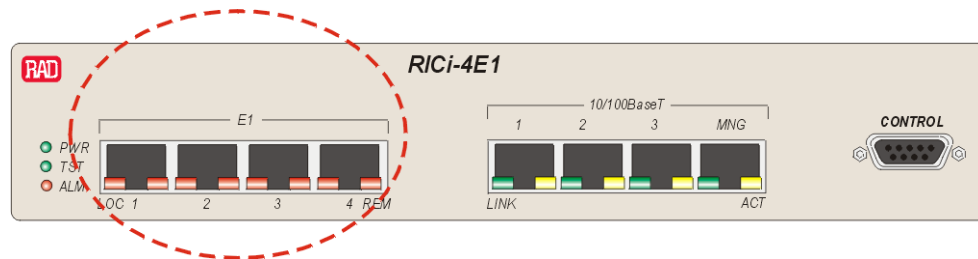


Figure 2-4. Front Panel – Four E1 Ports

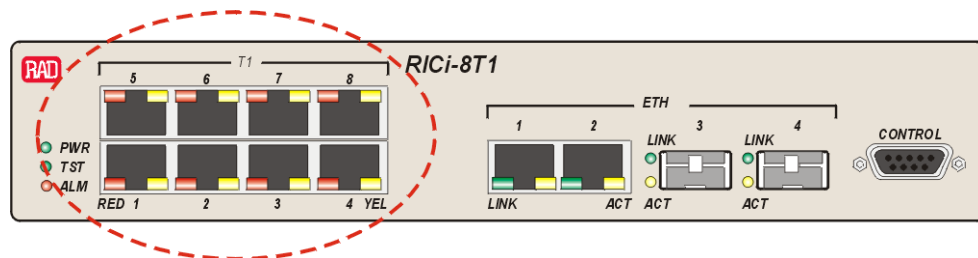


Figure 2-5. Front Panel – Eight T1 Ports

2.9 Connecting to Management Stations

Connecting to an ASCII Terminal

RICi-4E1/T1, RICi-8E1/T1 is connected to an ASCII terminal via a 9-pin D-type female connector labeled **CONTROL**. Refer to [Appendix A](#) for the connector pinout.

► To connect the ASCII terminal:

1. Connect the male 9-pin D-type connector of the CBL-DB9F-DB9M-STR Control Port cable to the CONTROL connector.
2. Connect the other end of this cable to an ASCII terminal.

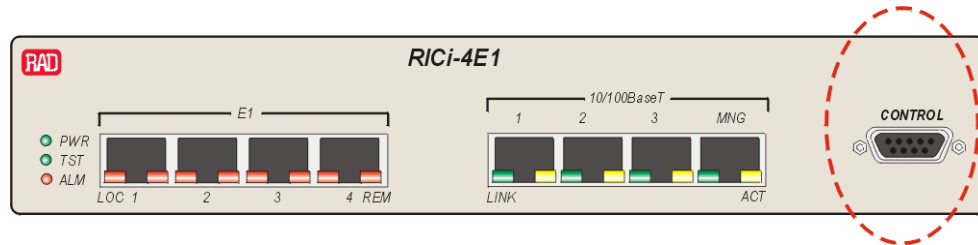


Figure 2-6. Front Panel – Control Port

Caution Terminal cables must have a frame ground connection. Use ungrounded cables when connecting a supervisory terminal to a DC-powered unit with floating ground. Using improper terminal cable may result in damage to supervisory terminal port.

2.10 Connecting to Power

RICi-4E1/T1, RICi-8E1/T1 is available with AC power or DC power. The power connector is located on the rear panel. Before you connect RICi-4E1/T1, RICi-8E1/T1 to the power, refer to *Handling Energized Product* at the front of this manual.



Before connecting or disconnecting any communication cable, the unit must be grounded by connecting its power cord to a power outlet with a ground terminal, and by connecting the ground terminal on the panel (if provided) to a protective ground.

Any interruption of the protective (grounding) conductor (inside or outside the instrument) or disconnecting of the protective ground terminal can make this unit dangerous. Intentional interruption is prohibited.

Connecting AC Power

AC power is supplied via a standard 3-prong inlet with an integral fuse holder.

AC power should be supplied through the 1.5m (5 ft) standard power cord terminated by a 3-prong socket. This cord ships with the unit.

➤ **To connect AC power:**

1. Connect the power cord to the power connector on the rear panel of the RICi-4E1/T1, RICi-8E1/T1 unit.
2. Connect the power cord to mains outlet.

The unit turns on automatically upon connection to the mains.

Connecting DC Power

The unit ships with a special IEC 60320 adapter to facilitate a -48/-60 VDC power connection.

➤ **To connect DC power:**

- Refer to the DC power supply connection supplement located on the Technical Documentation CD, or at the back of the hardcopy manual, for instructions how to wire the DC adapter. Refer to the *Handling Energized Products* section at the front of this manual for safety instructions.

Chapter 3

Operation

This section explains how to get started and operate the unit as follows:

- Explains how to turn the unit on and off
- Provides a detailed description of the front panel controls and indicators and their functions
- Provides instructions for using a terminal connected to the control port of the RICi-4E1/T1, RICi-8E1/T1 unit
- Describes how to navigate menus
- Defines the configuration alternatives.

For a detailed explanation of the parameters in the menus, refer to [Chapter 4](#).

3.1 Turning On the Unit

➤ **To turn on RICi-4E1/T1, RICi-8E1/T1:**

- Connect the power cord to the mains.

The PWR indicator turns on and remains on as long as RICi-4E1/T1, RICi-8E1/T1 receives power.

Once installed, RICi-4E1/T1, RICi-8E1/T1 does not require attention except for occasionally monitoring the front panel indicators.

You only have to configure the unit in compliance with local requirements or when performing tests.

3.2 Indicators

The unit's LEDs are located on the front panel. [Table 3-1](#) lists the functions of the LED indicators. The figures below illustrate typical front panels.

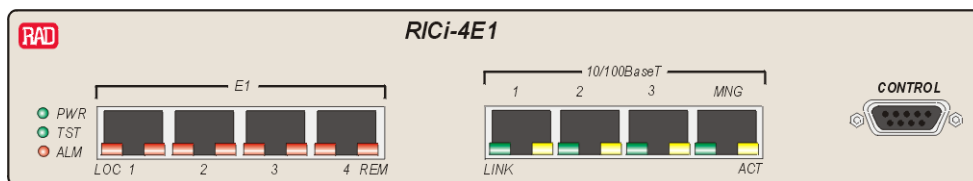


Figure 3-1. RICi-4E1 - Four 10/100BaseT Links

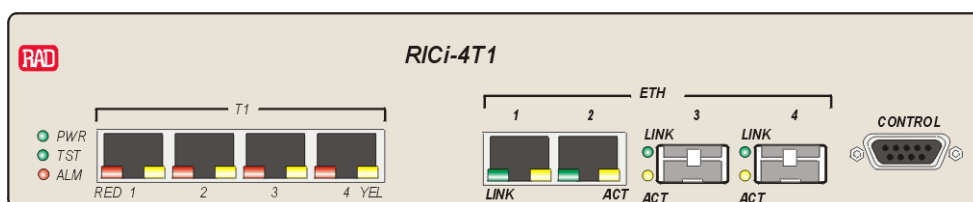


Figure 3-2. RICi-4T1 - Two 10/100BaseT and Two SFP-Based Optical Links

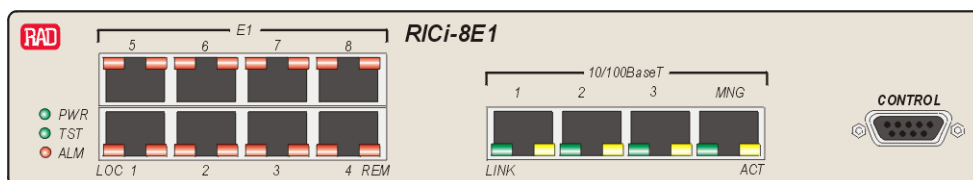


Figure 3-3. RICi-8E1 - Four 10/100BaseT Links

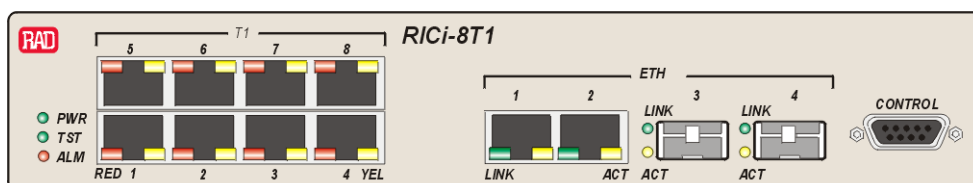


Figure 3-4. RICi-8T1 - Two 10/100BaseT and Two SFP-Based Optical Links

Table 3-1. RICi-4E1/T1, RICi-8E1/T1 LEDs and Controls

Name	Color	Function
PWR	<i>Green</i>	On: Unit is running Off: Unit is off
TST	<i>Green</i>	On: Self test succeeded Off: Self test or diagnostics underway
ALM	<i>Red</i>	On: Error on at least one interface Off: No alarm
LOC for each E1 port	<i>Red</i>	On: Local sync loss Off: No loss
REM for each E1 port	<i>Red</i>	On: Remote sync loss Off: No loss
RED for each T1 port	<i>Red</i>	On: Local sync loss Off: No loss
YEL for each T1 port	<i>Yellow</i>	On: Remote sync loss Off: No loss
LINK for each Ethernet port	<i>Green</i>	On: Ethernet link is active Off: Ethernet link is inactive
ACT for each Ethernet port	<i>Yellow</i>	Blinking: Ethernet frame received or sent within the last second Off: No frame received or sent within the last second

3.3 Default Settings

Some configuration parameters in RICi-4E1/T1, RICi-8E1/T1 may be set to the default values. Configuration parameters set to the default values belong to one of the two following categories:

- **Set/configured defaults.** These defaults are visible when entering the screen, for example the terminal bit rate, which is set to 115200 bps when started.
- **Not set/configured defaults.** These defaults are not visible when entering the screen and are presented by a blank field. They will show after selecting 'Save' in the respective screen. For example, the default for Ingress Filtering appears once you saved changes in the Bridge Configuration screen.

Configuration parameters without default values assigned require values be assigned, otherwise you will be unable to save the settings.

Table 3-2 lists the default settings of the RICi-4E1/T1, RICi-8E1/T1 configuration parameters.

Table 3-2. Default System Settings

Parameter	Default Value
Device Name	RICi-4E1/RICi-4T1/RICi-8E1/ RICi-8T1
Description	Fast Ethernet over Four/Eight E1/T1 NTU
Location	Location of the device
Contact Person	Name of the contact person
Host IP Address	0.0.0.0
Host IP Mask	255.255.255.0
Host Default Gateway	0.0.0.0
Read Community	Public
Write Community	Private
Trap Community	Public
Host Tagging	Untagged
Security Definition	All
Telnet/SSH Access	Enable
SNMP Access	Enable
Web Access	Enable
Baud Rate	115.2 kbps

Table 3-3. Default RADIUS Settings

Parameter	Default Value
Server Sequence Number	1
Server Status	Not connected
Server Access	Disable
Server IP Address	0.0.0.0
Number of Retries	2
Timeout	2
Authentication Port	1812

Table 3-4. Default Syslog Settings

Parameter	Default Value
Device Logging Status	Disable
Device UDP Port	514
Facility	Local 1
Severity Level	Minor
Server Sequence Number	1
Server Access	Disable
Server IP Address	0.0.0.0
Server UDP Port	514

Table 3-5. Default E1 Settings

Parameter	Default Value
Activation	Up
Transmit Clock Source	LBT
Receiver Sensitivity	-43
Line Code	HDB3

Table 3-6. Default T1 Settings

Parameter	Default Value
Activation	Up
Transmit Clock Source	LBT
Frame Type	Framed - ESF
Line Mode	CSU
Line BuildOut	0 dB

Sync	Fast
Receiver Sensitivity	-36 dB
Line Code	B8ZS

Table 3-7. Default Ethernet Settings

Parameter	Default Value
Port Status	Up
Autonegotiation	Enable
Max Capability Advertised	100Base - TX full duplex mode
Flow Control	Enable

Table 3-8. Default Bridge Settings

Parameter	Default Value
Aging Time	300
Forwarding Mode	Filter
VLAN Mode	Unaware
Bridge Ports	1 = Reserved for management host 2 = MLPPP 3 = Ethernet 1 4 = Ethernet 2 5 = Ethernet 3 6 = Ethernet 4

Table 3-9. Default Bridge Port Settings

Parameter	Default Value
Activation	Enable
Port VID/Stacking VID	2
Copy Original Priority	Disable
Default Priority Tag	0
Egress Tag Handling	None
Ingress Tag Handling	None
TPID (Ether Type)	8100

Table 3-10. Default OAM Settings

Menu	Parameter	Default Value
End-to-End	Standard OAM MAC Address	0180C2000030

	Standard OAM EtherType	8902
MD Names	MD Format	String
Flows	Protocol Type	Standard
MAID	MA Format	String
MEP	OAM Destination Address Type	Multicast
	MD Level	3
	OAM Mode	Disabled
	Continuity Verification Mode	Disabled
	CC Interval	1 sec
Service	Performance Monitoring	Disabled
	Priority	0
	Delay Objective	1
	Delay Variation Objective	1
	Rising Threshold	1 or 1E-10
	Falling Threshold	1 or 1E-10
	Event Reporting Type	None
	Sampling Interval	1

3.4 Configuration and Management Alternatives

You can locally configure and monitor RICi-4E1/T1, RICi-8E1/T1 from an ASCII terminal connected to the relevant unit's control port, or remotely using ConfiguRAD or RADview-Lite. If you choose the remote option, the relevant PC requires an SNMP agent and a Web browser.

Working with an ASCII Terminal

RICi-4E1/T1, RICi-8E1/T1 includes a V.24/RS-232 asynchronous DTE port designated CONTROL, which is terminated in a 9-pin D-type female connector. The control port continuously monitors the incoming data stream and immediately responds to any input string received through this port.

The control port can be configured to communicate at the following rates: 9.6, 19.2, or 115.2 kbps.

➤ **To start a terminal control session:**

1. Make sure that all cables are properly connected to the relevant connectors.
2. Connect that the unit is connected to a PC equipped with an ASCII terminal emulation application, for example Hyper Terminal or Procomm.
3. Turn on the control terminal PC and set its default port parameters to 115,200 bits per second, 8 bits/character, 1 stop bit and No Parity.
4. Set the terminal emulator to ANSI VT100 to optimize the view of the system menus.
5. Set the terminal emulator to view a 132-character screen width.
6. Once the system initialized and completed the self-tests, a menu appears displaying the results of the initialization and the self-tests.

Logging In

➤ **For read/write permissions:**

1. Under **User Name**, enter **su**.
2. Under **Password**, enter **1234** (default password).

➤ **For read-only permissions:**

1. Under **User Name**, enter **user**.
2. Under **Password**, enter **1234** (default password).

-
- Note**
- *It is recommended to change default passwords to prevent unauthorized access to the unit.*
 - *If you do not enter at least one character within 5 minutes, you will have to log in again.*
-

Choosing Options

► To choose an option:

1. Type the number corresponding to the option, and press <Enter>.
2. If you change any parameter in the menu, the **Save** option appears as the last option in the menu.

Note *In the OAM menus, the **Save** option does not appear as the last option in the menu. You save changes in the OAM menus by typing **S** and pressing <Enter>.*

3. To save changes, type the number associated with **Save** in the respective menu or type **S** if it is an OAM menu, and press <Enter>.

RICi-4E1/T1, RICi-8E1/T1 updates its database with the new value or displays a new menu for the selected option.

4. If you press <ESC> to exit the menu without saving changes, the following message appears:

"Do you want to save changes (Y/N/C)?"

Type the appropriate letter to save or not save your changes (Yes/No/Cancel).

Note *If a parameter offers only two settings, typing the number associated with the relevant option and pressing <Enter> will toggle between the two available settings.*

Figure 3-5 illustrates a typical screen displaying main items.

```

Product title line (RICi-4E1)
Short message
1. Sub Menu>
2. Sub Menu>
3. Parameter X [Range] ..... (value)
4. Parameter Y>                (Select value from the list)
5. Table Z []

prompt>
Main>Configuration>System>

Help line message
Help line of keyboard shortcuts, such as "Esc-prev" for
returning to the previous menu
-----Division screen line -----
Scroll messages

```

Figure 3-5. Sample Screen

Some management screens, such as the Inventory table and the Manager table, exceed the size of regular menus and require scrolling to navigate between parameters. In addition, you need to press specific keys to navigate to the desired parameters.

- **To navigate inside a table:**
 - To scroll left or right, press <Ctrl>+L or <Ctrl>+R respectively.
 - To move to the left or the right, press the Left Arrow or Right Arrow keys.
 - To move up or down, press the Up Arrow or Down Arrow keys.
 - To move to the next editable cell, press <Tab>.
 - To navigate to a specific cell, press G<row number>, <col number>.
- **To get help on navigating a table:**
 - Press <?>; a help screen appears displaying the shortcut keys as illustrated in *Figure 3-6*.

Table Hot Keys	
'L'	- move left
'd'	- scroll down
'a'	- add row
'm'	- represent entry as menu
'c'	- clear table
TAB	- select next changeable cell
S <row number>,<col number>	- select cell

Figure 3-6. Typical Help Screen

- Note**
- Screens are best viewed with the terminal screen width set to 132 characters.
 - If the respective screen does not have a help screen assigned, an error returns.

Ending a Terminal Session

- **To end the current terminal session:**
 - Press <E>.

After ending a session, it is necessary to enter again a valid user name and password to start a new session.

Working with Web Terminal

Web-based remote access terminal management software provides a user-friendly interface for configuring, collecting statistics and performing tests.

Web Browser Requirements

- Internet Explorer 6.0 and up, running on Windows™
- Netscape Communicator 7.0 and up, running on Windows™, HPOV or Linux
- Firefox 1.0.4 and up, running on Windows™
- Mozilla 1.4.3 and up, running on Linux.

➤ **Before you start using a Web browser for remote management or monitoring:**

- Enable scripts.
- Configure the firewall that might be installed on your PC to allow access to the destination IP address.
- Disable pop-up blocking software, such as Google Popup Blocker. You may also have to configure spyware and adware protecting software to accept traffic from/to the destination IP address.
- To prevent configuration errors, you must flush the browser's cache whenever you return to the same screen.

Logging In

➤ **To log in from a Web browser:**

1. Connect the Ethernet port to the LAN.
2. Verify that an IP address has been assigned to the relevant unit, using an ASCII terminal.
3. Open the Web browser.
4. Disable any pop-up blocking software, such as Google Popup Blocker.
5. In the address field, enter the IP address of RICi-4E1/T1, RICi-8E1/T1 and then press <Enter>. The address line reads something like **http://172.16.100.253**.

The Opening window appears.

6. Click **LOGIN**; you are asked for the user name and the password.
7. Enter your user name and the password. The default user name for read/write permission is **su** and the default password is **1234**.

The ConfiguRAD Main menu appears.

Notes

- *It is recommended to change default passwords to prevent unauthorized access to the unit.*
- *RICi-4E1/T1, RICi-8E1/T1 allows six management sessions to be active simultaneously: five network sessions (Telnet, ConfiguRAD, RADview-Lite) and one ASCII terminal session.*
- *If no user input is detected for 5 minutes during a ConfiguRAD session, RICi-4E1/T1, RICi-8E1/T1 automatically disconnects from the management station.*

Navigating the Web Terminal Menus

At the left-hand bottom corner, Web terminal provides auxiliary management tools:

- **Status** – shows the number of users currently managing the unit.
 - **Trace** – opens an additional pane for system messages, progress indicators (ping, software and configuration file downloads) and alarms.
 - **Refresh All** – refreshes the data currently displayed.
- **To choose an option:**
1. In the Web terminal screen, click the desired link to display the next menu.
 2. Once the target screen is displayed, select a value from the drop-down box or manually enter it into the field.

Working with RADview-Lite

RADview-Lite is a user-friendly and powerful SNMP-based element management system (EMS), used for planning, provisioning, and managing heterogeneous networks. RADview-Lite provides capabilities to monitor RAD products and networks using their respective SNMP agents. You can use configuration and diagnostic capabilities via ConfiguRAD.

Contact your local distributor for additional information on RADview-Lite.

Menu Map

Use the menu tree below as a reference when configuring and monitoring RICi-4E1/T1, RICi-8E1/T1. [Chapter 4](#) illustrates menus and describes parameters.

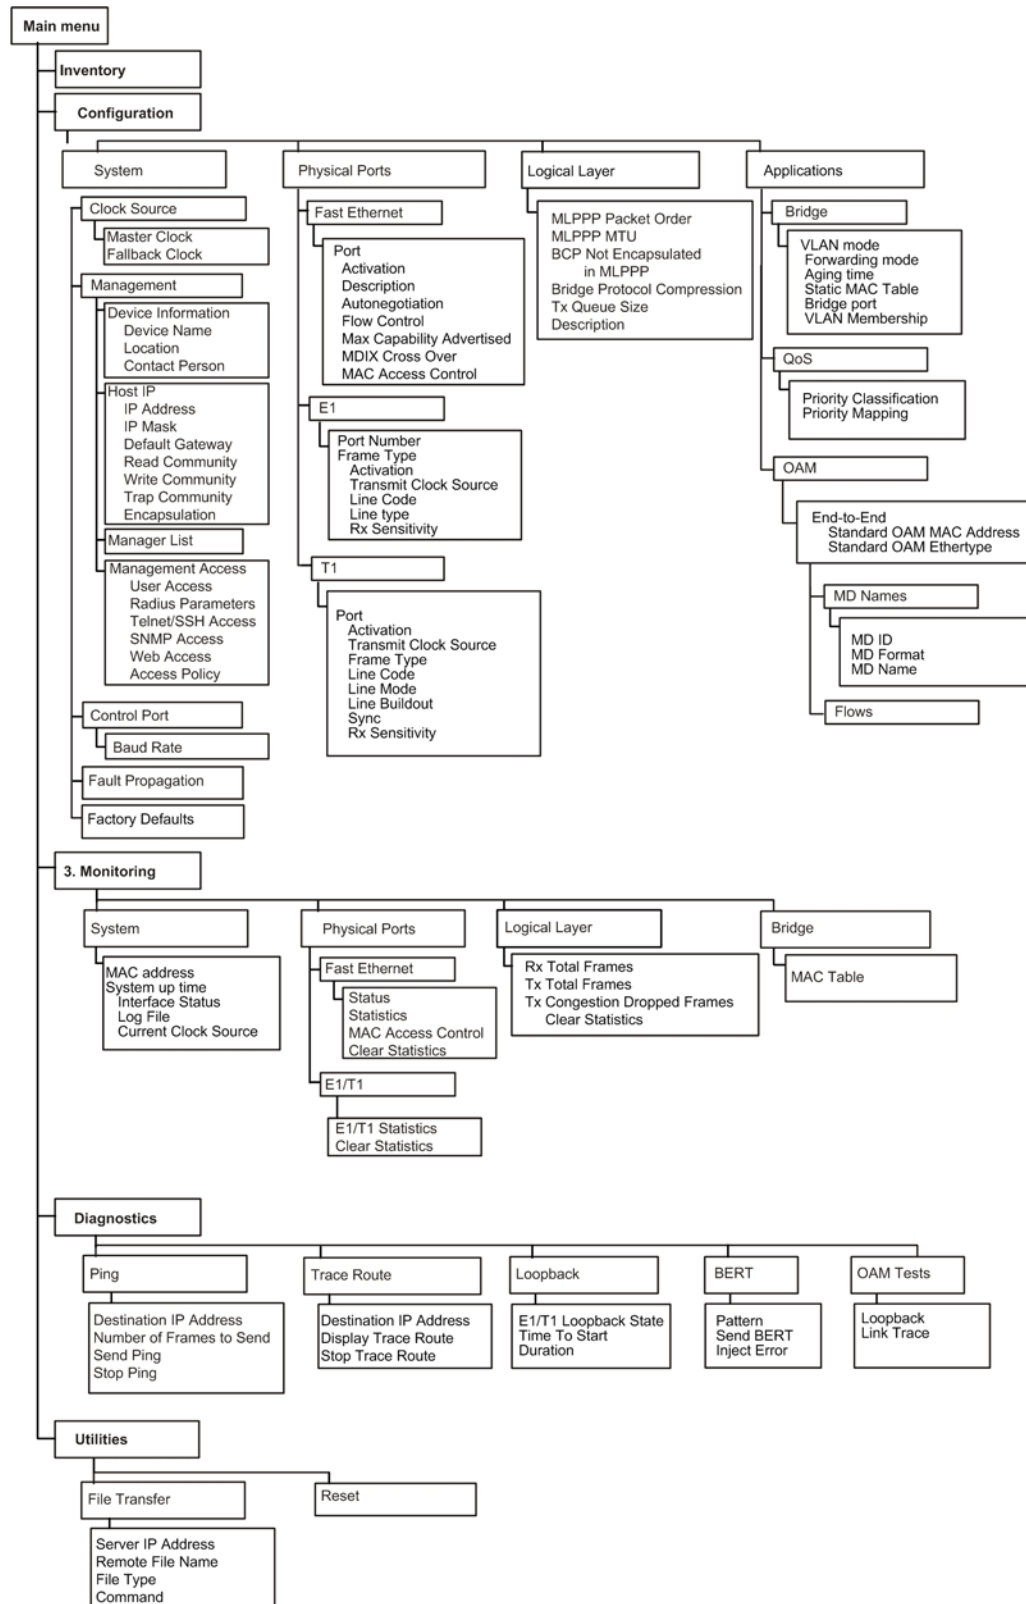


Figure 3-7. Menu Map

3.5 Turning Off the Unit

- To turn RICi-4E1/T1, RICi-8E1/T1 off:
 - Remove the power cord from the power source.

Chapter 4

Configuration

This chapter illustrates the configuration screens and explains their parameters. Examples are given from a terminal screen, but most of the menus are similar for Telnet and Web terminal.

The menu tree of the management software is illustrated in Chapter 3.

4.1 Configuring for Management

The initial configuration of management parameters is performed via an ASCII terminal. Once the RICi-4E1/T1, RICi-8E1/T1 host IP parameters are set, it is possible to access them via Telnet or Web terminal to configure the units for operation. Perform the following steps in order to configure the devices for management:

- **To configure RICi-4E1/T1, RICi-8E1/T1 for first use:**
 - Configuring Host IP Parameters.
 - Entering Device Information.
 - Configuring Users and Management Access Permissions.
 - Configuring Terminal Parameters.

Note *Make sure that you save your settings at each configuration screen.*

Defining Host IP Parameters

You can manage the unit via a network management station connected to one of the unit's ports. In order to establish a proper connection, you have to configure the host IP address, the subnet mask, the default gateway, and its trap, read and write communities. In addition, it is possible to create a separate management VLAN by selecting forwarding mode and VLAN parameters.

► **To define the IP parameters:**

1. From the Management menu, select **Host IP**.

The Host IP menu appears.

```

                                RICi-4E1/T1, RICi-8E1/T1
Main Menu > Configuration > System > Management > Host IP
1. IP Address                      ... (0.0.0.0)
2. IP Mask                        ... (255.255.255.0)
3. Default gateway                ... (0.0.0.0)
4. Read community                 ... (public)
5. Write community                ... (private)
6. Trap community                 ... (public)
7. Encapsulation                  >
8. Save

> Please select item from 1 to 8
ESC-Previous menu; !-Main menu; &-Exit;                      1 user(s)

```

Figure 4-1. Host IP Menu

2. In the Host IP menu, do the following:
 - Select **IP Address**, and then enter the IP address of the IP host.
 - Select **IP Mask**, and then enter the host IP subnet mask.
 - Select **Default Gateway**, and then enter the default gateway IP address.
 - Select **Read Community**, and then type the name of a community with read-only authorization.
 - Select **Write Community**, and then type the name of a community with write authorization.
 - Select **Trap Community**, and then type the name of a community to which the unit should send traps.
3. Select **Encapsulation** to define VLAN tagging performed by the host.

The Encapsulation menu appears.

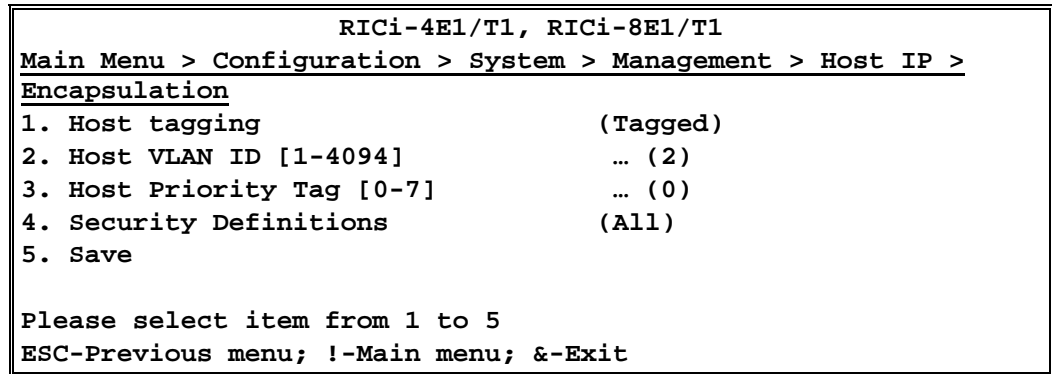


Figure 4-2. Encapsulation Menu

4. From the Encapsulation Menu, select **Host Tagging** to toggle between **Untagged** or **Tagged**.
 - **Untagged**. The host sends and receives frames with no VLAN tag to/from the bridge.
 - **Tagged**. The host receives frames only if they are tagged with the host's VLAN ID, and it sends frames to the bridge with this tag.

Note

*When Host Tagging is set to **Tagged**, two parameters are added to the menu, **Host VLAN ID** and **Host Priority Tag**.*

5. Select **Host VLAN ID**, and then specify the Host VLAN ID (1-4094).
6. Select **Host Priority Tag** to specify the priority level for the Host VLAN (0-7).
7. Select **Security Definitions** to specify the management access as follows:
 - **ALL**. The unit can be managed from all ports
 - **OOB Only**. The unit defines Fast Ethernet Port 4 as the OOB management port. When this setting is specified, the device can only be managed using the out-of-band option and from the associated port.
8. Select **Save** to save your changes.
9. Return to the Host IP menu and select **Save** to save your changes.

Entering Device Information

The management application associated with RICi-4E1/T1, RICi-8E1/T1 allows you to assign a name for the unit, to specify its location and assign a contact person to distinguish this unit from others installed in your system. You may enter up to 50 characters into every field.

➤ **To enter device information:**

1. Navigate to Main Menu > Configuration > System > Management > **Device Info**.

The Device Info menu appears. Refer to [Figure 4-3](#) for a typical screen. The description for the unit is factory set.

2. Select **Device Name** and type a name for the unit. The default name is the name of the unit: RICi-4E1, RICi-4T1, RICi-8E1, or RICi-8T1.
3. Select **Location** and type a description of the unit's current location.
4. Select **Contact Person** and type the name of a contact person.
5. Select **Save**.

RICi-4E1	
<u>Main Menu > Configuration > System > Management > Device Information</u>	
Description	(Fast Ethernet over 4 E1 Intelligent Converter)
1. Device Name	... (RICi-4E1)
2. Location	... (Location of the Device)
3. Contact Person	... (Name of the Contact Person)
4. Save	
ESC-Previous menu; !-Main menu; &-Exit;	

Figure 4-3. Typical Device Information Menu

Controlling Management Access

You can enable or disable access to the RICi-4E1/T1, RICi-8E1/T1 management system via an SNMP, Telnet, or Web-based application. By disabling SNMP, Telnet, or Web access, you prevent unauthorized access to the system. When SNMP, Telnet, and Web access is disabled, RICi-4E1/T1, RICi-8E1/T1 can only be managed using an ASCII terminal. In addition, you can limit access to the device to only the stations defined in the manager list.

➤ **To define the management access method:**

- Navigate to Main Menu > Configuration > System > Management > **Management Access**.

The Management Access menu appears as illustrated in [Figure 4-4](#).

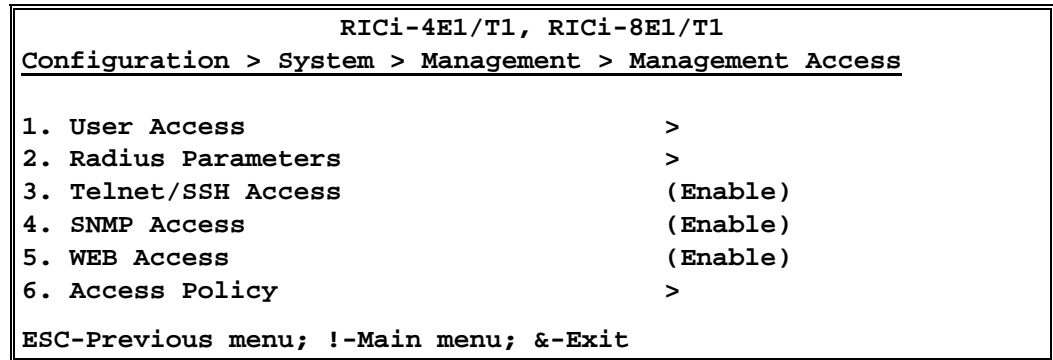


Figure 4-4. Management Access Menu

- To configure Telnet access:
 - Select **Telnet** and then choose as follows:
 - **Enable** – All users are enabled.
 - **Managers Only** – Managers listed in the Managers list are enabled.
 - **Secure** – Users using an SSH connection are enabled.
 - **Managers Only Secure** – Managers listed in the Managers list using an SSH connection are enabled.
 - **Disable** – Telnet access is disabled.
- To configure SNMP access:
 - Select **SNMP** and then choose as follows:
 - **Enable** – All users are enabled.
 - **Enable Managers Only** – Managers listed in the Managers list are enabled.
 - **Disable** – SNMP access is disabled.
- To configure Web access:
 - Select **WEB** and then choose as follows:
 - **Enable** – All users are enabled.
 - **Enable Managers Only** – Managers listed in the Managers list are enabled.
 - **Secure** – Users using an SSL connection are enabled.
 - **Secure Managers Only** – Managers listed in the Managers list using an SSL connection are enabled.
 - **Disable** – Web access is disabled.

Configuring User Access

The RICi-4E1/T1, RICi-8E1/T1 management platforms allow you to change current user names and passwords. RICi-4E1/T1, RICi-8E1/T1 supports two user names and passwords. The unit is shipped with the following default settings:

- User name – su, Password – 1234
- User name – user, Password – 1234.

➤ **To change the current user name and password:**

1. Navigate to Main Menu > Configuration > System > Management > Management Access > User Access.

The User Access menu appears as illustrated in *Figure 4-5*.

2. In the User Access menu, select **User Name** and enter a new user name, which may consist of up to eight characters.
3. Select **Old Password**, and enter the current password. The default is 1234.
4. Select **New Password** and assign a new password, which may consist of up to eight characters.

Note

The password is case sensitive.

5. Select **Confirm New Password** to confirm the new password.
 - If the new password is incorrect or the confirmed password does not match the newly assigned one, an error returns. Reassign a new password as explained above.
6. Select **Save**.

RICi-4E1/T1, RICi-8E1/T1	
Main Menu > Configuration > System > Management > Management Access > User Access	
User Level:	(User)
1. User Name	... (user)
2. Old Password	... (*****)
3. New Password	... (*****)
4. Confirm New Password	... (*****)
5. Save	
Please select item from 1 to 5	
ESC-Previous menu; !-Main menu; &-Exit	

Figure 4-5. User Access Menu

Configuring Network Managers

The network management stations to which the SNMP agent sends traps can be defined or modified. Up to ten managers can be defined. Entering the IP address and corresponding subnet mask defines each management station. In addition, you can temporarily prevent a manager station from receiving traps by masking the network manager.

➤ **To edit the manager list:**

1. From the Management menu, select **Manager List**.

The Manager List menu appears as illustrated in *Figure 4-6*.

2. To add a new network manager, type **a**.

3. Move the cursor to the Manager IP cell you wish to modify by pressing <Tab>. The selected cell is highlighted and the value appears in the “Change cell” field.
4. Press <1>, press <Enter>, and then enter a new IP address for the selected network manager.
5. Move the cursor to the **Manager IP Mask** field and enter the subnet mask for the network manager IP address.
6. Move the cursor to the Trap field and toggle between **Mask** and **Unmask** to mask or unmask traps for the selected management station.

RICi-4E1/T1, RICi-8E1/T1			
Main Menu > Configuration > System > Management > Manager List			
Manager ID	Manager IP	Manager IP Mask	Manager Trap Mask
1	1.1.1.1	255.255.255.0	Unmask
2	2.2.2.2	255.255.255.0	Unmask
3	3.3.3.3	255.255.255.0	Mask
4	4.4.4.4	255.255.255.0	Unmask
5	5.5.5.5	255.255.255.0	Unmask
1. Change cell ... (1.1.1.1)			
>			
A-Add; R-Remove; C-Clear; x-Clear Table			
ESC-Previous menu; !-Main menu; &-Exit; ?-Help			

Figure 4-6. Manager List Menu

RICi-4E1/T1, RICi-8E1/T1	
Configuration > System > Management > Manager List	
Manager ID	(1)
1. Manager IP	... (0.0.0.0)
2. Manager IP Mask	... (255.255.255.0)
3. Manager Trap Mask	... (Unmask)
>	
S-Save	
ESC-prev menu; !-main menu; &-exit;	
1 user(s)	

Figure 4-7. Manager List Menu, Add Mode

Configuring Radius Client

RICi-4E1/T1, RICi-8E1/T1 provides connectivity to up to four Radius authentication servers.

► To configure Radius parameters:

1. From the Management menu (Configuration > System > Management), select **Radius Parameters**.

The Radius Parameters menu appears as illustrated in [Figure 4-8](#).

2. Specify the following parameters according to *Table 4-1*:
 - **Server Access.** Enable or Disable
 - **Server IP Address.** The Radius server's IP address
 - **Key String.** Shared secret
 - **Number of Retries and Timeout.** Access-attempt parameters
 - **Authentication Port.** Port used for authentication.
3. To switch to additional Radius servers, type **f** or **b** to navigate forward or backward in the list of servers.

```

                                RICi-4E1/T1, RICi-8E1/T1
Configuration > System > Management > Management Access >
Radius Parameters

Server Sequence Number          (1)
Server Status                    > (NOT_CONNECTED)
1. Server Access                 (Disable)
2. Server IP Address             ... (0.0.0.0)
3. Key String                    ... ()
4. Number of Retries[0 - 10]     ... (2)
5. Timeout (in seconds)[1 - 5]  ... (2)
6. Authentication Port[1 - 65535] ... (1812)

Please select item <1 to 6>
F - Forward; B - Backward
ESC-prev.menu; !-main menu; &-exit

```

Figure 4-8. Radius Parameters Menu

Table 4-1. Radius Parameters

Parameter	Possible Values	Remarks
Server Sequence Number	1-4 The default is 1	Sequential Radius server number
Server Status	Connected Not connected (default) Disconnected	Radius server connection status
Server Access	Disable (default) Enable	Enable or disable access to the Radius server
Server IP Address	0.0.0.0 to 255.255.255.255 The default is 0.0.0.0	IP address of the Radius server
Key String	User name (case sensitive)	Shared secret between Radius server and user. It is used for encryption
Number of Retries	1-10 The default is 2	Max. number of access attempts
Timeout	1-5 The default is 2	Number of seconds before access attempt fails
Authentication Port	1-65535 The default is 1812	Authentication protocol port

Defining the Access Policy

Access policy allows configuration of multiple authentication protocols. User authentication is performed in the order the methods are selected. If the first authentication method is not available, the next selected method is used.

➤ To define the access policy:

- From the Management Access menu (Configuration > System > Management > Management Access), select **Access Policy**.

The Access Policy menu appears as illustrated in [Figure 4-9](#) and [Table 4-2](#).

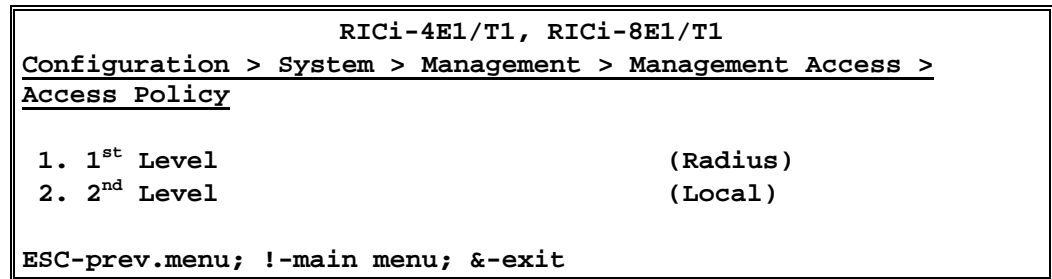


Figure 4-9. Access Policy

Table 4-2. Access Policy

Parameter	Possible Values	Remarks
1st Level	Local Radius	<ul style="list-style-type: none"> Local: RICi-4E1/T1, RICi-8E1/T1 uses the locally-stored authentication database Radius: RICi-4E1/T1, RICi-8E1/T1 uses the authentication database stored on the Radius server. <p>If you select Radius, then 2nd Level becomes available. If the user name is not found in the Radius Server database or the password you enter does not match the user name, the authentication fails.</p> <p>Default: Local</p>
2nd Level	None Local	<ul style="list-style-type: none"> None: RICi-4E1/T1, RICi-8E1/T1 is available via only the first level. Local: RICi-4E1/T1, RICi-8E1/T1 uses the locally-stored authentication database. <p>Default: Local</p> <p>Note: This parameter appears only if 1st Level is set to Radius.</p>

Configuring Control Port Parameters

The terminal is connected to the Control port. The management software allows you to configure the terminal baud rate.

Note

The Baud Rate parameter is masked during a Telnet session.

► To change the terminal baud rate:

1. Navigate to Main Menu > Configuration > System > **Control Port**.

The Control Port menu appears.

2. From the Control Port menu, select **Baud Rate**.
3. Select the desired baud rate. Available options are 9600, 19200 and 115200 bps (default).
4. Select **Save**.

```

RICi-4E1/T1, RICi-8E1/T1
Main Menu > Configuration > System > Control Port
1. Baud Rate                > (115200 bps)
2. Save
>
ESC-Previous menu; !-Main menu; &-Exit

```

Figure 4-10. Control Port Menu

4.2 Configuring for Operation

The recommended operation configuration procedure includes the following stages:

- Setting device-level parameters
- Setting logical layer parameters
- Setting physical layer parameters.

Setting Device-Level Parameters

This section instructs you on selecting the clock source and the fault propagation.

Selecting the Clock Source

You can assign two sources of timing to the unit, a master clock and a fallback clock that takes over if the master clock becomes unavailable. These timing sources can be used to ensure that all devices in the network synchronize to a single clock source.

You can assign the master and the fallback clocks as the unit's internal clock or as the clock for a specific E1/T1 link.

Note *It is recommended to apply different settings to the master clock and the fallback clock, for example **Rx Clock** for the master clock and **Internal** for the fallback clock.*

➤ **To select the clock sources:**

1. Navigate to Main Menu > Configuration > System > Clock Source > **Master Clock**.

The Master Clock Source menu appears.

2. Press <1> to toggle the first-priority clock options:
 - **Internal**, if you want the master clock to be the unit's internal clock.
 - **Rx Clock**, if you want the master clock to be the clock for a specific E1/T1 link.
3. If you have chosen **Rx Clock**, specify the port to be used, **E1/T1 Port 1..4 or 8**.
4. Select **Save**.

The master clock source settings are saved.

5. Return to the Clock Source menu (Main Menu > Configuration > System > **Clock Source**) and select **Fallback Clock**.

The Fallback Clock Source menu appears.

6. Press <1> to toggle the second-priority clock options:
 - **Internal**, if you want the fallback clock to be the internal clock of the relevant unit.
 - **Rx Clock**, if you want to set the fallback clock to refer to a specific E1/T1 link.
7. If you have chosen **Rx Clock**, specify the port to be used: **E1/T1 Port 1..4 or 8**.
8. Select **Save**.

Configuring Fault Propagation

When **Network - > User fault propagation** is enabled, the LAN ports are closed whenever the MLPPP uplink becomes inactive.

When **User - > Network fault propagation** is enabled, the following two configuration modes are available:

- **Interface Deactivation.** The MLPPP will be deactivated whenever an administratively enabled LAN port is closed.
- **OAM Signaling.** Applying an 802.3ah OAM mechanism, all administratively enabled LAN ports in the peer device are closed if one of the local device's administratively enabled LAN ports is closed while the MLPPP remains active. One of the Ethernet ports remains unaffected, in order to leave a management channel open.
This applies to #4 in four copper devices and to #2 in 2 copper and 2 SFP devices.

- To enable or disable fault propagation in a specific direction:
 1. Navigate to Main Menu > Configuration > System > **Fault Propagation**.
 2. **Network - > User Fault Propagation**. Toggle between **Interface Deactivation** or **Disable**.
 3. **User - > Network Fault Propagation**. Toggle between **Interface Deactivation**, **OAM Signaling** or **Disable**.
 4. Select **Save**.

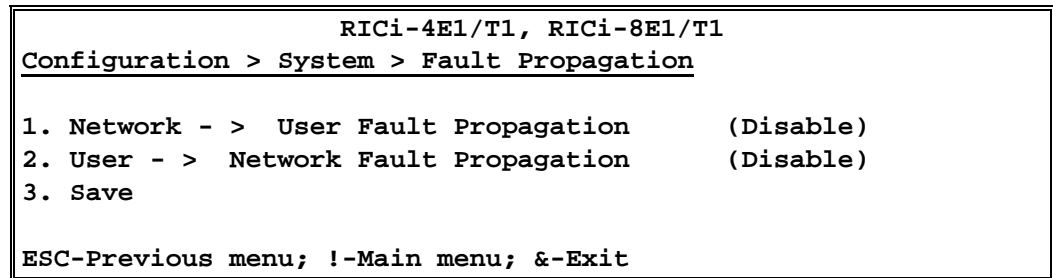


Figure 4-11. Fault Propagation Screen

Setting Physical Layer Parameters

RICi-4E1/T1 has four E1/T1 ports, RICi-8E1/T1 has eight E1/T1 ports; all units have four fast Ethernet interfaces, three user traffic ports and one port for out-of-band management. You access the Fast Ethernet and E1/T1 configuration menus from the Physical Ports menu.

Configuring Ethernet Interface

The following parameters can be configured for the Ethernet ports at the physical level:

- **Activation**
- **Description**. Free text that is added to traps about this port
- **Autonegotiation**. On non-copper ports only
- **Flow Control**
- **Maximum advertised capability for autonegotiation procedure**. On copper ports only
- **Data rate and duplex mode**. Only when autonegotiation is disabled and on copper ports only
- **MDIX Auto Cross Over**. On copper ports only
- **MAC Access Control** – You can specify that the port accepts traffic only from the first MAC address(es) from which it receives traffic.

- To configure the Fast Ethernet port:

1. Navigate to Main Menu > Configuration > **Physical Ports**.

The Physical Ports menu appears.

2. Select **Fast Ethernet**.

The Fast Ethernet menu appears as illustrated in *Figure 4-12*.

3. Configure the Fast Ethernet port parameters. Refer to *Table 4-3* for additional information.

► To configure MAC port protection for the Fast Ethernet port:

1. In the Fast Ethernet menu select **MAC Access Control**.

The MAC Access Control menu appears as illustrated in *Figure 4-13*.

2. Configure the MAC Access Control parameters. Refer to *Table 4-4* for additional information.

RICi-4E1/T1, RICi-8E1/T1	
Main menu > Configuration > Physical ports > Fast Ethernet	
Port	(1)
1. Activation	(Up)
2. Description	(ETH 1)
3. Auto Negotiation	(Enable)
4. Flow Control	(Enable)
5. Max Capability Advertised	(100base - TX Full Duplex)
6. MDIX Cross Over	(Enable)
7. MAC Access Control	>
f - forward	
Please select item from 1 to 6	
ESC-Previous menu; !-Main menu; &-Exit	

Figure 4-12. Fast Ethernet Menu

Table 4-3. Fast Ethernet Parameters

Parameter	Possible Values	Remarks
Port number	1-4 The default is 1	Refers to the Fast Ethernet port number. This parameter is read-only.
Activation	Up (default) Down	Activates the Fast Ethernet link.
Auto-negotiation	Enable (1) Disable (2)	Enables autonegotiation signaling over the Ethernet.
Flow Control	Enable (default) Disable	Configures the default administrative PAUSE mode for this interface.
Max Capability Advertised	10baseT Half Duplex 10baseT Full Duplex 100baseTX Half Duplex 100base TX Full Duplex (default)	Specifies the set of capabilities advertised by the local auto-negotiation entity.
MDIX Auto Cross Over	Enable (default) Disable	Enables and disables Auto Cross Over .

```

                                RICi-4E1/T1, RICi-8E1/T1
Main menu > Configuration > Physical ports > Fast Ethernet >
MAC Access Control

    Port ... (1)
    Current Number of Protected Addresses ... (0)
1. MAC Protection Administrative Status > (Disable)
2. Maximum Number of Protected MAC Addresses (0)

>
ESC-Previous menu; !-Main menu; &-Exit

```

Figure 4-13. MAC Access Control Menu

Table 4-4. MAC Access Control Parameters

Parameter	Possible Values	Remarks
Port number	1-4 The default is 1	Refers to the Fast Ethernet port number. This parameter is read-only.
Current Number of Protected Addresses		Shows the current number of learned MAC Addresses being protected. This parameter is read-only.
MAC Protection Administrative Status	Disable Enable The default is Disable	Indicates if MAC port protection is disabled or enabled for the port. If enabled, the port accepts traffic only from the first MAC address(es) from which it receives traffic.
Maximum Number of Protected MAC Addresses		Specifies the maximum number of source MAC addresses from which the port is allowed to receive traffic.

Configuring E1 Interface

► To configure the E1 ports:

1. Navigate to Main Menu > Configuration > Physical Ports menu > **E1**
The E1 menu appears as illustrated in [Figure 4-14](#).
2. Configure E1 port parameters. Refer to [Table 4-5](#) for additional information.
Press <F> to change the E1 port number.
3. Select **Save**.
4. Repeat the above procedure for additional E1 ports in use.


```

                                RICi-4E1, RICi-8E1
Main menu > Configuration > Physical ports > E1

    Port [1 - 8]                (1-8)
    Frame type >                (Unframed)
1. Activation                    (Up)
2. Transmit clock source        (LBT)
3. Line code                    (HDB3)
4. Line type                    > (Unbalanced)
5. Rx Sensitivity
6. Save

f - forward
ESC-Previous menu; !-Main menu; &-Exit

```

Figure 4-14. E1 Port Configuration Menu

Table 4-5. E1 Port Parameters

Parameter	Possible Values	Remarks
Port number	1-Number of E1 ports (4 or 8) The default is 1	Index of E1 ports.
Frame type	Unframed	Defines frame type.
Activation	Enable/Up (default) Disable/Down	Sets the administrative status of the E1 port.
Transmit clock source	Loopback Timing (default) Internal Clock System	Transmits the clock source of the E1 port.
Line Code	HDB3 (default) AMI	Indicates the transmission line code.
Line Type	Balanced (default) Unbalanced	
Rx Sensitivity	-12 db -43 db (default)	

Configuring T1 Interface

► To configure the T1 ports:

1. Navigate to Main Menu > Configuration > **Physical Ports**.

The Physical Ports menu appears.

2. From the Physical Ports menu, select **T1**.

The T1 Port Configuration menu appears as illustrated in [Figure 4-12](#).

3. Configure T1 port parameters. Additional information is available in [Table 4-3](#).
 - To switch to a different port, press <F> and configure the parameters respectively.

4. Select **Save**.
5. Repeat the above procedure for additional T1 ports in use.

RICi-4T1, RICi-8T1	
Main menu > Configuration > Physical ports > T1	
Port	(1)
1. Activation	(Up)
2. Description	... (T1 Link 1)
3. Transmit clock source	> (LBT)
4. Frame type	> (Framed-ESF)
5. Line Code	(B8ZS)
6. Line Mode	(CSU)
7. Line BuildOut	> (0 dB)
8. Sync	(FAST)
9. Rx Sensitivity	(-15 dB)
> _	
f - Forward	
ESC-Previous menu; !-Main menu; &-Exit	

Figure 4-15. T1 Port Configuration Menu

Table 4-6. T1 Port Parameters

Parameter	Possible Values	Remarks
Port	1-Number of T1 ports (4 or 8)	Index of T1 ports.
Activation	Up (default) Down	Set the administrative status of the T1 port.
Description	Alphanumeric characters	Description of T1 port
Transmit clock source	LBT (default) Internal System Clock	Transmit clock source of the T1 port.
Frame type	ESF (default) D4	This parameter indicates which T1 Lines implement this type of circuit. The type of circuit affects the number of bits per second that the circuit can reasonably carry, as well as the interpretation of the usage and error statistics.
Line Code	B8ZS (default) AMI	Indicates the transmission line code.
Line Mode	DSU CSU (default)	T1 interface type.
Line BuildOut (dB)	0 dB (default) -7.5 dB -15 dB -22.5 dB	Controls the link transmit signal.

Parameter	Possible Values	Remarks
Line Length	0-133 ft (default) 134-266 ft 267-399 ft 400-533 ft 534-655 ft	Controls the link transmit signal.
Sync	FAST (default) AT&T 62411	The restore time parameter is used to change the synchronization algorithms to reduce the time required for the port to return to normal operation after local loss of synchronization (LOF event).
Rx Sensitivity	-15 dB -36 dB (default)	Controls the sensitivity of the receive equalizer.

Setting Logical Layer Parameters

The unit bonds multiple E1/T1 ports utilizing Multilink Point-to-Point Protocol (MLPPP), bridging the bandwidth gap between E1/T1s, and creating a large virtual pipe. [Figure 4-16](#) illustrates the Logical Layer Configuration screen.

➤ **To configure the logical layer parameters:**

- Navigate to Main Menu > Configuration > **Logical Layer**.
- Configure the parameters as specified in [Table 4-7](#).

RICi-4E1/T1, RICi-8E1/T1		
Main menu > Configuration > Logical Layer		
1. MLPPP Packet Order		(Enable)
2. MLPPP MTU [80-1900]	...	(280)
3. BCP Not Encapsulated in MLPPP		(Disable)
4. Bridge Protocol Compression		(Enable)
5. TX Queue Size (# of frames)[25 - 275]	...	(275)
6. Description		(MLPPP Link)
ESC-Previous menu; !-Main menu; &-Exit		

Figure 4-16. Logical Layer Menu

Table 4-7. Logical Layer Parameters

Parameter	Possible Values	Remarks
MLPPP Packet Order	Enable (default) Disable	Logic Interface MLPPP, rearranges the order of packets sent, relative to the E1 port number. This may cause delays if packets of very different sizes are sent.
MLPPP MTU	80-1900 The default is 280	Maximum Transmit Unit. This is the maximum fragment size that may be transmitted over the E1 lines.

Parameter	Possible Values	Remarks
BCP Not Encapsulated in MLPPP	Enable Disable (default)	Indicates whether the BCP message is encapsulated in the MLPPP header, for the case of remote interfaces that require it to be encapsulated. If set to Enable , the BCP message is not encapsulated. If Disable , it is encapsulated.
Bridge Protocol Compression	Enable (default) Disable	Indicates whether to compress the Bridge Protocol field in the MLPPP header to one byte instead of two bytes. The field is compressed by removing the first byte, which contains zeros.
TX Queue Size	25 - 275 The default is 275	Specifies the size of the queue towards the E1/T1 interface. Selecting a higher size allows you to handle large bursts although delays may be longer, while selecting a lower size causes fewer delays but limits the burst size.
Description		Provides a description of the link.

Setting Application-Level Parameters

Configuring the Bridge

The internal bridge connects the ports of the unit. In order to maintain priority for the data flow, the bridge must be configured to process the VLAN tags.

The bridge operates in Transparent mode (learning is disabled) or Filtered mode (learning and filtering are enabled).

► **To configure the internal bridge:**

1. Navigate to Main Menu > Configuration > Applications > **Bridge**.

The Bridge menu appears as illustrated in [Figure 4-17](#).

2. Configure the Bridge parameters as described in [Table 4-10](#).
3. For Bridge Port configuration, refer to [Configuring the Bridge Ports](#)
4. For VLAN Membership configuration (in VLAN-aware bridge only), refer to [Configuring VLAN Membership](#).

RICi-4E1/T1, RICi-8E1/T1	
Main Menu > Configuration > Applications > Bridge	
1. VLAN Mode	(Aware)
2. Forwarding Mode	(Transparent)
3. Aging Time (sec)[300-4080]	...(300)
4. Static MAC Table	> []
5. Bridge port	>
6. VLAN membership	>
7. Save	
ESC-Previous menu; !-Main menu; &-Exit	

Figure 4-17. Bridge Menu

Table 4-8. Bridge Parameters

Parameter	Possible Values	Remarks
VLAN Mode	Aware Unaware (default)	Forwarding is based on MAC address only or on VLAN+MAC. Aware – Bridge forwarding is based on VLAN+MAC, according to 802.1Q Unaware . Bridge forwarding is based on MAC address only, according to 802.1D
Forwarding Mode	Filter (default) Transparent	Determines whether the bridge learns MAC addresses. Filter – Learning and filtering are enabled. Transparent – No learning is performed. Each received packet is forwarded to all other ports automatically, unless static MAC is used
Aging Time (sec)	300–4080	Aging time for entries in the MAC table. If the aging time elapses and no frame has been received from the MAC, it is erased from the MAC table. The default is 300 seconds.

Configuring the Static MAC Table

Static MAC addresses are stored in the MAC table.

► To add a static MAC address:

1. From the Bridge menu, select **Static MAC Table**.

The Static MAC Table appears with VLAN ID entries for a VLAN-aware bridge only, as illustrated in [Figure 4-18](#).

RICi-4E1/T1, RICi-8E1/T1			
Configuration > Applications > Bridge > Static MAC Table			
	VLAN ID	MAC Address	Receive Bridge Port
1	1	111111111111	1
2	2	222222222222	2
v 3	3	333333333333	3
4	4	444444444444	4
5	5	555555555555	5
x - Clear Table			
ESC-prev menu; !-main menu; &-exit; ?-help			

Figure 4-18. Static MAC Table

2. In the Static MAC Table menu, press <a> to add a static MAC address.

The Static MAC Table display changes to Add mode as illustrated in [Figure 4-19](#).

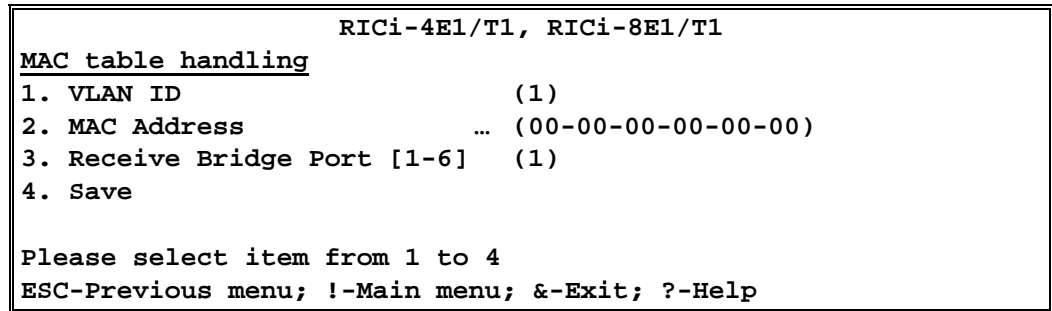


Figure 4-19. Static MAC Table, Add Mode

3. In Add mode, do the following:

- Select **MAC Address**, and enter a new MAC address.
- Select **VLAN ID**, and choose a VLAN ID for the MAC address within the range of 1-4094.
- Select **Receive Bridge Port**, and choose the interface this MAC address should be attached to.
- Select **Save** to save the MAC address.

4. Press <ESC> to return to the Static MAC Table.

➤ **To remove a static address from the table:**

- In the Static MAC Table menu, select a MAC address that you want to remove and press <R>.

The MAC address is deleted from the table.

➤ **To clear the MAC table:**

1. In the Static MAC Table menu, press <X>.

The following message appears: **Are you sure (Y/N)?**

2. Press <Y> to confirm deletion of all MAC addresses from the table.

Configuring the Bridge Ports

The internal bridge parameters, as well as the bridge ports and the VLAN membership must be configured according to the application requirements.

Available settings and factory-set (default) configuration are listed in [Table 4-10](#).

➤ **To configure a bridge port:**

1. Navigate to Main Menu > Configuration > Applications > Bridge > **Bridge Port**.
2. The Bridge Port menu appears as illustrated in [Figure 4-20](#).
3. In the Bridge Port menu, select a bridge port.
4. Configure the bridge port as specified in [Table 4-9](#).

```

RICi-4E1/T1, RICi-8E1/T1
Configuration > Applications > Bridge > Bridge Port
1. Bridge port [1 - 6]                      (2)
2. Bind
3. Activation                              (Enable)
4. Ingress Filtering                        (Disable)
5. Copy Original Priority                   (Disable)
6. Default Priority Tag [0 - 7]             ... (4)
7. Egress Tag Handling                     (Stacking)
8. Ingress Tag Handling                    (Stripping)
9. TPID (Ether Type) [0 - ffff]            (8100)
10. Save

f-Forward ; b-Backward; g-Go To ; d-Delete
ESC-Previous menu; !-Main menu; &-Exit; ?-Help

```

Figure 4-20. Bridge Ports Menu

Table 4-9. Bridge Port Parameters

Parameter	Possible Values	Remarks
Bridge Port Number	1-6	Bridge port number. Bridge port 1 is reserved for the host bridge port. Press <F> to switch the port numbers.
Activation	Enable (default) Disable	Specifies if this port is active.
Port VID / Stacking VID	1-4094 The default is 2	This is the PVID, the VLAN ID assigned to untagged frames or priority-tagged frames received on this port. If stacking is enabled, this is the tag to be added.
Copy Original Priority	Enable Disable	Enable: The priority tag of the original VLAN is copied if a frame arrives with a stacked VLAN tag, otherwise the default priority is used. Disable: The default priority is used.
Default Priority Tag	0-7 The default is 0	Default VLAN frame priority. Applies to untagged frames and when per-port priority is used. If stacking is enabled, this value is used for priority.
Egress Tag Handling	Stacking Stripping None (default)	Stacking. adds the PVID to every frame transmitted from the port. Stripping. removes the first VLAN tag from every transmitted frame, on the egress of the port.
Ingress Tag Handling	Stacking Stripping None (default)	Stacking. adds the PVID to every frame received on the ingress of the port. Stripping. removes the first VLAN tag from every received frame, on the ingress of the port.
TPID (Ether Type)	0 - 0xFFFF	The associated Ethernet type (TPID) is used in all bridging, stacking and stripping operations done on packets arriving or outgoing of this port.

Binding Bridge Ports

The unit is supplied with the bridge ports pre-bound to the physical interfaces as listed in [Table 4-10](#). Usually there is no need to modify the default bridge bindings.

Table 4-10. Factory Set Bridge Port Bindings

Bridge Port	Bound to
1	Reserved for management host
2	MLPPP
3	Ethernet 1
4	Ethernet 2
5	Ethernet 3
6	Ethernet 4

► **To bind a bridge port:**

1. From the Bridge Ports menu, select a bridge port.
2. Select **Bind** to define a physical port to be bound to the current bridge port.

The Bind menu appears.

Note

Bridge port 1 is permanently bound to the management host.

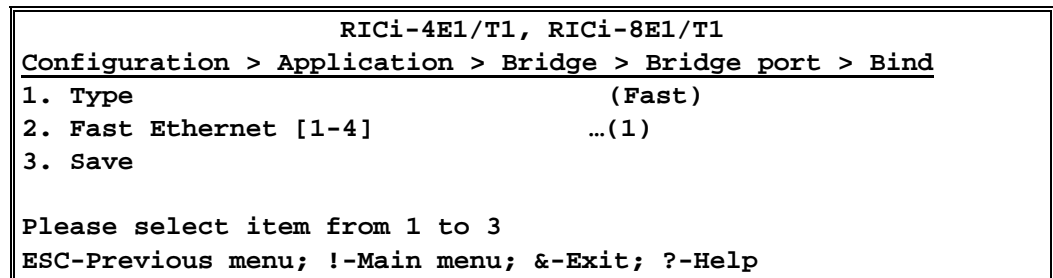


Figure 4-21. Bridge Ports Bind Menu

3. From the Bind menu, select **Type** and choose the port type to which the bridge port should be bound: **Fast** (Fast Ethernet) or **MLPPP**.
4. If you selected **Fast** in the previous step, select **Fast Ethernet** and type the number of the Ethernet port (1-4), which you want to bind the bridge port to.
5. In the Bridge Port Bind menu, select **Save**.
Press <ESC> to return to the Bridge Ports menu.
6. In the Bridge Port menu, configure the Bridge Port parameters as listed in [Table 4-9](#). The settings pertain to the port to which you bound the bridge port in the previous steps.
7. Select **Save**.

Note The bridge has six bridge ports (BP). BP1 is dedicated to the IP Host. BP2 through BP6 can be bound to Fast-Ethernet ports 1-4 or to the MLPPP bundle.

Note that PPP/MLPPP does not synchronize unless a bridge port has been bound to the MLPPP bundle.

Configuring VLAN Membership

► To configure VLAN Membership:

1. Navigate to Main Menu > Configuration > Applications > Bridge > **VLAN Membership**.

The VLAN Membership menu appears as illustrated in *Figure 4-22*.

2. Select **VLAN ID**, and type the VLAN ID you wish to configure.
3. Select **Egress Tagged Ports**. Packets carrying this VLAN tag will be transmitted 'untouched' (i.e. the VLAN tag remains attached).
4. Select **Egress Untagged Ports**. This VLAN tag will be removed from the packets before they are transmitted.
5. Select **Save** to finish VLAN Membership configuration.

RICi-4E1/T1, RICi-8E1/T1		
<u>Main Menu > Configuration > Applications > Bridge > VLAN Membership</u>		
1. VLAN ID		(1)
2. Egress Tagged Ports	>	(1, 2)
3. Egress Untagged Ports	>	(6)
4. Save	>	
f-Forward ; b-Backward; g-Go To ; d-Delete		
ESC-Previous menu; !-Main menu; &-Exit		

Figure 4-22. VLAN Membership Menu

Configuring Quality of Service (QoS)

Three methods of traffic classification are supported:

- 802.1 priority mapping
- DSCP priority mapping, using tag values
- Priority mapping per Ethernet port.

The classification method is chosen using the Priority Classification menu.

Four traffic queues are supported, which can be assigned priorities using the Priority Mapping menu.

► To select a traffic classification method:

1. Navigate to Main Menu > Configuration > Applications > QoS > **Priority Classification**.

The Priority Classification menu appears as illustrated in *Figure 4-23*.

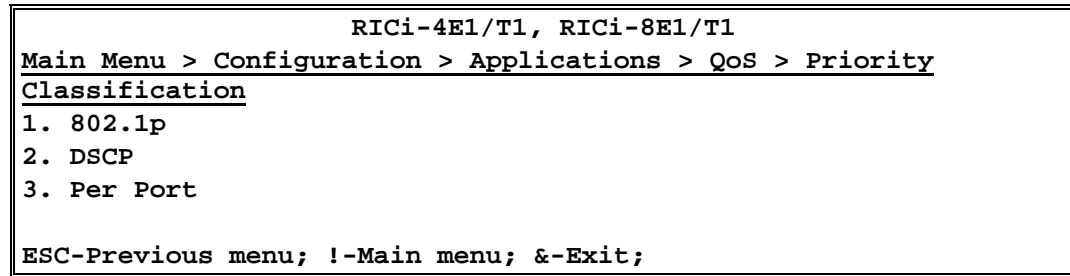


Figure 4-23. QoS Priority Classification Menu

2. From the Priority Classification menu, select the desired traffic classification method: **802.1p**, **DSCP**, or **Per Port**.
3. Select **Save**.

► **To assign priorities to traffic queues for 802.1p:**

1. Navigate to Main Menu > Configuration > Applications > QoS > **Priority Classification**.
2. Following the above procedure, select **802.1p** as the desired traffic classification method.
3. Navigate to Main Menu > Configuration > Applications > QoS > **Priority Mapping**.

The Priority Mapping (802.1p) menu appears as illustrated in [Figure 4-24](#).

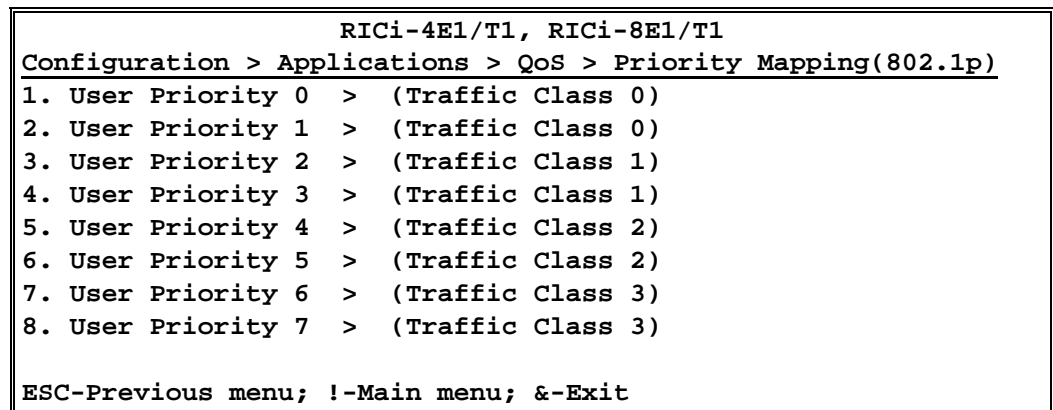


Figure 4-24. Priority Mapping Menu (802.1p)

4. From the Priority Mapping menu, select the desired priority (0 – 7) and enter the assigned traffic queue number (0 – 3). Each traffic queue can be assigned to more than one priority.

These are priority queues, i.e. packets arriving with lower priority will only be transmitted after all packets with higher priority have been transmitted. It implies possible starvation of lower priority traffic in case higher priority traffic uses all available bandwidth.

Note *Class 0 (the default one) has lowest priority, 3 highest.*

5. Repeat steps 1 – 3 for all priorities.
6. Select **Save**.

► **To assign priorities to traffic queues, for DSCP:**

1. Navigate to Main Menu > Configuration > Applications > QoS > **Priority Classification**. Following the previous procedure, select **DSCP** as the desired traffic classification method.
2. Navigate to Main Menu > Configuration > Applications > QoS > **Priority Mapping**.

The Priority Mapping (DSCP) menu appears as illustrated in [Figure 4-25](#). The menu lists only those values that have been changed from their default values.

RICi-4E1/T1, RICi-8E1/T1			
<u>Configuration > Applications > QoS > Priority Mapping(DSCP)</u>			
1. Tag Value	0	>	(Traffic Class 2)
2. Tag Value	63	>	(Traffic Class 2)
a - add			
ESC-prev menu; !-main menu; &-exit;			

Figure 4-25. Priority Mapping Menu (DSCP)

3. From the Priority Mapping menu, select the desired tag value (0 – 63) and enter the assigned traffic queue number (0 – 3). Each traffic queue can be assigned to more than one tag. To add a new entry, select **a** (add) and enter the tag value and traffic queue number.
To remove an entry, assign Traffic Class 0 to it.
4. Repeat for all tag values you wish to change.
5. Select **Save**.

► **To assign priorities to traffic queues per bridge port:**

1. Navigate to Main Menu > Configuration > Applications > QoS > **Priority Classification**. Following the above procedure, select **Per Port** as the desired traffic classification method.
2. Navigate to Main Menu > Configuration > Applications > QoS > **Priority Mapping**.

The Priority Mapping (Per Port) menu appears as illustrated in [Figure 4-26](#).

3. From the Priority Mapping menu, select the desired bridge port.
4. Select **Traffic Class** and enter the traffic queue number (0 – 3) to be assigned to the bridge port. Each traffic queue can be assigned to more than one port.
5. Repeat steps 1 – 4 for all active bridge ports.
6. Select **Save**.

```

RICi-4E1/T1, RICi-8E1/T1
Configuration > Applications > QoS > Priority Mapping(Per Port)
  Bridge Port (1-6)          ...(5)
1. Traffic Class              > (Traffic Class 0)
>
f - Forward; b - Backward; g - Go To
ESC-Previous menu; !-Main menu; &-Exit

```

Figure 4-26. Priority Mapping Menu (Per Port)

Configuring OAM

RICi-4E1/T1, RICi-8E1/T1 provides operation, administration, and maintenance (OAM) in packet-switched networks.

► To access the OAM menu:

1. From the **OAM** (Configuration > Applications > OAM) menu, select **End-To-End**.

The OAM End-To-End menu appears.

```

RICi-4E1/T1, RICi-8E1/T1
Configuration > Applications > OAM > End-To-End
1. MD Names
2. Standard OAM MAC Address      ... (0180C2000030)
3. Standard OAM EtherType[0 - ffff] ... (8902)
4. Flows
ESC-Previous menu; !-Main menu; &-Exit

```

Figure 4-27. OAM End-To-End Menu

Table 4-11. OAM End-To-End Parameters

Parameter	Possible Values	Remarks
MD Names		Maintenance Entity Group ID's domain name.
Standard OAM MAC Address		Specifies the MAC Address for Operation and Maintenance. Default: 0180C2000030
Standard OAM EtherType	0 - ffff	Specifies the Operation and Maintenance EtherType. Default: 8902
Flows		Ethernet Virtual Connections.

2. Modify the OAM MAC Address and/or the Standard OAM Ether Type as needed, according to application requirements.
3. Save your changes.

Configuring Maintenance Domains

A Maintenance Domain (MD) is a domain or part of a domain for which the faults in connectivity are managed. Each Maintenance Domain is administered separately. Each Maintenance Domain is assigned a Maintenance Domain Name. The name must be unique among all those used or available to an operator, and to facilitate easy identification of administrative responsibility for the Maintenance Domain. RICi-4E1/T1, RICi-8E1/T1 lets you add or remove maintenance domains as explained below.

➤ **To view and edit existing MDs:**

1. In the OAM End-to-End menu, type **f** or **b** to scroll forward or backward respectively through the MDs.

The associated MD ID, MD format, and MD name appear.

2. Modify the MD format and the MD name as needed.
3. Save your changes.

```

RICi-4E1/T1, RICi-8E1/T1
Configuration > Applications > OAM > End-To-End > MD Names

MD ID [1 - 8]                ... (2)
1. MD Format                  > (String)
2. MD Name                   ... (None)

Please select item <1 to 2>
A-Add New MD Name; F-Forward; B-Backward; D-Delete
ESC-Previous menu; !-Main menu; &-Exit

```

Figure 4-28. MD Names Menu

➤ **To add a maintenance domain (MD):**

1. In the OAM MD Names menu, type **A**.

The new MD ID and its parameters appear as illustrated in [Figure 4-29](#).

2. Specify the desired MD format and the MD name.

```

RICi-4E1/T1, RICi-8E1/T1
Configuration > Applications > OAM > End-To-End > MD Names

MD ID [1 - 8]                ... (2)
1. MD Format                  > (String)
2. MD Name                   ... (None)

Please select item <1 to 2>
S-Save
ESC-Previous menu; !-Main menu; &-Exit

```

Figure 4-29. MD Names Menu, adding MD

Table 4-12. MD Names Menu

Parameter	Possible Values	Remarks
MD ID		The maintenance domain's ID
MD Format	None String DNS Like MAC + UINT	Indicates maintenance group entity ID's (MEG ID) domain name format. None – No name defined String – Alphanumeric value DNS Like – DNS format MAC + UINT – MAC and UINT format. Default: String
MD Name		Indicates maintenance group entity ID's (MEG ID) domain name. One MD name (None) remains by default. Default: <ul style="list-style-type: none"> None if MD Format is String or DNS Like format 0000000000000000 if MD Format is MAC + UINT

➤ To delete an MD:

- To delete an MD, in the OAM MD Names menu type **d**.

Configuring OAM Flows

An OAM flow is an association of devices used for OAM message exchange. The RICi-4E1/T1, RICi-8E1/T1 units support up to eight flows.

➤ To view existing OAM flows:

- From the OAM **End-To-End** (Configuration > Applications > OAM > End-To-End) menu, select **Flows**.

The OAM Flow menu appears.

- To view configured flows, type **f** to scroll forward or **b** to scroll backward through the list.

RICi-4E1/T1, RICi-8E1/T1	
<u>Configuration > Applications > OAM > End-To-End > Flows</u>	
Flow[1 - 8]	... (0)
A-Add New Flow ; F-Forward ; B-Backward ; D-Delete ESC-Previous menu; !-Main menu; &-Exit	

Figure 4-30. Flows Menu

➤ To add a flow:

- To add a flow, type **A** and enter the desired flow ID.

The new flow appears as illustrated in [Figure 4-31](#).

- Configure the flow parameters as specified in [Table 4-13](#).

3. Save your changes.

```

RICi-4E1/T1, RICi-8E1/T1
Configuration > Applications > OAM > End-To-End > Flows

Flow[1 - 8] ... (1)
1. Flow Name ... (Put your String here)
2. SP VLAN[1 - 4094] ... (1)
3. Protocol Type (Standard)
4. MAID
5. MEP

Please select item <1 to 1>
A-Add New Flow ;
ESC-Previous menu; !-Main menu; &-Exit

```

Figure 4-31. Flows Menu, Adding Flow

Table 4-13. OAM Flow Parameters

Parameter	Possible Values	Remarks
Flow	1 - 8	Flow ID
Flow Name		Assign a name to the relevant flow.
SP VLAN	1 - 4094	Specify the VLAN used to send the OAM for the specified Maintenance Entity Group (MEP).
Protocol Type	Proprietary Standard	Proprietary refers to RAD's proprietary OAM protocol. If you choose Proprietary , you only have to configure MEP . Default: Standard
MAID		Refers to the Maintenance Association ID. This parameter only appears if Protocol Type is set to Standard .
MEP		Refers to the Maintenance Entity Group End Point.

➤ To configure the maintenance association's ID (MAID):

1. Select **MAID**.

The MAID menu appears as illustrated in [Figure 4-32](#).

2. Configure the MAID parameters as specified in [Table 4-14](#).
3. Save your changes.

RICi-4E1/T1, RICi-8E1/T1	
Configuration > Applications > OAM > End-To-End > Flows > MAID	
Flow ID	... (1)
1. MD ID[1 - 8]	... (1)
MD Format	> (None)
MD Name	(None)
2. MA Format	> (String)
3. MA Name	... ()
ESC-Previous menu; !-Main menu; &-Exit	

Figure 4-32. MAID Menu

Table 4-14. MAID Parameters

Parameter	Possible Values	Remarks
Flow ID		Displays the Flow ID.
MD ID	1 - 8	Select the ID of the desired maintenance domain (MD ID)
MD Format		Displays the selected maintenance domain's format (MD Format)
MD Name		Displays the name assigned to the selected maintenance domain (MD Name).
MA Format	String Primary Vlan Unsigned Int 16 ICC	Select the maintenance association's format (MA Format). Default: String
MA Name		Assign a name to the maintenance association (MA Name) Default: <ul style="list-style-type: none"> • DEFAULT if MA Format is String or ICC format • 0 if MA Format is Unsigned Int 16 • SP VLAN configured earlier if MA Format is Primary VLAN

➤ To configure the maintenance entity group's end point (MEP)

1. Select **MEP**.

The MEP menu appears as illustrated in [Figure 4-33](#).

2. Configure the MEP parameters as specified in [Table 4-15](#).
3. Select **Save**.

RICi-4E1/T1, RICi-8E1/T1		
Configuration > Applications > OAM > End-To-End > Flows > MEP		
Flow ID	...	(1)
1. Local ID[0 - 8191]	...	(0)
2. OAM Destination Address Type		(Multicast)
3. Remote ID	>	(-)
4. MD Level[0 - 7]	...	(3)
5. OAM Mode	>	(Disable)
6. Continuity Verification Mode	>	(CC Based)
7. OAM Destination MAC Address	>	(0120D2000103)
8. Default CC Priority	>	(0)
9. CC Interval	>	(1 Second)
10. Services		
ESC-Previous menu; !-Main menu; &-Exit		

Figure 4-33. MEP Menu

Table 4-15. MEP Parameters

Parameter	Possible Values	Remarks
Flow ID		Displays the Flow ID.
Local ID	1 - 8191	Indicates the maintenance entity group's end point. Default: Undefined (there is no default value)
OAM Destination Address Type	Multicast Unicast	Determines the MAC address sent in OAM messages, which may be the standard OAM MAC address that was configured previously in standard mode or the RAD proprietary multicast address in proprietary mode or a user-defined unicast address. Default: Multicast
Remote ID	1 - 8191	The Remote MEP ID is the ID that identifies incoming OAM messages. Every unit's ID must be unique, therefore the local and remote ID must not be identical.
MD Level	0-7	OAM domain level Default: 3 <i>Note: This parameter is configurable only in standard mode.</i>
OAM Mode	Disabled Initiate React	Determines the OAM behavior. Disabled – No CC performed, Initiate – The unit initiates and responds to OAM messages, React – The unit responds to OAM messages, but does not initiate them. Default: Disabled
Continuity Verification Mode	LB Based CC Based	Determines the CC behavior. LB Based is used only for RAD proprietary. Default: Disabled <i>Note: This parameter is available in Initiate/React OAM mode and RAD Proprietary mode.</i>

Parameter	Possible Values	Remarks
OAM Destination MAC Address	MAC Address	Determines the MAC address sent in OAM messages, configurable only for Unicast MAC Address. Default: 000000000000 in Unicast, 0120D2000100 + MD Level in Multicast RAD Proprietary, Standard OAM MAC Address + MD Level in Multicast Standard
CC Interval	100ms 1 sec 10 sec 1 min 10 min	Sets the CC interval between messages. Default: 1 sec <i>Note:</i> This parameter is configurable only in standard mode.
Default CC Priority		The priority CFM message is sent if no service is defined for the flow. If a service is defined, the CC is performed at the highest priority service for the flow.
Services		Refer to Figure 4-34 and Table 4-16 <i>Note:</i> This parameter is available only in proprietary mode.

► To configure the flow services:

1. From the MEP menu (Configuration > Applications > OAM > End-To-End > Flows > MEP), select **Services**.

The Services menu appears.

2. Configure the parameters as specified in [Table 4-16](#).
3. Save your changes.

RICi-4E1/T1, RICi-8E1/T1

Configuration > Applications > OAM > End-To-End > Flows > MEP > Services

Service	... (1)
1. Performance Monitoring	... (Enabled)
2. Priority	... (0)
3. Delay Objective (msec)	... (0)
4. Delay Variation Objective (msec)	... (0)
Event Reporting	
5. Frame Loss Ratio	>
6. Frames Above Delay	>
7. Frames Above Delay Variation	>
8. Unavailability Ratio	>
F-Forward;	
ESC-Previous menu; !-Main menu; &-Exit	

Figure 4-34. Service Menu

Table 4-16. Service Parameters

Parameter	Possible Values	Remarks
Service	1 – 3	Three services are automatically created for each defined flow.
Performance Monitoring	Enabled Disabled	Enables/disables Performance Monitoring Default: Disabled
Priority	0 – 7	Determines the P-bit value sent inside the OAM message that originates from this service. Default: 0
Delay Objective	1 – 1000	Determines the delay objective for the specified service. Default: 1
Delay Variation Objective	1 – 1000	Determines the delay variation objective for the specified service Default: 1
Frame Loss Ratio		Refer to Figure 4-35 and Table 4-17
Frames Above Delay		Refer to Figure 4-35 and Table 4-17
Frames Above Delay Variation		Refer to Figure 4-35 and Table 4-17
Unavailability Ratio		Refer to Figure 4-35 and Table 4-17

RICi-4E1/T1, RICi-8E1/T1		
Configuration > Applications > OAM > End To End > Flows > MEP > Services > Frames Above Delay		
1. Rising Threshold	...	(0)
2. Falling Threshold	...	(0)
3. Sampling Interval	...	(0)
4. Event Reporting Type	...	(Trap and Log)
Please select item <1 to 1>		
ESC-prev.menu; !-main menu; &-exit		

Figure 4-35. Event Reporting Menu Screen

Table 4-17. MEP Services Event Reporting Parameters

Parameter	Possible Values	Remarks
Rising Threshold	1 – 4294967296 For Unavailability Ratio / Frame Loss Ratio, the values are: 1E-3,1E-4,1E-5, 1E-6,1E-7,1E-8,1E-9,1E-10	A value above this threshold within the sampling interval for the specified counter will be considered a rising event. Default: 1, or 1E-10 for Unavailability Ratio / Frame Loss Ratio
Falling Threshold	1 – 4294967296 For Unavailability Ratio / Frame Loss Ratio, the values	A value above this threshold within the sampling interval for the specified counter will be considered a falling event.

Parameter	Possible Values	Remarks
	are: 1E-3,1E-4,1E-5, 1E-6,1E-7,1E-8,1E-9,1E-10	Default: 1, or 1E-10 for Unavailability Ratio / Frame Loss Ratio
Sampling Interval	1 – 4294967296	The interval in seconds above which the data is sampled and compared with the rising and falling thresholds. <i>Note: This parameter is available only in the Frames Above Delay and Frames Above Delay Variation menus.</i>
Event Reporting Type	None Log SNMP Trap Trap and Log	The Event type sent out after passing the threshold. Default: None

4.3 Additional Tasks

This section describes additional operations available supported by the RICi-4E1/T1, RICi-8E1/T1 management software, including the following:

- Configuring MAC port protection
- Setting the date and time
- Displaying inventory
- Transferring software and configuration files
- Resetting the unit.

Configuring Date and Time

RICi-4E1/T1, RICi-8E1/T1 receives the date and the time from the network clock using an NTP client. This causes the system to show the correct time and date (and not the time of starting the system, which is the default).

➤ **To configure the NTP client:**

- Navigate to Main Menu > Configuration > System > **Date and Time**.

The Date and Time menu appears.

RICi-4E1/T1, RICi-8E1/T1	
Configuration > System > Date and Time	
Date	(01-10-1949)
Time	(00:00:01)
1. NTP Mode	(Unicast Client)
2. GMT	(0)
3. NTP Server IP Address	(172.17.163.93)
4. NTP Update Interval (sec)	(5)
5. Send Initiated NTP Request	
ESC-Previous menu; !-Main menu; &-Exit	

Figure 4-36. Date and Time Screen

Table 4-18. NTP Client Parameters

Parameter	Possible Value	Remarks
NTP Mode	Unicast Client Disable (Default)	NTP request sent to a specific IP address
GMT	-12 – 12 The default is 0	Offset from Greenwich Main Time
NTP Server IP Address	The default is 0.0.0.0	The NTP server's IP address.
NTP Update Interval (sec)	0 (disable), default 1 - 4294967295	The time in seconds between NTP update requests.
Send Initiated NTP Request		Click to submit an NTP update request. Initiated update requests do not affect the specified update interval.

Configuring the Syslog Parameters

Syslog enables you to forward log messages via UDP over the network to up to five Syslog servers. To allow logging/sharing of system events to the Syslog servers, you need to configure the Syslog and Syslog server(s) parameters.

► To configure the Syslog parameters:

1. Navigate to the Syslog menu (Configuration > System > **Syslog**).

The Syslog menu appears.

2. Configure the parameters as described in [Table 4-19](#).

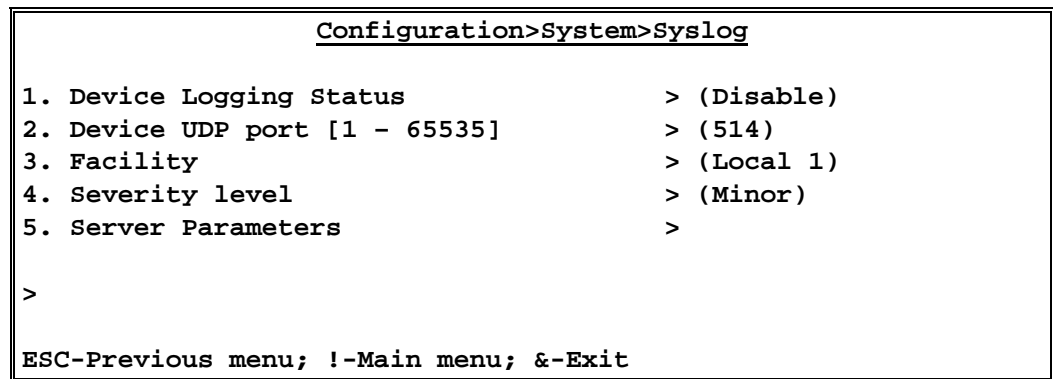


Figure 4-37. Syslog Menu

Table 4-19. Syslog Parameters

Parameter	Values	Remarks
Device Logging Status	Disable (default) Enable	Specifies whether transmitting syslog messages is enabled or disabled
Device UDP Port	1-65535	UDP Port used by RICi-4E1/T1, RICi-8E1/T1 to transmit the Syslog messages
Facility	Local 1 (default) - Local 7	The software module, task, or function from which the Syslog messages are sent
Severity Level	Critical – corresponds to the Emergency (0) severity level of Syslog Major– corresponds to the Alert (1) and Critical (2) severity levels of Syslog Minor (default) – corresponds to the Error (3) severity level of Syslog Warning – corresponds to the Warning (4) severity level of Syslog Event– corresponds to the Notice (5) severity level of Syslog Info– corresponds to the Informational (6) severity level of Syslog Debug – corresponds to the Debug (7) severity level of Syslog	The log messages with severity levels that equal or exceed the selected severity level are transmitted

► **To configure Syslog server parameters:**

1. Navigate to the Syslog Server Parameters menu (Configuration > System > Syslog > **Server Parameters**).

The Syslog Server Parameters menu appears.

2. Configure the parameters as described in [Table 4-20](#).

<u>Configuration>System>Syslog> Server Parameters</u>		
Server Sequence Number	...	(1)
1. Server Access	>	(Disable)
2. Server IP Address	...	(0.0.0.0)
3. UDP Port[1 - 65535]	...	(514)
>		
ESC-Previous menu; !-Main menu; &-Exit		

Figure 4-38. Syslog Server Parameters Menu

Table 4-20. Syslog Server Parameters

Parameter	Possible Values	Remarks
Server Sequence Number	1-5	Shows which Syslog server is being configured
Server Access	Disable (default) Enable	Controls the access to the Syslog server
Server IP Address	0.0.0.0 - 255.255.255.255	IP address of the Syslog server
Server UDP Port	1-65535	UDP Port of the Syslog server

Viewing Inventory

The RICi-4E1/T1, RICi-8E1/T1 inventory displays information on current software and hardware revisions of the unit. It also provides the RICi-4E1/T1, RICi-8E1/T1 interface description.

➤ To display the inventory:

- From the Main menu, select **Inventory**.

The Inventory table appears. [Figure 4-39](#) illustrates the first half of the inventory table. Use the arrow keys to navigate through the table.

The inventory displays a description of the unit including its hardware revision and the power supply type in use.

Note

The inventory is a wide table with 132 characters. It is best viewed by setting your terminal to 132 character wide display.

RICi-4E1					
<u>Main Menu > Inventory</u>					
ID	Description	Vendor type	Class	Entity name	HWRev
1001	RICi-4E1 Device	Chassis		RICi-4E1	1.00
4001	Power Supply	Power Supply		PS	
7001	Fast Eth Port 1	Port		FAST 1	
v 7002	Fast Eth Port 2	Port		FAST 2	
7003	Fast Eth Port 3	Port		FAST 3	
7004	Fast Eth Port 4	Port		FAST 4	
7005	E1 Port 1	Port		E 1	
7006	E1 Port 2	Port		E 2	
7007	E1 Port 3	Port		E 3	
7008	E1 Port 4	Port		E 4	
- > >					
>					

Figure 4-39. Typical Inventory Screen

Transferring Software and Configuration Files

This section presents procedures for installing new software releases on the RICi-4E1/T1, RICi-8E1/T1 units, and transferring configuration files.

Two software versions are stored, each of them in one of the two partitions of its flash memory, which also contains a boot program. The software is stored in compressed format. The active version is decompressed and loaded into the unit's RAM upon power-up. The passive software is kept for backup purposes. If the active software becomes corrupted, you can swap it with the backup. By default, the unit is delivered with active software only.

New software releases are distributed as *.img files, which are downloaded to RICi-4E1/T1, RICi-8E1/T1. When starting a download, the current backup is erased and the new software placed in the backup partition. When downloading is complete, the unit checks the integrity of the new software file. If it is correct, the backup and active files are swapped. The new software release becomes active and the former active software becomes the backup. If a failure occurs while downloading, the new version is erased. In this case, only one version is left stored in the flash memory.

Configuration files can be uploaded for storage and backup.

► To transfer files via TFTP:

1. Navigate to Main menu > Utilities > **File Transfer**.

The File Transfer menu appears as illustrated in [Figure 4-40](#).

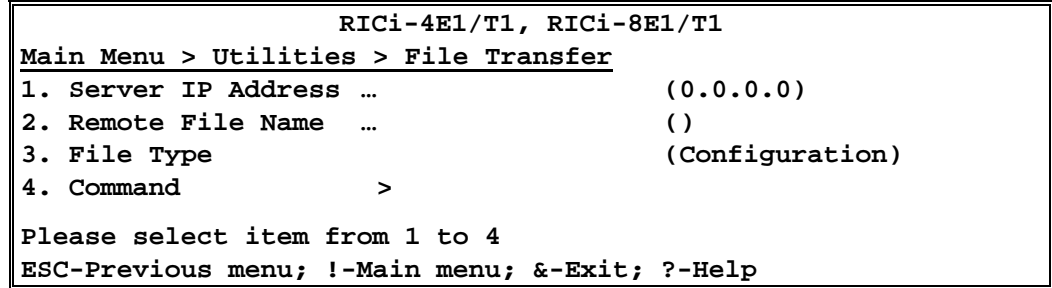


Figure 4-40. TFTP Menu

2. In the File Transfer menu, select **Server IP Address**, and enter the TFTP server's IP address.
3. Select **Remote File Name** and enter a file name.
4. Select **File Type** and choose whether you intend to transfer a software program (IMG) or a configuration file.
5. Select **Save**.
6. Select **Command** to start the desired procedure:
 - **Upload** – saving a software or configuration file on a remote server
 - **Download** – transferring a software or configuration file to the unit.

RICi-4E1/T1, RICi-8E1/T1 starts the file transfer.

The TFTP file transfer process is logged by the system messages listed below, which are stored in the log file. For additional information, refer to [Chapter 6](#).

- TFTP – Starting Upload
- TFTP – Starting Download
- TFTP – Upload Failed
- TFTP – Download Failed.

Resetting RICi-4E1/T1, RICi-8E1/T1

This section describes two types of reset functions:

- Resetting configuration parameters to the default settings
- Resetting the device to the factory settings.


Returning to Factory Defaults

You can reset the unit to its default settings.

► To reset to the default settings:

1. Navigate to Main Menu > Configuration > System > **Factory Defaults**.

You are asked to confirm this request:



2. Press <Y> to confirm.

The unit resets and all parameters revert to their default settings.

Resetting the Unit

You can perform an overall reset of the unit.

► To reset RICi-4E1/T1, RICi-8E1/T1:

1. Navigate to Main Menu > Utilities > **Reset**.

You are asked to confirm this request:

The device will restart. Do you want to proceed? (Y/N).

2. Press <Y> to confirm.

The unit resets.

Chapter 5

Configuring a Typical Application

This chapter provides detailed instructions on configuring a typical application to use a unit for customer premises with in-band management and a VLAN-aware bridge.

5.1 Application Requirements

Figure 5-1 illustrates a typical application, in which a unit connects Ethernet with four E1 links.



Figure 5-1. Typical Application

- **Network requirements:**
 - 4 E1s and 4 VLANs
 - 1 Fast Ethernet
 - 1 Network Manager
 - Bridge (Aware) and six Bridge Ports.

5.2 Configuring the Management Parameters

This part of the application configuration procedure consists of three major stages:

- Defining the host
- Defining the default gateway
- Defining managers.

Defining the Host

Defines the host parameters such as IP address and subnet mask, and the read/write communities.

➤ **To define the host:**

1. Navigate to Main > Configuration > System > Management > **Host IP**.
The Host IP menu appears.
2. Define the host parameters as follows:
 - Select **Address** to define the IP address of the SNMP host.
 - Select **Mask** to define the host IP subnet mask.
 - Select **Default Gateway** to set the default gateway IP address.
 - Select **Read Community** to enter the name of a community with read-only authorization.
 - Select **Write Community** to enter the name of a community with write authorization.
 - Select **Trap Community** to enter the name of a community to which traps are sent.
3. Press <ESC> to return to the Management menu.

Defining the Default Gateway

Makes the unit available from outside your network.

➤ **To define the default gateway:**

1. Navigate to Main > Configuration > System > Management > **Host IP**.
The Host IP menu appears.
2. In the Host IP menu, select **Default Gateway**.
3. Enter the IP address of the default gateway server or specify an IP address of 0.0.0.0 to disable the default gateway.

Defining Managers

In this step you define the managers and specify which manager(s) will receive SNMP traps.

Up to ten managers can be defined. Entering the IP address and corresponding subnet mask defines each management station. In addition, you can temporarily prevent a manager station from receiving traps, by masking the network manager.

➤ **To access the manager list:**

- Navigate to Main > Configuration > System > Management > **Manager List**

The existing managers appear listed.

➤ **To define new managers:**

1. Press <a>.

A form appears to enter the details for the new manager. An ID is automatically assigned to the new manager.

2. Specify an IP address for the new manager under **Manager IP**.
3. In the Trap field, specify **Mask** or **Unmask** to mask or unmask traps for the new management station.
4. Select **Save All**.
5. Repeat the previous steps for each network manager you wish to add.

➤ **To update existing manager parameters:**

1. In the Manager list, press <Tab> to move the cursor to the Manager IP cell you wish to modify by pressing.

The selected cell is highlighted and the value is displayed in the "Change cell" field.

2. Press <1>, and press <Enter> to enter a new IP address for the selected network manager.
3. Move the cursor to the Trap field and toggle between **Mask** and **Unmask** to mask or unmask traps for the selected management station.
4. Repeat the previous three steps for each manager you wish to update.
5. Press <ESC> to return to the Management menu.

5.3 Configuring E1/T1 Physical Layer

Defines the characteristics of the physical E1 or T1 ports. Set the clock parameters.

► **To configure the E1/T1 physical layer:**

1. Navigate to Main > Configuration > Physical layer > **E1/T1**.

The E1 or T1 menu appears as appropriate.

2. Leave the parameters unchanged.
Refer to *Configuring Ports at the Physical Level* for additional information on defining the parameters for each T1/E1 physical port.
3. Press <ESC> to return to the Physical Layer menu.
4. Press <ESC> to return to the Configuration menu.

5.4 Configuring the Bridge

This part of the application configuration procedure has four major stages:

- Defining the bridge
- Defining bridge ports and binding them to the relevant physical interfaces
- Defining VLANs and adding them the relevant bridge ports
- Configuring the E1/T1 physical layer.

Defining the Bridge

► **To define the bridge:**

1. Navigate to Main > Configuration > Application > **Bridge**.

The Bridge menu appears.

2. Define the bridge parameters. For additional information on each parameter, refer to *Configuring the Internal Bridge*.

Defining Bridge Ports

The unit is supplied with the bridge ports preconfigured for basic use and do not need to be reconfigured. The factory-set configuration is shown in [Table 5-1](#). To reconfigure the ports, the configuration for each port must first be deleted. Refer to [Configuring the Bridge Ports](#) for additional information.

Table 5-1. Default Bridge Port Settings

Bridge Port	Configured to
1	Reserved for management host
2	MLPPP bundle
3	Ethernet 1
4	Ethernet 2
5	Ethernet 3
6	Ethernet 4

Defining VLAN Memberships

Define the required VLAN and add to it the relevant bridge ports.

➤ **To define a VLAN:**

1. Navigate to Main > Configuration > Application > Bridge > **VLAN Mode**.

The VLAN Mode menu appears.

2. Leave the parameters at their default settings (Unaware).
To define and create a new VLAN, refer to [Configuring the Internal Bridge](#) for additional information.
3. Add the relevant ports to the defined VLAN (including the Host bridge port if it is the VLAN used for management).

Chapter 6

Troubleshooting and Diagnostics

This section describes how to do the following:

- Monitoring the system performance
- Displaying status and statistics
- Displaying system messages
- Detecting errors
- Troubleshooting the device
- Performing connectivity tests.

6.1 Monitoring Performance

The software provides access to the following status information:

- System level – MAC address, connection status, log file, and clock source
- Physical level – Ethernet and E1 port status
- Application level – MAC table.

The status information is available via the Monitoring menu.

Viewing System Status Information

The System menu shows the Log file, and shows the interface connection status. For a description of system messages, which are displayed via the Log file screen, refer to [Chapter 6](#).

➤ **To display interface connection information:**

- Navigate to Main Menu > Monitoring > System > **Interface Status**.

The Interface Status screen appears as illustrated in [Figure 6-1](#). It includes the following:

- **Interface description.** Fast Ethernet, E1, MLPPP, and bridge ports
- **Type.** Interface type
- **Activation.** Indicates whether the interface is enabled (Up) or disabled (Down), as user defined via the Ethernet menus (refer to [Chapter 4](#)).
- **Operation.** The link's current operational status (Up or Down).

RICi-4E1					
Main Menu>Monitoring>System>Interface Status					
Description	Type	Activation	Operation	Speed	
ETH 1	Fast Eth	Up	Up	100000000	
ETH 2	Fast Eth	Up	Up	100000000	
ETH 3	Fast Eth	Up	Up	100000000	
ETH 4	Fast Eth	Up	Up	100000000	
E1 PORT 1 BL	E1	Up	Up	2048000	
LOGICAL PORT MLPPP	MLPPP Port	Up	Up	16384000	
LOGICAL PORT 1	Logical PPP	Up	Up	2048000	
Bridge Port 6	Bridge Port	Up	Up	100000000	
ESC-Previous menu; !-Main menu; &-Exit; ?-Help					

Figure 6-1. Typical Interface Status Screen

Viewing Physical Layer Status

You can view the status of the unit's physical ports.

For a description of the Ethernet and E1 port statistics, refer to [Viewing Interface Statistics](#).

Displaying Ethernet Port Status

► To display the Ethernet port status:

- Navigate to Main Menu > Monitoring > Physical Port > Fast Ethernet > **Status**.

The Fast Ethernet Status screen appears as illustrated in [Figure 6-2](#). It includes the following:

- **Activation**. Indicates whether the interface is enabled or disabled
- **Status**. The link's current data rate and duplex mode
- **Flow Control** – indicates whether Flow Control is enabled or disabled.

RICi-4E1/T1, RICi-8E1/T1	
Main Menu>Monitoring>Physical Ports>Fast Ethernet>Status	
Port (1)	
Activation	(Enable)
Status	(Up)
Speed & Duplex	(100Mbps - Full Duplex)
Flow Control	(Enable)
ESC-Previous menu; !-Main menu; &-Exit	

Figure 6-2. Ethernet Status Screen

Displaying Ethernet MAC Port Protection Status

► To display the Ethernet MAC port protection status:

1. Navigate to Main Menu > Monitoring > Physical Port > Fast Ethernet > **MAC Access Control**.

The MAC Access Control Status screen appears as illustrated in *Figure 6-3*. It includes the following:

- **Current Number of Protected Addresses.** Shows the current number of learned MAC Addresses being protected
- **Maximum Number of Protected MAC Addresses.** Shows the maximum number of protected MAC addresses that can be learned.

2. Select **Protected MAC Addresses** to view the protected MAC addresses.

RICi-4E1/T1, RICi-8E1/T1				
<u>Main menu > Monitoring > Physical ports > Fast Ethernet > MAC Access Control</u>				
Port	...	(1)		
Current Number of Protected Addresses	...	(0)		
Maximum Number of Protected MAC Addresses		(0)		
1. Protected MAC Addresses		[]		
>				
ESC-Previous menu; !-Main menu; &-Exit				

Figure 6-3. MAC Access Control Menu

Viewing Application-Level Status

At the application level, the unit provides information of the MAC addresses (static and learned) and their bridge port assignments; as well as VLAN IDs and their bridge port assignments.

Displaying the MAC Table

► To display the MAC table:

- Navigate to Main Menu>Monitoring>Bridge>MAC table.

The MAC Table screen appears as illustrated in *Figure 6-4*. It includes the following:

- **VLAN ID.** The VLAN ID corresponding to the MAC address (VLAN-aware mode only)
- **MAC Address.** Existing MAC address
- **Receive Bridge Port.** Bridge port number.

RICi-4E1/T1, RICi-8E1/T1				
<u>Main Menu>Monitoring>Bridge>MAC Table</u>				
	VLAN ID	MAC Address	Bridge Port	Status
1	1	111111111111	1	Learned
2	2	222222222222	2	Learned
v 3	3	333333333333	3	Learned
4	4	444444444444	4	Learned
ESC-prev menu; !-main menu; &-exit; ?-help				

Figure 6-4. Static MAC Table

Viewing Interface Statistics

You can display statistical data for the Ethernet and E1 ports, and the bundled logical layer.

Displaying Ethernet Statistics

➤ **To view Ethernet statistics:**

1. Navigate to **Main > Monitoring > Physical Ports > Fast Ethernet**.
2. Type <f> to navigate to the desired port.
3. Select **Statistics**.

The Fast Ethernet Statistics screen appears as illustrated in *Figure 6-5*.

➤ **To clear Ethernet statistics:**

- In the Fast Ethernet Statistics menu, type **1** to clear port statistics.

RICi-4E1/T1, RICi-8E1/T1		
Main Menu>Monitoring>Physical Port>Fast Ethernet>Statistics		
Port	(1)	
Rx Correct Frames		... (0)
Rx Correct Octets		... (0)
Rx FCS Errors		... (0)
Tx Correct Frames		... (0)
Tx Correct Octets		... (0)
Tx Collision		... (0)
Tx Congestion Dropped Frames		... (0)
1. Clear Port Statistics		
ESC-Previous menu; !-Main menu; &-Exit; ?-Help		

Figure 6-5. Fast Ethernet Statistics

Table 6-1. Ethernet Statistics

Parameter	Description
Rx Correct Frames	The total number of correct frames received
Rx Correct Octets	The total number of octets (bytes) received
Rx FCS Errors	Total number of frames received with a valid length, but with invalid FCS and an integral number of octets
	Total number of valid frames received that are discarded due to a lack of buffer space
Tx Correct Frames	The number of frames successfully transmitted
Tx Correct Octets	The number of octets successfully transmitted
Tx Collision	Total number of successfully transmitted frames that experienced one or more collisions
Tx Congestion Dropped Frames	Total number of valid frames that could not be transmitted due to a lack of buffer space

Displaying E1/T1 Statistics

► To view E1/T1 port statistics:

1. Navigate to Main > Monitoring > Physical Ports > **E1/T1**.

The E1/T1 menu appears.

2. Type **f** to select the Port number.

3. Select **E1/T1 Statistics**.

The E1 or T1 Statistics screen appears as illustrated in [Figure 6-6](#). The statistics are described in [Table 6-2](#).

► To clear statistics:

- In the Statistics menu, select **Clear Statistics** to clear all E1/T1 statistics.

RICi-4E1, RICi-8E1	
Main Menu>Monitoring>Physical Port>E1>E1 Statistics	
Rx Total Frames	()
Rx Total Octects	()
Rx Total Errors	()
Tx Total Frames	()
Tx Total Octects	()
Tx Total Errors	()
Tx Congestion Dropped Frames	()
ESC-Previous menu; !-Main menu; &-Exit; ?-Help	

Figure 6-6. E1/T1 Statistics

Table 6-2. E1/T1 Statistics

Parameter	Description
Rx Total Frames	The total number of frames received.
Rx Total Octets	The total number of octets (bytes) received
Rx Total Errors	The total number of errors received
Tx Total Frames	The total number of frames transmitted.
Tx Total Octets	The total number of octets (bytes) transmitted
Tx Total Errors	The total number of errors transmitted
Tx Congestion Dropped Frames	Total number of transmitted frames that are discarded due to a lack of buffer space

Displaying Logical Layer Statistics

The logical layer shows the statistics of the bundled E1 ports.

► To view the Logical Layer statistics:

- Navigate to Main > Monitoring > **Logical Layer**.

The Logical Layer Statistics screen appears as illustrated in [Figure 6-7](#). The statistics are described in [Table 6-3](#).

- To clear Logical Layer statistics:
 - In the Logical Layer Statistics menu, type <1> to clear the statistics.

RICi-4E1/T1, RICi-8E1/T1	
Main Menu>Monitoring>Logical Layer	
Rx Total Frames	()
Tx Total Frames	()
Tx Congestion Dropped Frames	()
1. Clear Statistics	
ESC-Previous menu; !-Main menu; &-Exit; ?-Help	

Figure 6-7. Logical Layer Statistics

Table 6-3. Logical Layer Statistics

Parameter	Description
Rx Total Frames	The total number of frames received.
Tx Total Frames	The total number of frames transmitted.
Tx Congestion Dropped Frames	Total number of transmitted frames that are discarded due to a lack of buffer space

6.2 Handling Alarms and Traps

RICi-4E1/T1, RICi-8E1/T1 maintains a log file that can hold up to 1000 system messages. All events are time-stamped. [Table 6-4](#) lists the event types that appear in the event log.

Displaying Events

- To access the log file:

RICi-4E1/T1, RICi-8E1/T1 has an integrated NTP client to enable receiving the date and the time from the network. If properly configured and an NTP server is available, all messages are recorded with time and date of occurrence, otherwise the date is 0000-00-00 and the time indicates the seconds that have elapsed since the system started.

 1. Navigate to Main > Monitoring > System > **Log File**.

The Log File screen appears as illustrated in [Figure 6-8](#).
 2. In the Log file screen, use the arrow keys to scroll the event list up and down, left and right.

RICi-4E1						
Main Menu>Monitoring>System>Log File						
	Source	Description	Information	Severity	Date	Time
1	E1 Port 2	LINK_DOWN	E1 port	Major	00-00-0000	00:00:01
2	E1 Port 6	LINK_UP	E1 port	Major	00-00-0000	00:00:02
3	Eth Port 1	LINK_DOWN	Eth port	Minor	00-00-0000	00:00:04
x - Clear Table						
ESC-Previous menu; !-Main menu; &-Exit; ?-help						

Figure 6-8. Typical Log File

RICi-4E1						
Main Menu>Monitoring>System>Log File						
	Source	Description	Information	Severity	Date	Time
1	E1 Port 2	LINK_DOWN	E1 port	Major	04-07-1776	00:00:01
2	E1 Port 6	LINK_UP	E1 port	Major	02-06-1946	00:00:02
3	Eth Port 1	LINK_DOWN	Eth port	Minor	01-10-1949	00:00:04
x - Clear Table						
ESC-Previous menu; !-Main menu; &-Exit; ?-help						

Figure 6-9. Typical Log File after NTP becomes Available

Clearing Events

- To clear the log file
 - In the Log File menu, type x.

Table 6-4. Event List

Code	Event	Description
10	LINK_UP	Network Ethernet port has been connected
20	LINK_DOWN	Network Ethernet port has been disconnected
40	SNMP_AUTH_FAIL	SNMP Authentication Failure trap has been received
50	WEB_START	ConfiguRAD session has been initiated
51	WEB_END	ConfiguRAD session has been finished
52	WEB_FAILURE	ConfiguRAD session has failed
60	TELNET_START	Telnet session has been initiated
61	TELNET_END	Telnet session has been finished
62	TELNET_FAILURE	Telnet session has failed
70	TFTP_START	TFTP session has been initiated
71	TFTP_END	TFTP session has been finished
72	TFTP_FAILURE	TFTP session has failed

Code	Event	Description
90	TELNET_ACCESS_DENIED	Access via Telnet was denied, either because the current IP address does not appear in the manager list, or because disabled Telnet access.
91	WEB_ACCESS_DENIED	Access via Web was denied, either because the current IP address does not appear in the manager list, or because a user disabled Web access.
92	SNMP_ACCESS_DENIED	Access via SNMP was denied, either because the current IP address does not appear in the manager list, or because a user disabled SNMP access.

Traps Generated by RICi-4E1/T1, RICi-8E1/T1

RICi-4E1/T1, RICi-8E1/T1 sends SNMP traps to defined network management stations to report system events. Refer to [Table 6-5](#) for a list of the SNMP traps sent by RICi-4E1/T1, RICi-8E1/T1.

Table 6-5. Trap List

Trap	Description	OID
coldStart	The unit has been restarted	1.3.6.1.6.3.1.1.5.1
authenticationFailure	User authentication has failed due to attempt to access device with wrong SNMP community	1.3.6.1.6.3.1.1.5.5
linkDown	Interface (Ethernet, E1/T1, or PPP) has been disconnected	1.3.6.1.6.3.1.1.5.3
linkUp	Interface (Ethernet, E1/T1, or PPP) has been connected	1.3.6.1.6.3.1.1.5.4
risingAlarm (RMON)	At least one TX congestion error was counted in a 10-second interval ¹	1.3.6.1.2.1.16.0.1
fallingAlarm (RMON)	No TX congestion error was counted in a 10-second interval ²	1.3.6.1.2.1.16.0.2
dsx1LineStatusChange	E1/T1 status has changed (due to an E1/T1 alarm)	1.3.6.1.2.1.10.18.15.0.1
prtStatusChangeTrap	SFP module was removed or inserted	1.3.6.1.4.1.164.6.1.0.3
agnStatusChangeTrap	The device status has changed	1.3.6.1.4.1.164.6.1.0.2
tftpStatusChangeTrap	TFTP operation has successfully completed or has failed	1.3.6.1.4.1.164.6.1.0.1

Notes

- A falling alarm trap is sent between two rising alarm events.
- A rising alarm trap is sent between two falling alarm events.

6.3 Troubleshooting

Use the chart in [Table 6-6](#) to identify and resolve problems.

Table 6-6. Troubleshooting Chart

Fault	Probable Cause	Remedial Action
Power LED off	No power supplied to unit	<ol style="list-style-type: none"> 1. Check the power source. 2. Verify that the power cable is connected and correctly wired.
Ethernet Link LED off	<ul style="list-style-type: none"> • No Ethernet Link detected • Ethernet port in switch and RICi-4E1/T1, RICi-8E1/T1 are not in the same rate or duplex mode 	<ol style="list-style-type: none"> 1. Verify that the cable is connected and correctly wired. 2. Check switch and RICi-4E1/T1, RICi-8E1/T1 Ethernet port configurations such as negotiation, rate, and duplex mode. 3. Check events reported in the log file.
E1/T1 local or remote Sync Loss led on	No E1/T1 Link detected at the local or remote site	<ol style="list-style-type: none"> 1. Verify that the cable is connected and correctly wired. 2. Check the physical E1/T1 connection. Use loopbacks. 3. Check configuration of E1/T1 lines at local and remote sites. 4. Use Log File to check events.
No traffic flow between two units	Configuration or logical layer problems	<ol style="list-style-type: none"> 1. Use the System Interface Status screen for assistance. All active ports that show Activation-Up, should show Operation-Up. 2. Check events reported in the log file. 3. Check RICi-4E1/T1, RICi-8E1/T1 configuration and, if necessary, other RICi-4E1/T1, RICi-8E1/T1 parameters.
Partial Traffic Flow	Timing configuration is not properly set	<ol style="list-style-type: none"> 1. Check timing settings.

6.4 Testing the Unit

RICi-4E1/T1, RICi-8E1/T1 checks network integrity by running ping, trace route, or loopback tests.

Running a Ping Test

You can ping the remote IP host to check the IP connectivity.

► **To ping an IP host:**

1. Navigate to Main > Diagnostics > **Ping**.

The Ping menu appears as illustrated in see [Figure 6-10](#).

2. From the Ping menu, configure the following:
 - **Destination IP address.** IP address of the host that you intend to ping, 0.0.0.0 to 255.255.255.255.
 - **Number of frames to send.** Select **0** to send a continuous stream of frames, or 1-50 to send a specified number of frames.
3. Select **Send Ping** to start sending pings.

The results are shown in the lower scrolling message window.

4. Select **Stop Ping** to stop the ping test.

RICi-4E1/T1, RICi-8E1/T1	
<u>Main Menu>Diagnostics>Ping</u>	
1. Destination IP Address	... (0.0.0.0)
2. Number of Frames to Send [0 - 50]	... (10)
3. Send Ping	
4. Stop Ping	
Please select item from 1 to 4	
ESC-Previous menu; !-Main menu; &-Exit; ?-Help	

Figure 6-10. Ping Menu

Tracing the Route

This diagnostic utility traces the route through the network from RICi-4E1/T1, RICi-8E1/T1 to the destination host.

► **To trace a route:**

1. Navigate to Main menu>Diagnostics>**Trace Route**.
2. The Trace Route menu appears as illustrated in [Figure 6-11](#).
3. From the Trace Route menu, select **Destination IP Address** and enter the IP address of the host to which you intend to trace the route.

4. Select **Display Trace Route** to start tracing.
RICi-4E1/T1, RICi-8E1/T1 starts tracing the route displaying the IP addresses of all hop nodes.
5. Select **Stop Trace Route** to stop the tracing.

```

                                RICi-4E1/T1, RICi-8E1/T1
Main Menu>Diagnostics>Trace Route
1. Destination IP Address    ...(0.0.0.0)
2. Display Trace Route
3. Stop Trace Route

Please select item from 1 to 3
ESC-Previous menu; !-Main menu; &-Exit; ?-Help

```

Figure 6-11. Trace Route Menu

Performing a Loopback Test on E1/T1 Links

This diagnostic utility executes local loopback test on the E1/T1 links. The purpose of these loopback tests is to determine the source of a break in the data flow.

Loopbacks are not allowed on a live E1. It must be disconnected or administratively disabled before applying the loop. If not, a warning message will be displayed and the loop will not be performed.

- To execute a loopback test on the E1/T1 links:
 1. Navigate to Main menu>Diagnostics> **Loopback**.
 2. The E1 Loopback menu appears as illustrated in [Figure 6-12](#).
 3. Press <f> until the required port is reached.
 4. Select the Loopback state as follows:
 - 1 - Remote: Perform remote loopback
 - 2 - Disable: Disable loopback testing.
 5. Select **Time To Start** in seconds (0 – loop starts immediately).
 6. Select **Duration** in seconds.

```

                                RICi-4E1
Main Menu>Diagnostics>Loopback
Port                                     (1)
1. E1 Loopback State1                  > Disable
2. Time To Start (sec) [0-600]        ... (0)
3. Duration (sec) [0-3600]            ... (1000)

f-Forward
ESC-Previous menu; !-Main menu; &-Exit

```

Figure 6-12. E1 Loopback Menu

Performing Bit Error Rate Test (BERT)

You can perform a Bit Error Rate Test (BERT) to check that the E1/T1 physical layer is free of errors. RICi-4E1/T1, RICi-8E1/T1 transmits a bit pattern to another unit that provides a loopback. When the transmitting unit receives the bit pattern, it compares it to the sent bit pattern to determine the error rate.

► **To perform BERT:**

1. Navigate to the BERT menu (Main Menu > Diagnostics > **BERT**).
2. Type **f** or **b** to navigate to the E1/T1 port that you wish to test.
3. Define the pattern according to your testing requirements (see [Table 6-7](#)).
4. Select **Send BERT** and set it to **On** to start the test.

The test starts. If errors occur, **Bit Error Count** indicates how many errors.

5. If desired, select **Inject Error** to inject an error.

Indication of inject error is shown in the lower scrolling message window.

```

                                RICi-4E1/T1, RICi-8E1/T1
Main Menu > Diagnostics > BERT

Port                               (1)
Sync State                         > (Not Sync)
Bit Error Count                     (0)
1. Pattern                         > (p2E15m1)
2. Send BERT                       (Off)
3. Inject Error

ESC-Previous menu; !-Main menu; &-Exit; ?-Help

```

Figure 6-13. BERT Menu

```

                                RICi-4E1/T1, RICi-8E1/T1
Main Menu > Diagnostics > BERT

Port                               (1)
Sync State                         > (Not Sync)
Bit Error Count                     (0)
1. Pattern                         > (p2E15m1)
2. Send BERT                       (Off)
3. Inject Error

ESC-Previous menu; !-Main menu; &-Exit; ?-Help
-----

Inject Error
Inject Error

```

Figure 6-14. BERT Menu with Inject Error

Table 6-7. BERT Parameters

Parameter	Possible Values	Remarks
Port	1-Number of E1/T1 ports (4 or 8)	Index of E1/T1 port
Sync State	Not Sync Sync	Indicates if the E1/T1 port is synchronized. This parameter is read-only and cannot be configured. Note: The BERT is executed only if Sync State is Sync .
Bit Error Count	0-Number of bit errors	Indicates how many errors occurred in test. This parameter is read-only and cannot be configured
Pattern	p2E15m1 qrss p2E11m1	Specifies the bit pattern to send
Send BERT	On Off	Set to On to start the test Set to Off to stop the test.
Inject Error		Select this to inject an error into the test.

Running OAM Tests

You can use loopback or link trace to test OAM connectivity and links.

Performing OAM Loopback

This diagnostic utility verifies OAM connectivity on selected virtual Ethernet connections (flows). You can execute the loopback according to the destination address or the maintenance end point (MEP).

► To verify OAM connectivity according to the destination address:

1. Navigate to the OAM Tests Loopback menu (Main Menu > Diagnostics > **OAM Tests** > **Loopback** (see [Figure 6-15](#)).
2. Verify that **Destination Type** is set to **Destination Address**.

- Note**
- If the destination address is all 0s or the number of loopbacks to send is 0, the **Send Loopbacks** parameter does not appear in the screen.
 - The **Results** parameter appears after the loopbacks are sent.

3. Define the test parameters according to [Table 6-8](#).
4. Select **Send Loopbacks** to send the specified number of loopbacks.
The loopbacks are sent.
5. Select **Results**.
 - If you entered a Unicast MAC address (starts with 00), the Results screen appears as illustrated in [Figure 6-16](#). The result parameters are described in [Table 6-9](#).

- If you entered a Multicast MAC address:
 - The Results screen appears as illustrated in [Figure 6-17](#). The result parameters are described in [Table 6-9](#).
 - Select **Replied Addresses** to navigate to the Replied Addresses screen (see [Figure 6-18](#)).

RICi-4E1/T1, RICi-8E1/T1

Main Menu > Diagnostics > OAM Tests > Loopback

1. Flow ID[1 - 8]	... (1)
Flow Name	... (Put your string here)
2. Destination Type	(Destination Address)
3. Destination Address	... (00-11-B3-55-A6-77)
4. Number of LBs to Send[0 - 50]	... (0)
5. Send Loopbacks	
6. Results	>

Please select item <1 to 4>
 F-Forward; B-Backward
 ESC-Previous menu; !-Main menu; &-Exit; ?-Help

Figure 6-15. Loopback Menu – Destination Address

Table 6-8. Loopback Parameters – Destination Address

Parameter	Possible Values	Remarks
Flow ID	1 – 8	The ID of the virtual Ethernet connection.
Flow Name		The name of the virtual Ethernet connection you chose. <i>Note: This parameter is read-only and cannot be configured.</i>
Destination Type	Destination Address Remote MEP ID	The destination type for the loopback Default: Destination Address
Destination Address		The MAC address of the destination device
Number of LBs to Send	0 – 50	The number of loopbacks. Default: 0

```

RICi-4E1/T1, RICi-8E1/T1
Main Menu > Diagnostics > OAM Tests > Loopback > Results

Local MEP ID[1 - 8]          ... (1)
Flow Name                   ... (Put your string here)
Destination Address         ... (00-11-B3-55-A6-77)
Messages Sent               ... (14)
Replies In-Order            ... (14)
Replies Out-of-Order        ... (0)
Messages Lost/Timed out     ... (0)
Messages Lost/Timed out %   ... (0)

>
ESC-Previous menu; !-Main menu; &-Exit; ?-Help

```

Figure 6-16. Loopback Results Menu, Unicast MAC Address

```

RICi-4E1/T1, RICi-8E1/T1
Main Menu > Diagnostics > OAM Tests > Loopback > Results

Local MEP ID[1 - 8]          ... (1)
Flow Name                   ... (Put your string here)
Destination Address         ... (01-C2-44-D5-66-7F)
Replied MEPs                ... (1)
1. Replied Addresses         []

>
ESC-Previous menu; !-Main menu; &-Exit; ?-Help

```

Figure 6-17. Loopback Results Menu, Multicast MAC Address

```

RICi-4E1/T1, RICi-8E1/T1
Main Menu> Diagnostics > OAM Tests > Loopback > Results > Replied Addresses

MAC Address      Known as Rem. ID
01-C2-44-D5-66-7F      2

>
ESC-Previous menu; !-Main menu; &-Exit; ?-Help

```

Figure 6-18. Loopback Replied Addresses Menu, Multicast MAC Address

Table 6-9. Loopback Result Parameters

Parameter	Possible Values	Remarks
Local MEP ID ID	1 - 8	The ID of the virtual Ethernet connection.
Flow Name		The name of the virtual Ethernet connection you chose. <i>Note: This parameter is read-only.</i>
Destination Address		The MAC address of the destination device

Parameter	Possible Values	Remarks
Result Parameters for Unicast MAC Address		
Replies In-Order		How many replies were received that were in order.
Replies Out-of-Order		How many replies were received that were out of order.
Messages Lost/Timed out		The number of messages that were lost or timed out
Messages Lost/Timed out %		The percentage of messages that were lost or timed out
Result Parameters for Multicast MAC Address		
Replied MEPs		How many MEPs replied to loopback
MAC Address		MAC address that sent reply to loopback
Known as Rem. Id		Remote MEP ID that corresponds to the replying MAC address

➤ **To verify OAM connectivity according to the Remote MEP IDs:**

1. In the OAM Tests Loopback menu, set **Destination Type** to **Remote MEP ID**.

Remote MEP parameters appear as illustrated in *Figure 6-19*.

Note *If the number of loopbacks to send is 0, the **Send Loopbacks** parameter does not appear in the screen.*

2. Define the test parameters according to *Table 6-10*.
3. Select **Send Loopbacks** to send the specified number of loopbacks.
The loopbacks are sent.
4. Select **Results**. The result parameters are described in *Table 6-9*.

RICi-4E1/T1, RICi-8E1/T1

Main Menu > Diagnostics > OAM Tests > Loopback

1. Flow ID[1 - 8]	... (1)
Flow Name	... (No such flow)
2. Destination Type	(Remote MEP ID)
3. Remote MEP ID[1 - 8191]	... (0)
Remote MEP Address	... (00-00-00-00-00-00)
4. Number of LBs to Send[0 - 50]	... (0)
5. Send Loopbacks	
6. Results	>

Please select item <1 to 4>
F-Forward; B-Backward
ESC-Previous menu; !-Main menu; &-Exit; ?-Help

Figure 6-19. Loopback Menu – Remote MEP ID

Table 6-10. Loopback Parameters – Remote MEP ID

Parameter	Possible Values	Remarks
Flow ID	1 – 8	The ID of the virtual Ethernet connection.
Flow Name		The name of the virtual Ethernet connection you chose. <i>Note: This parameter is read-only.</i>
Destination Type	Destination Address Remote MEP ID	The destination type for the loopback Default: Destination Address
Remote MEP ID	1 – 8191	ID of the remote maintenance endpoint, terminating the maintenance entity. It must be different from the local MEP ID and unique for the maintenance domain. If set to 0, no maintenance end point (MEP) is assigned. Default: 0
Remote MEP Address		The MAC address of the device assigned as media point at the remote location. <i>Note: This parameter is read-only. It is automatically updated by the system when you enter a valid remote MEP ID.</i>
Number of LBs to Send	0 – 50	The number of loopbacks to send. Default: 0

Performing OAM Link Trace

This diagnostic utility traces the OAM route to the destination, specified either by the MAC address or the maintenance end point (MEP). You can use maintenance end point (MEP) specification only in standard OAM mode.

► To trace OAM route according to the target MAC address:

1. From the OAM Tests menu (Main Menu > Diagnostics > **OAM Tests**), select **Link Trace**.

The Link Trace menu appears (see [Figure 6-20](#)).

2. Verify that **Destination Type** is set to **Target MAC Address**.

Note *If the target MAC address is all 0s, the **Send Link Trace** parameter does not appear in the screen.*

3. Define the test parameters according to [Table 6-11](#).
4. Select **Send Link Trace** to perform the link trace.
5. Select **Results** to view the results of the link trace, as illustrated in [Figure 6-21](#).

```

RICi-4E1/T1, RICi-8E1/T1
Main Menu > Diagnostics > OAM Tests > Link Trace

1. Flow ID[1 - 8]                ... (1)
   Flow Name                    ... (Put your string here)
2. Destination Type              (Target MAC Address)
3. Target MAC Address            ... (00-00-00-00-00-00)
4. TTL[1 - 64]                  ... (64)
5. Send Link Trace
6. Results                      []

Please select item <1 to 4>
F-Forward; B-Backward
ESC-Previous menu; !-Main menu; &-Exit; ?-Help

```

Figure 6-20. Link Trace Menu – Target MAC Address

Table 6-11. Link Trace Parameters – Target MAC Address

Parameter	Possible Values	Remarks
Flow ID	1 – 8	The ID of the virtual Ethernet connection.
Flow Name		The name of the virtual Ethernet connection you chose. <i>Note: This parameter is read-only.</i>
Destination Type	Target MAC Address Target MEP ID	The destination type for the link trace Default: Target MAC Address
Target MAC Address		The target MAC address of the link trace
TTL	1-64	This is used to limit the number of hops to 64. The first unit to initiate the trace sets this to 64, then each unit in the trace decrements it.. Default: 64

```

RICi-4E1/T1, RICi-8E1/T1
Main Menu > Diagnostics > OAM Tests > Link Trace > Results

HOP  MAC Address  ING/EGR Action  Port ID  Relay Action
1    0020C0010203  IngOK          MLPPP 1    RlyHit
1    0020C0010203  EgrOK          MLPPP 1    RlyHit
2    0020C0010608  IngOK          MLPPP 1    RlyHit
2    0020C0010608  EgrOK          MLPPP 1    RlyHit

ESC-Previous menu; !-Main menu; &-Exit; ?-Help

```

Figure 6-21. Link Trace Results

- To trace OAM route according to the target MEP ID:
 1. In the OAM Tests Link Trace menu, set **Destination Type** to **Target MEP ID**.
MEP parameters appear as illustrated in [Figure 6-22](#).

Note If the target MEP address is all 0s, the **Send Link Trace** parameter does not appear in the screen.

2. Define the test parameters according to [Table 6-12](#).
3. Select **Send Link Trace** to perform the link trace.
4. Select **Results** to view the result of the link trace, as illustrated in [Figure 6-21](#).

```

RICi-4E1/T1, RICi-8E1/T1
Main Menu > Diagnostics > OAM Tests > Link Trace

1. Flow ID[1 - 8]                ... (1)
   Flow Name                    ... (Put your string here)
2. Destination Type              (Target MEP ID)
3. Target MEP ID[1 - 8191]       ... (0)
   Target MEP Address            ... (00-00-00-00-00-00)
4. TTL[1 - 64]                  ... (64)
5. Send Link Trace
6. Results                       []

Please select item <1 to 5>
F-Forward; B-Backward
ESC-Previous menu; !-Main menu; &-Exit; ?-Help

```

Figure 6-22. Link Trace Menu – Target MEP ID

Table 6-12. Link Trace Parameters – Target MEP ID

Parameter	Possible Values	Remarks
Flow ID	1 – 8	The ID of the virtual Ethernet connection.
Flow Name		The name of the virtual Ethernet connection you chose. Note: This parameter is read-only and cannot be configured.
Destination Type	Target MAC Address Target MEP ID	The destination type for the link trace Default: Target MAC Address
Target MEP ID		ID of the remote maintenance endpoint, terminating the maintenance entity. It must be different from the local MEP ID and unique for the maintenance domain. If set to 0 , no maintenance end point (MEP) is assigned. Default: 0
Target MEP Address		The MAC address of the device assigned as media point at the target location. Note: This parameter is read-only. It is automatically updated by the system when you enter a valid target MEP ID.
TTL	1–64	This is used to limit the number of hops to 64. The first unit to initiate the trace sets this to 64, then each unit in the trace decrements it.. Default: 64

6.5 Technical Support

Technical support for this product can be obtained from the local distributor from whom it was purchased.

For further information, please contact the RAD distributor nearest you or one of RAD's offices worldwide. This information can be found at www.rad.com. (Offices – About RAD > Worldwide Offices; Distributors – Where to Buy > End Users).

Appendix A

Connector Wiring

A.1 Ethernet Connector

The 10/100BaseT Ethernet electrical interface is an 8-pin RJ-45 connector, wired in accordance with [Table A-1](#).

Table A-1. 10/100BaseT Ethernet Connector Pinouts

Pin	Function
1	Tx+
2	Tx-
3	Rx+
4, 5	-
6	Rx-
7, 8	-

A.2 E1/T1 Connector

The E1 or T1 electrical interface is an 8-pin RJ-45 connector, wired in accordance with [Table A-2](#).

Table A-2. E1 or T1 Connector Pinouts

Pin	Function
1	Rx+
2	Rx-
3	NC
4	Tx+
5	Tx-
6	NC
7	NC
8	NC

Note *Do not connect wires to the NC pins.*

A.3 Control Connector

The control terminal interface terminates in a V.24/RS-232 9-pin D-type female DCE connector. [Table A-3](#) lists the control connector pin assignments.

Table A-3. CONTROL Connector Pinout

Pin	Function
1	Data Carrier Detect (DCD)
2	Receive Data (RD)
3	Transmit Data (TD)
4	Data Terminal Ready (DTR)
5	Ground (GND)
6	Data Set Ready (DSR)
7	Request to Send (RTS)
8	Clear to Send (CTS)
9	Ring Indication (RI)

Appendix B

Boot Sequence and Downloading Software

This appendix provides a description of the RICi-4E1/T1, RICi-8E1/T1 boot procedure via an ASCII terminal for downloading software.

The RICi-4E1/T1, RICi-8E1/T1 software is stored in flash memory in two sections, in the boot sector and in the file system. The boot sector holds a boot program that calls up the rest of the program from the file system.

The file system can hold two compressed copies of the RICi-4E1/T1, RICi-8E1/T1 code. One copy is called the operating file, and the other is called the backup file. The operating file is the default-executable RICi-4E1/T1, RICi-8E1/T1 code. The backup file is used whenever the operating file is absent or corrupted.

B.1 Booting RICi-4E1/T1, RICi-8E1/T1

RICi-4E1/T1, RICi-8E1/T1 boots up automatically. After powering up, no user intervention is required, except when the user wants to access the file system to modify or update the software or the RICi-4E1/T1, RICi-8E1/T1 configuration.

Accessing the Boot Manager

The Boot Manager menu is an option that allows the user to perform basic file transfer operations. These operations are all optional.

- To access the Boot Manager menu:
 - Press <Enter> several times immediately after starting RICi-4E1/T1, RICi-8E1/T1.

The Boot Manager menu is displayed as illustrated in *Figure B-1*.

```
RICi-4E1/T1, RICi-8E1/T1 Boot Version 1.00 (Jan 20 2005)
Boot manager version 7.02 (Jan 20 2005)

0 - Exit Boot-Manager
1 - Dir
2 - Set Active Software Copy
3 - Delete Software Copy
4 - Download an Application by XMODEM
5 - Format flash
6 - Show basic hardware information
7 - Reset board
8 - System Configuration.
9 - Download an Application by TFTP
Press the ESC key to return to the Main Menu.
Select:
```

Figure B-1. Typical Boot Manager Menu

From the Boot Manager menu, you can do the following:

- Listing all files stored in the flash memory
- Exchanging the operating and backup files
- Deleting the operating file; the backup file becomes the operating file
- Downloading a new operating file via XMODEM; the previous operating file is saved as the backup file
- Deleting all software and configuration files
- Displaying the basic hardware information (RAM, ROM size etc)
- Resetting the RICi-4E1/T1, RICi-8E1/T1 board
- Configuring the RICi-4E1/T1, RICi-8E1/T1 IP address, IP mask, and default gateway for the consecutive file download via TFTP.

If you choose to exchange or delete a file, you are prompted for confirmation.

B.2 Transferring the Software and Configuration Files

New software releases are distributed as separate files, which are downloaded to RICi-4E1/T1, RICi-8E1/T1 using the XMODEM protocol or TFTP from the Boot Manager menu. Alternatively, you can download a new software release via TFTP, when the RICi-4E1/T1, RICi-8E1/T1 management software is already running (**Main menu > Utilities > File Transfer**).

The TFTP protocol can also be used for uploading configuration files that contain the RICi-4E1/T1, RICi-8E1/T1 databases to the management station. When RICi-4E1/T1, RICi-8E1/T1 is running, administrators can use this capability to distribute verified configuration files to all other units that use the similar configuration.

Downloading Application Files via XMODEM

Downloading application files using the XMODEM protocol is performed from the Boot Manager menu.

➤ **To download an application file via XMODEM:**

1. Configure your ASCII terminal or terminal emulation utility running on your PC to the 115.2 kbps data rate.
2. Access the Boot Manager menu.

The Boot Manager menu appears as illustrated in *Figure B-1*.

3. From the Boot Manager menu, select **Download Files or an Application by XMODEM**.

RICi-4E1/T1, RICi-8E1/T1 displays the following message:
Select Copy number for download (0)

4. Select the backup partition by typing its number, **0** or **1**.

RICi-4E1/T1, RICi-8E1/T1 responds with the following string:
Please start the XMODEM download.

5. Send the software release file to RICi-4E1/T1, RICi-8E1/T1 using the XMODEM utility of your terminal application.

Once the downloading is completed, RICi-4E1/T1, RICi-8E1/T1 saves the new release as an active partition, the former active partition turns into backup, and the boot sequence continues normally.

If a failure occurs during the download, the partially downloaded software is erased. In this case, only active software is left in the flash memory.

Downloading Application Files via TFTP

➤ To download application file via TFTP

1. From the Boot Manager menu, select **System Configuration**.
2. Configure the IP parameters of RICi-4E1/T1, RICi-8E1/T1 (IP address, IP mask, and default gateway). These parameters are valid only for the TFTP file transfer via the Boot Manager.
3. Start a TFTP application.
4. Configure the TFTP communication parameters as follows:
 - Connection timeout – more than 30 seconds to prevent an automatic disconnection while deleting the backup partition, which takes about 25 seconds.
 - Block size – 512 bytes.
 - UDP port – 69.
5. Select a local software release file to download.
6. Enter the TFTP server IP address.
7. Start downloading.

RICi-4E1/T1, RICi-8E1/T1 automatically erases the backup partition (it takes about 25 seconds). Once the downloading is completed, the RICi-4E1/T1, RICi-8E1/T1 unit saves the new release as an active partition; the previously active partition becomes a backup.

Appendix C

Operation, Administration, and Maintenance (OAM)

This appendix describes the Ethernet OAM functionality of RICi-4E1/T1, RICi-8E1/T1.

C.1 Introduction

Currently RICi-4E1/T1, RICi-8E1/T1 support pre-standard implementation of Ethernet OAM based on Y.1731 and standard implementation based on Y.1731 and IEEE P802.1ag. The pre-standard implementation is used only for performance measurements when using two RAD units working opposite each other or when working opposite a RAD device with an older version of RAD Ethernet OAM. This appendix describes the pre-standard implementation. The standard implementation can be found in Y.1731 and IEEE P802.1ag.

RICi-4E1/T1, RICi-8E1/T1 have the following capabilities for providing operation, administration, and maintenance (OAM) in packet-switched networks:

- Continuity check
- Non-intrusive loopback which used to detect loss of bidirectional continuity
- Performance measurements (per service).

[Table C-1](#) lists the Ethernet OAM-related terms used in this appendix.

Table C-1. Ethernet OAM Terminology

Term	Description
UNI	User Network Interface. The physical demarcation point between the responsibility of the Service Provider and the responsibility of the Subscriber
UNI_C	Customer side of a UNI link
UNI_N	Network side of a UNI link
Service frame	An Ethernet frame transmitted across the UNI toward the Service Provider or an Ethernet frame transmitted across the UNI toward the Subscriber.

Term	Description
Flow	Ethernet Virtual Connection : An association of two or more UNIs that limits the exchange of Service Frames to UNIs in the Ethernet Virtual Connection
Point-to-point Flow	Flow connecting exactly two UNIs
Multipoint-to-Multipoint Flow	Flow connecting two or more UNIs
Service Instance / Class of service (CoS)	A set of Service Frames that have a commitment from the Service Provider to receive a particular level of performance
Service Instance Identifier (CoS ID)	Service Frame delivery performance is specified for all Service Frames transported within a flow with a particular Class of Service instance. The Class of Service instance is identified by a Class of Service Identifier associated with each Service Frame (Class of service can be identified by more than one parameter/frame attribute)
MEP	Proactive OAM reference point which is capable to initiate and terminate proactive OAM frames. MEP is also capable to initiate and react to diagnostics OAM frames.
MIP	A provisioned OAM reference point which is capable to respond to diagnostics OAM frames initiated by the MEP.
MEP Service Instance Source	The receiver of OAM frames in each Service Instance
MEP Service Instance Destination	The transmitter of OAM frames in each Service Instance

C.2 Reference Architecture

Figure C-1 illustrates two OAM flows:

- OAM flow originating from the CPE
The CPE-to-CPE OAM flow is transferred transparently by RICi-4E1/T1, RICi-8E1/T1 and treated as data.
- OAM flow originating from the RICi-4E1/T1, RICi-8E1/T1 devices.
The RICi-4E1/T1, RICi-8E1/T1 OAM flow runs on a data flow on the same VLAN.
The RICi-4E1/T1, RICi-8E1/T1 units terminate the OAM flow and can be referred as a Maintenance Entity (ME). Each device supports up to eight such MEs. In this case, the RICi-4E1/T1, RICi-8E1/T1 units act as MEPs (Maintenance End-Points) and not as MIPs (Maintenance Intermediate Points), and all measurements are performed on the UNI_N to UNI_N segment.

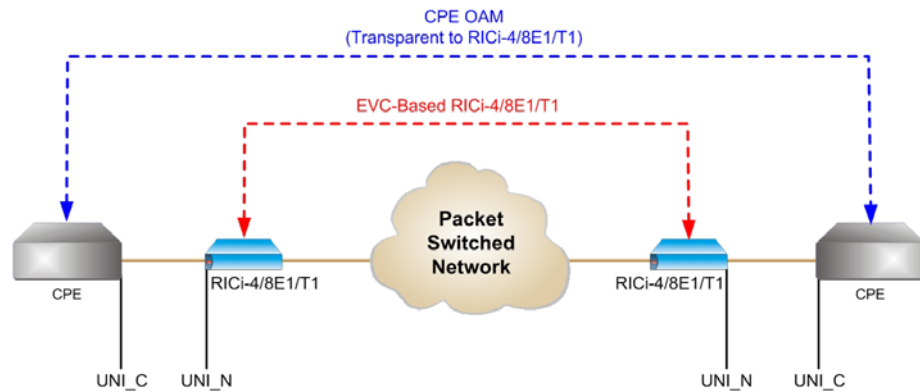


Figure C-1. OAM Architecture

Handling of OAM Levels

UNI_C to UNI_N Direction

In the UNI_C to UNI_N direction RICi-4E1/T1, RICi-8E1/T1 block all OAM messages with OAM level greater than 2. Messages with other OAM levels are passed transparently.

Network Ingress to UNI_N Direction

All OAM messages coming from the network ingress with the ETX MAC address or with the special OAM multicast address are sent to the CPU. All other OAM messages are passed transparently to the user ports as per the respective flow definition.

C.3 OAM Entities

This section describes the OAM entities hierarchy. [Figure C-2](#) illustrates the relationship between UNI, flow, and Service Instance (COS ID), when one or more service instances belong to one flow and one or more flows belong to a UNI. From the OAM perspective, the continuity messages and defects are activated per flow, and the PM is activated per service instance.

Note A flow can belong only to one UNI in the same RICi-4E1/T1, RICi-8E1/T1.

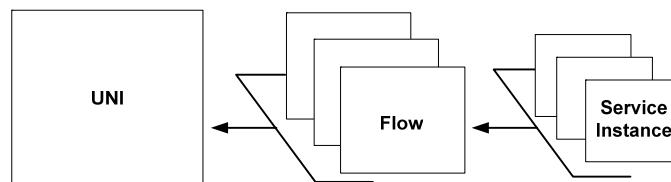


Figure C-2. UNI, Flow, and Service Instance (COS ID)

[Figure C-3](#), [Figure C-4](#), and [Figure C-5](#) illustrate different combinations of UNIs, flows, and service instances. Each UNI contains at least one flow, which contains at least one service instance.

- In case of one flow per UNI (*Figure C-3*), the PM and CC are transmitted once.

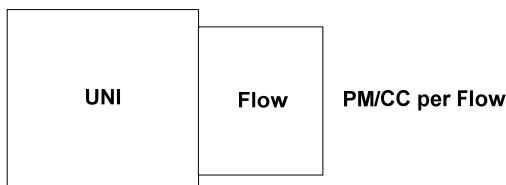


Figure C-3. One Flow per UNI

- In case of multiple flows per UNI (*Figure C-4*), PM and CC are transmitted three times.

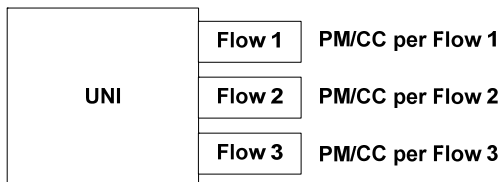


Figure C-4. Multiple Flows per UNI

- In case of one flow and multiple CoS (Service Instances) per UNI (*Figure C-5*), the PM is transmitted three times and the CC is transmitted once.

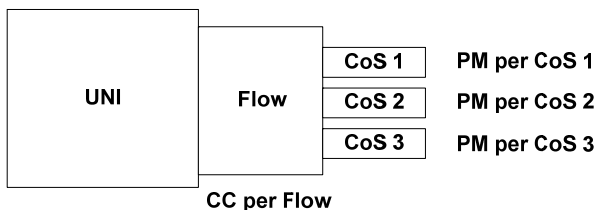


Figure C-5. One Flow and Multiple CoS (Service Instances) per UNI

C.4 OAM Flows

Figure C-6 illustrates a typical OAM traffic flow. The OAM message is transmitted from the source MEP 1 to the destination MEP 2 and the reply is transmitted back. The source is also a destination for messages from the other direction.

The OAM interval is one second, so each NTU transmits one request and one reply and receives one request and one reply. A total of four messages are transmitted per second per service instance.

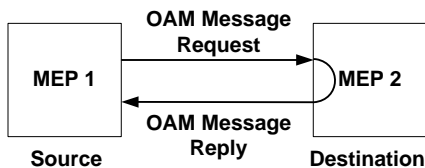


Figure C-6. OAM Flow

OAM Messages Addressing

The OAM defines two modes of addressing, unicast and multicast. Unicast addressing is used for point-to-point connections, while multicast addressing is used in cases where the MAC address of the destination MEP is not known. Currently RICI-4E1/T1, RICI-8E1/T1 supports point-to-point flows only.

OAM Message Association

On the receiver side the OAM frame is associated with a flow and a service.

Flow Association

When an OAM frame is associated with a flow, the following steps are performed:

- Request message reception

When a request message is received, the VLAN is extracted to find the Flow ID. The Flow ID found at the receiver is compared against the Flow ID in the frame. If the IDs are equal, further service association is made. If it is not found, the "Flow ID no match" notification is returned in the reply message.

- Reply message reception

When a reply message is received, the VLAN is extracted to find the Flow ID. The Flow ID found at the receiver is compared against the Flow ID in the frame. If the IDs are equal, further service association is made. If it is not found, the frame is discarded and connectivity alarm is issued.

Service Association

When an OAM frame is associated with a service, the following steps are performed:

- Request message reception

The class of service characteristics are extracted from the frame and must be matched to an entry in the flows <-> services table at the receiver. If they are matched, the frame is processed. If not, the service ID is returned with the "Not Found" notification.

- Reply message reception

The class of service characteristics are extracted from the frame and must be matched to an entry in the flow <-> services table at the receiver. If they are matched, the frame is processed. If not, the frame is discarded.

Ethernet Loopback (ETH-LB)

The ETH-LB can be used to verify connectivity. The ETH-LB is performed by sending a request ETH-LB message to the remote unit and expecting an ETH-LB reply message back to verify connectivity. When the insertion rate of ETH-LB messages is much slower compared to data rate between the flow points, ETH-LB is suitable to perform in-service connectivity verification and to measure round trip delays.

The message is initiated by the local device and runs periodically making it suitable for fault detection.

Unicast ETH-LB request message is sent from a MEP to a specific MEP (remote device). The DA of the request message is a unicast MAC address of destination device. Upon receipt of the request message, the MEP responds with unicast ETH-LB reply message. The DA of the reply message is a unicast MAC address of requesting device, learned from request message.

Continuity Check (ETH-CC)

Ethernet Continuity Check (ETH-CC) can be used to detect continuity failures across flows between a given pair of edge service point on a flow. Continuity failures are caused by:

- Major failures (link failure, device failure, network path failure etc)
- Minor failures (software failure, memory corruption, incorrect configuration etc).

The ETH-CC signal is generated by one MEP. Upon receipt of the first ETH-CC signal from a sending MEP, the receiving MEP detects continuity with sending MEP and expects to receive further periodic ETH-CC signals. Once the receiving MEP stops receiving periodic ETH-CC signals from sending MEP, it declares continuity failure. The MEP that detects the continuity failure notifies the operator by sending an alarm or a trap.

OAM Procedures

This section discusses the continuity check (CC) and the performance measurement (PM) procedures.

Continuity Check Procedure

The loopback message and the ETH-CC messages are used for continuity check. In case the services are defined and PM collection is enabled, they are also used to carry PM messages. If PM collection is disabled, the messages are used for continuity check only.

If the RX CC mode of the receiver is configured to CC-based, the continuity detection is based on ETH-CC. If the mode is set to LB-based, the continuity detection is based on ETH-LB. If the mode is disabled, the continuity detection is not performed.

ETH-LB Method

The ETH-LB method includes the following elements:

- Unicast ETH-LB transmission
Unicast ETH-LB request message is transmitted by a MEP (RICi-4E1/T1, RICi-8E1/T1) every second. The transmitted Transaction Identifier is retained for at least five seconds after the unicast ETH-LB signal is transmitted. The Transaction Identifier must be changed for every unicast ETH-LB message, and no Transaction Identifier from the same MEP is allowed to be repeated within 1 minute.

- Unicast ETH-LB reception and reply transmission

Whenever a valid unicast ETH-LB request message is received by a MEP (RICi-4E1/T1, RICi-8E1/T1), a unicast ETH-LB reply message is generated and transmitted to the requesting MEP. Every field in the unicast ETH-LB request message is copied to the unicast ETH-LB reply message with the following exceptions:

- The source and destination MAC addresses are swapped
- The OpCode field is vendor-specific 0xFE
- The Flow and MEP ID are processed as follows: if the Flow/MEP ID do not exist in the device, it changes them to "No Match" otherwise they are left intact.

- Unicast ETH-LB reply receipt

When a unicast ETH-LB reply message is received by a MEP (RICi-4E1/T1, RICi-8E1/T1) diagnostic flow termination function, it examines the TLVs returned in the unicast ETH-LB reply message. The signal is declared invalid if the TLVs do not match those sent in the corresponding unicast ETH-LB request signal, including MEP ID and Flow ID.

- Continuity declarations

Loss of Continuity and Connectivity Mismatch states are declared by the ETH-LB mechanism.

- Loss of continuity declaration

After the source device sends an ETH-LB message a timer is set with a 3.52 second timeout. If the destination device does send reply within the timeout, the source enters the loss of continuity state. Upon reply from the destination, the source resets the timer to 23.5 seconds. Regarding the continuity check message, the source checks only the Flow ID with the MEP ID. When the source enters the loss of continuity state, it adds 24 to Unavailable Seconds counter. The 23.5 second period is calculated as a sliding window.

Loss of continuity state is cleared after 3.52 seconds with at least 21 reply messages from the destination. In this case the Unavailable Seconds counter is decremented by 24.

- Connectivity mismatch declaration

If the source Flow ID is not equal to the destination Flow ID as recorded in the reply message for 10 consecutive times, the source enters in to misconnection state.

Misconnection state is cleared after 10 consecutive reply messages with the correct flow name from the destination.

The Unavailable counter is maintained by the service according to the number of PM messages that did not receive replies. If a mismatch notification is received to the LB request, the frame is dropped and reply message is not sent. This is why the service becomes unavailable (no reply) in case of mismatch and the unavailable counter is raised.

ETH-CC Method

The ETH-CC method includes the following elements:

- ETH-CC transmission

Unicast ETH-CC request message is transmitted by a MEP (RICi-4E1/T1, RICi-8E1/T1) every 1 second. The transmitted Transaction Identifier is retained for at least 5 seconds after the unicast ETH-CC signal is transmitted. The Transaction Identifier must be changed for every Unicast ETH-CC message, and no Transaction Identifier from the same MEP is allowed to be repeated within 1 minute.

- Unicast ETH-CC reply receipt

When a unicast ETH-CC message is received by a MEP (RICi-4E1/T1, RICi-8E1/T1) diagnostic flow termination function, it examines the TLVs returned in the unicast ETH-CC message, and declares the signal invalid if the TLVs do not match those sent in the corresponding exiting MEP ID and Flow ID.

- Continuity declarations

Loss of Continuity and Connectivity Mismatch states are declared by the ETH-CC mechanism.

- Loss of continuity declaration

When the MEP receives the ETH-CC message a timer is set with a 3.5 seconds timeout. If the source does send another message during this period, the destination enters the loss of continuity state. Upon receipt of the ETH-CC message, the destination resets the timer to 3.5 seconds. Regarding the continuity check message, the destination check the Flow ID and the MEP ID. When the destination enters the loss of continuity state, it adds 4 to the Unavailable Seconds counter. The 3.5 second period is calculated as a sliding window.

Loss of continuity state is cleared after 3.5 seconds with at least 2 messages from the source. In this case the Unavailable Seconds counter is decreased by 4.

- Connectivity mismatch declaration

If the source Flow ID is not equal to the destination Flow ID for 10 consecutive times, the destination enters in to misconnection state.

Misconnection state is cleared after 10 consecutive reply messages with the correct flow name from the source.

The Unavailable counter is maintained by the service according to the number of PM messages that did not receive replies. If a mismatch notification is received to the LB request, the frame is dropped and reply message is not sent. This is why the service becomes unavailable (no reply) in case of mismatch and the unavailable counter is raised.

Performance Measurement

RICi-4E1/T1, RICi-8E1/T1 measure performance in 15-minute intervals. The units also store performance history data for the last 24 hours (96 intervals). [Table C-2](#) lists the PM counters supported by RICi-4E1/T1, RICi-8E1/T1.

Table C-2. Performance Measurement Counters

Parameter	Description
Frames Above Delay Obj.	Number of frames that exceeded delay objective
Frames Below Delay Obj.	Number of frames below or equal delay objective
Frames Above DV Obj.	Number of frames that exceeded delay variation objective
Frames Below DV Obj.	Number of frames below or equal delay variation objective
Frames Transmitted	Total number of OAM frames transmitted in the current interval
Frames Lost	Number of frames lost in the current interval
Unavailable Seconds	Number of seconds during which the service was unavailable in the current interval
Elapsed Time	Time (in seconds) elapsed from beginning of the interval 0–900
Min. RT Delay	Minimum round trip delay (in mseconds) calculated in the interval (or up to elapsed time in current interval)
Avg. RT Delay	Average round trip delay (in mseconds) calculated in the interval (or up to elapsed time in current interval)
Max. RT Delay	Maximum round trip delay (in mseconds) calculated in the interval (or up to elapsed time in current interval)
Avg. DV	Average delay variation (in mseconds) calculated in the interval (or up to elapsed time in current interval)
Max. DV	Maximum delay variation (in mseconds) calculated in the interval (or up to elapsed time in current interval)
OAM Transmitted Frames Counter	Total number of OAM frames transmitted since the service was enabled
OAM Frames Loss Counter	Total number of OAM frames lost since the service was enabled
OAM Frame Loss Ratio	Total number of lost OAM frames divided by total number of transmitted OAM frames since the service was enabled
Elapsed Time	Time (in seconds) elapsed since the service was enabled
Unavailable Seconds	Total number of unavailable seconds since the service was enabled
Unavailability Ratio	Total number of unavailable seconds divided by elapsed time

C.5 RMON Statistics

In addition to the regular statistics collection, RICI-4E1/T1, RICI-8E1/T1 supports proactive SLA measurements per RICI-4E1/T1, RICI-8E1/T1 port, as per RMON-based RFC 2819. The device sends reports when one of the available counters (physical layer or OAM) rises above or drops below the set thresholds within the specified sampling period of time. These reports can be sent as SNMP traps to the defined network management stations or be written to the event log.

The following counters can be monitored:

- Dropped Frames
- Undersize Frames
- Oversize Frames
- Fragmented Frames
- Jabbers
- Frame Loss Ratio
- Frames Above Delay
- Frames Above Delay Variation
- Unavailability Ratio.

AC/DC Adapter (AD) Plug

for DC Power Supply Connection

Note *Ignore this supplement if the unit is AC-powered.*

Certain units are equipped with a wide-range AC/DC power supply. These units are equipped with a standard AC-type 3-prong power input connector located on the unit rear panel. This power input connector can be used for both AC and DC voltage inputs.

For DC operation, a compatible straight or 90-degree AC/DC Adapter (AD) plug for attaching to your DC power supply cable is supplied with your RAD product (see [Figure 1](#) and [Figure 2](#)).

Connect the wires of your DC power supply cable to the AD plug, according to the voltage polarity and assembly instructions provided on [page 2](#).



Figure 1. Straight AD Plug



Figure 2. 90-Degree AD Plug

Caution Prepare all connections to the AD plug **before** inserting it into the unit's power connector.

➤ To prepare the AD plug and connect it to the DC power supply cable:

1. Loosen the cover screw on the bottom of the AD plug to open it (see [Figure 3](#)).
2. Run your DC power supply cable through the removable cable guard and through the open cable clamp.
3. Place each DC wire lead into the appropriate AD plug wire terminal according to the voltage polarity mapping shown. Afterwards, tighten the terminal screws closely.
4. Fit the cable guard in its slot and then close the clamp over the cable. Tighten the clamp screws to secure the cable.
5. Reassemble the two halves of the AD plug and tighten the cover screw.
6. Connect the assembled power supply cable to the unit.

Note: You have to flip over the non-90-degree AD plug type by 180 degrees to insert it into the unit. After inserting it, verify that the blue (negative) wire is connected to the POWER and the brown (positive) wire is connected to the RETURN.

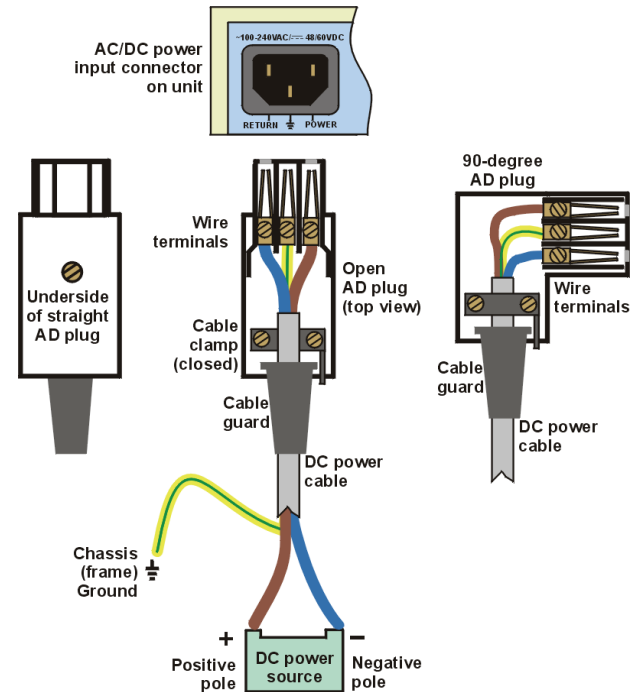



Figure 3. AD Plug Details



Warning

- Reversing the wire voltage polarity will not cause damage to the unit, but the internal protection fuse will not function.
- Always connect a ground wire to the AD plug's chassis (frame) ground terminal. Connecting the unit without a protective ground, or interrupting the grounding (for example, by using an extension power cord without a grounding conductor) can damage the unit or the equipment connected to it!
- The AD adapter is not intended for field wiring.



Publication No. 456-200-07/14

Order this publication by Catalog No. 803740

International Headquarters

24 Raoul Wallenberg Street
Tel Aviv 69719, Israel
Tel. 972-3-6458181
Fax 972-3-6498250, 6474436
E-mail market@rad.com

North America Headquarters

900 Corporate Drive
Mahwah, NJ 07430, USA
Tel. 201-5291100
Toll free 1-800-4447234
Fax 201-5295777
E-mail market@radusa.com

www.rad.com

